

SYNCO XTALK X2 Wireless Intercom Headset System



Contents [[hide](#)]

[1 Regarding Support](#)

[2 Regarding Easy Go Firmware And Pairing](#)

[3 Additional Topics](#)

[4 Documents / Resources](#)

[4.1 References](#)

Regarding Support

Q1: How to contact SYNCO for after-sales support?

- For missing parts, technical issues, or warranty claims, email SYNCO Official Support at support@syncoaudio.com with your order ID and details.

Regarding Easy Go Firmware And Pairing

Q1: Where to Download Easy Go Firmware

- Easy Go firmware for Windows and macOS can be downloaded via the official SYNCO website: <https://www.syncoaudio.com/pages/synco-xtalk-easygo>.

Q2: What Issues Does Easy Go Firmware Upgrade Solve?

- **One-Tap Pairing:** Quickly recognizes and connects individual XTALK devices for effortless operation.
- **Upgrade to Low-Latency Version:** Optimizes audio synchronization for real-time communication.
- **Cross-Model Pairing:** Enables interoperability across SYNCO XTALK series(X/X Pro/X Max).

Precautions for Easy Go Firmware Upgrade:

- If the headset fails to connect, please try reversing the Type-C connector on the headset end.
- To connect X Max to Easy Go, ensure the headset is in INTERCOM MODE.

Additional Topics

Q1: Why doesn't the XTALK pair automatically when powered on?

- To ensure a successful auto-reconnect, please turn on the headsets in the sequence of Master → Level 1 → Level 2.
- **Default Master** : Red-labeled headset.
- **Level 1:** Blue-labeled headset with LV.1 sticker.
- **Level 2:** Green-labeled headset with LV.1 sticker.

Q2: How many Level 1 headset can Master headset connect to at most?

- A Master can connect up to 4 Level 1, and a Level 1 can connect up to 2 Level 2.

Q3: Can Level 2 connect directly to the Master headset?

- The Level 2 must be paired with the Level 1 before it can connect to the Master. They cannot directly pair for communication.

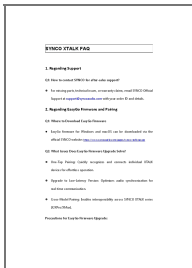
Q4: How to reconnect if the XTALK headset suddenly disconnects?

- If disconnected, please return to the pairing range with the upper-level headset for automatic reconnection.

Q5: How to fix unstable signals caused by nearby electronic devices?

- Enable Boost Mode to enhance signal strength and stability.
- Long press Volume– to switch between Mode 1/2/3.

Documents / Resources

	<p>SYNCO XTALK X2 Wireless Intercom Headset System [pdf] User Guide B0DJ25D8XG, B0CQM4FKL3, B0CZDFQ78J, XTALK X2 Wireless Intercom Headset System, XTALK X2, Wireless Intercom Headset System, Intercom Headset System, Headset System, System</p>
---	--

References

- [User Manual](#)

■ SYNCO

🔍 B0CQM4FKL3, B0CZDFQ78J, B0DJ25D8XG, Headset System, Intercom Headset System, SYNCO, System, Wireless Intercom Headset System, XTALK X2, XTALK X2 Wireless Intercom Headset System

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.