



TDE Instruments DPM72-MPP DIN Rail Meter Instruction Manual

[Home](#) » [TDE Instruments](#) » TDE Instruments DPM72-MPP DIN Rail Meter Instruction Manual 

Contents

- 1 TDE Instruments DPM72-MPP DIN Rail Meter
- 2 Safety instructions
- 3 Description
- 4 Product overview
- 5 Mounting
- 6 Electrical connections
- 7 Configuration
- 8 Specification
- 9 Dimensions [mm]
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

TDE Instruments

TDE Instruments DPM72-MPP DIN Rail Meter



Package contents: Digalox® DPM72, 5 jumpers, 2 instruction manuals (EN + DE)

Safety instructions

- Read instruction manual carefully before operating the device! Keep for later reference.
- Mounting and installation must be carried out by suitably qualified and competent persons only.
- When working on the device hazardous voltages must not be connected to the device! The terminals J1-J12 are not isolated from the measuring circuit.
- The device must not be used as the only protective device or protective shutdown.
- The device is not intended to protect persons or facilities against harm. Specific devices must be used to guarantee safety (protection relays, cut-off switches, etc.).
- When connecting switches to the terminals J1-J8, only switches must be used whose isolation voltage is at least twice the maximum occurring measurement voltage. For example, when measuring 30 V DC switches must be isolated for at least 60 V.
- Do not open the housing!
- Do not use the device in the presence of explosive or flammable substances!
- All cables carrying hazardous voltages must be secured with external separators.

Meaning of symbols



General warning sign
(Attention, observe the documentation!)



Warning of an electrical hazard

Intended use

- Measurement of current, voltage, power and frequency in the specified measuring ranges.
- Indoor use non condensing, non corrosive.
- Mounting on DIN rail or screwing on.
- Failure to comply with these instructions will void all guarantee and warranty.

Description


Depending on type the measurement modes analogue signal (2×) 0/2 to 10 V and/or (2×) 0/4 to 20 mA AC/DC are supported. As individually adjustable threshold values are reached, two galvanically isolated alarm outputs enable the device to perform switch-on or switch-off operations.

Using the configuration software “Digalox® Manager” the device can be configured, e.g. thresholds for alarm output, hysteresis, and more.

Depending on the model, measured values can be transmitted via XBEE radio technology or RS485 Modbus interface. In addition, the device features a counting function with data retention. This enables operating-hours-counters or time-counters for exceeding and falling below threshold values, as well as single pulse counting (MPP) or double pulse counting (MPPV). The device can be mounted on DIN rails as well as on other backgrounds through corresponding holes in the housing.

Visit www.digalox.com to download the software “Digalox® Manager”.


Product overview

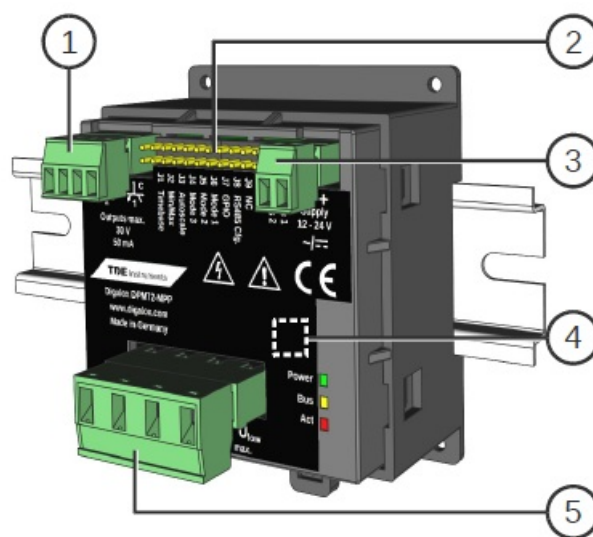


1. optocoupler switch outputs
2. Jumper pins J1–J12
3. Supply voltage input
4. Interface (XBEE / RS485)
5. Measurement inputs

Mounting

Hook the device into the top-hat rail from above and then press it at the bottom until the latch engages.

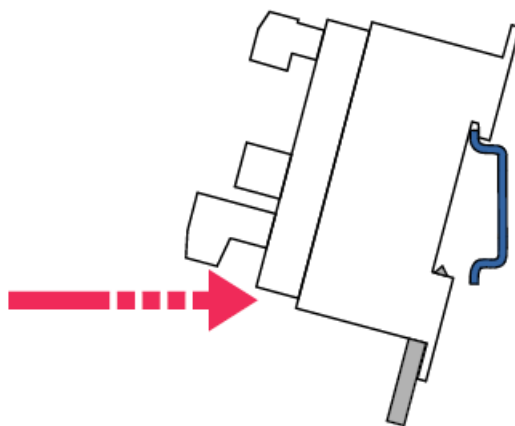


Alternatively, attach the device with 4 screws.

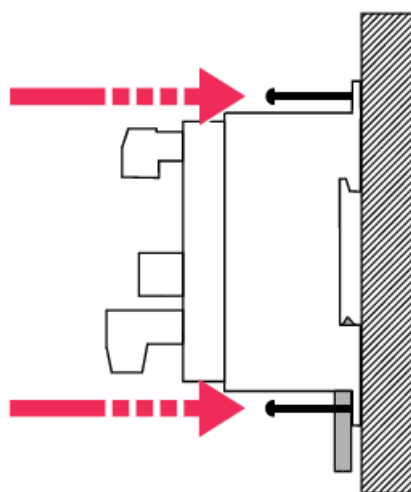

Electrical connections


WARNING: The device may only be operated in one of the connection options shown!

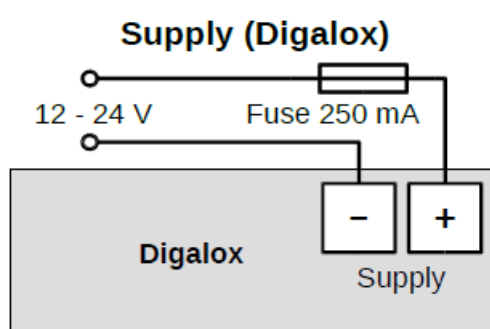


Legend

- Voltage source, e.g. active sensor or sensor with voltage supply
- Current source, e.g. active sensor or sensor with voltage supply


DPM72-MPP

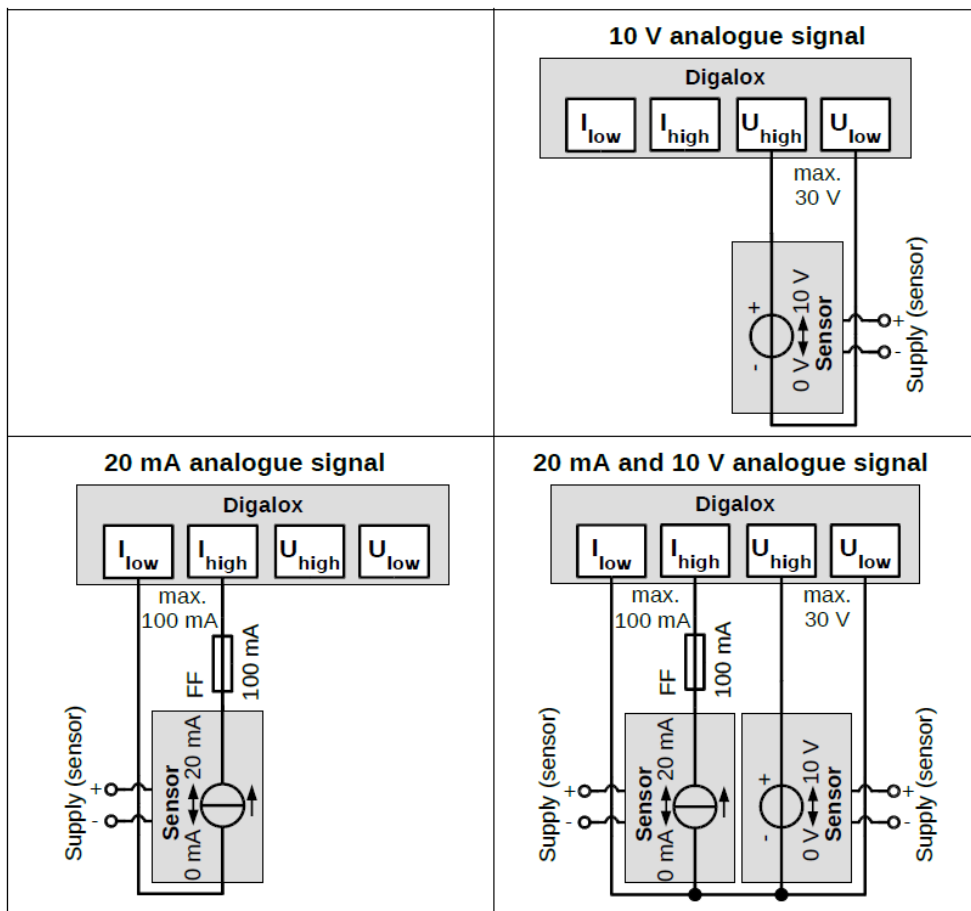

DPM72-MPPA

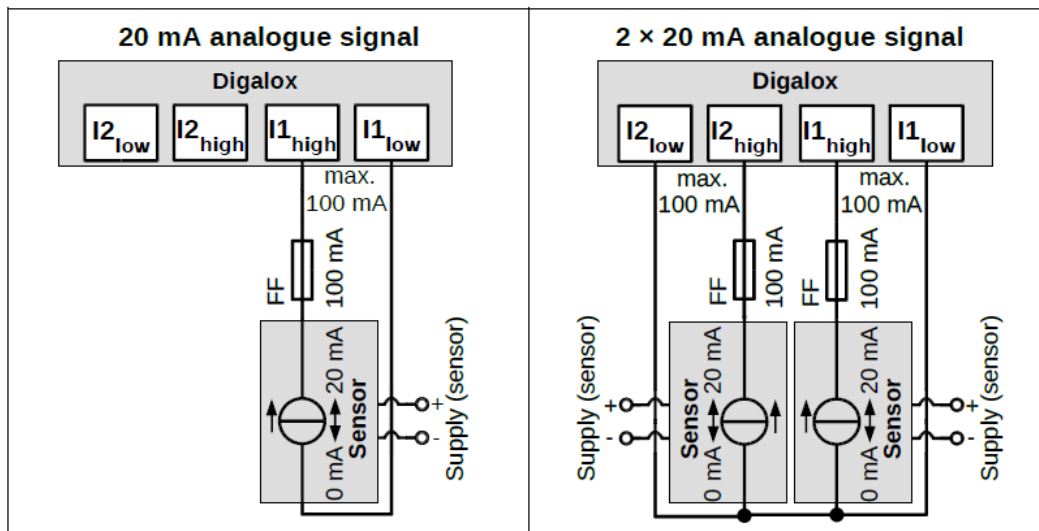

DPM72-MPPV

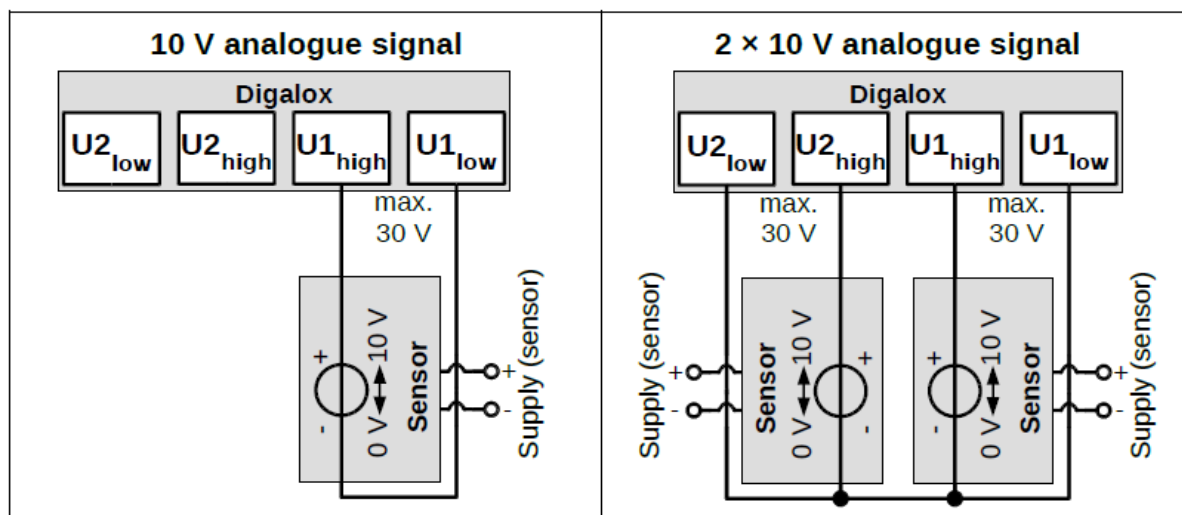

Configuration

Connect the device to a computer:



USB: Connect the device and the computer using a USB cable. The device driver is installed automatically if the computer is connected to the Internet.



XBEE: Insert the XBEE stick into the computer. The device driver is installed automatically if the computer is connected to the Internet. In order to reset the XBEE settings, short-circuit terminal J8.



RS485: Short-circuit terminal J8. Disconnect the device from the Modbus network and connect it to the computer using an RS485 USB adapter. After completing the configuration, open J8 again.

Start the “Digalox® Manager” software and connect it to the device. Settings can then be made on the various tabs and saved in the device.

Please note that the display value selected in “Digalox® Manager” is active in the device only until the power supply is interrupted.

In further operation, the first four display values are provided or the one selected via connections J4-J6 and the three following display values.

Maintenance

Periodically check all external cable connections.

Cleaning

Observe the safety instructions before cleaning the device. Clean the device with a dry lint-free soft cloth. Do not use solvents.


Specification

	DPM72-MPPA	DPM72-MPP	DPM72-MPPV
--	------------	-----------	------------

Supply	12 – 24 V AC/DC $\pm 10\%$ (50/60 Hz $\pm 10\%$), galvanically isolated		
Power consumption	Max. 1.2 W		
Measuring range voltage	–	± 30 V DC, 20 V AC, 10 – 500 Hz	
Accuracy voltage	–	± 0.5 % true RMS	
Internal resistance voltage	–	102 k Ω	
Measuring range ampere	20 mA AC/DC (max. 100 mA), 10 – 500 Hz		–
Accuracy ampere	± 0.5 % true RMS		–
Internal resistance ampere	6.2 Ω		–
Measuring range frequency	10 – 1000 Hz		
Accuracy frequency	± 0.1 Hz		
Measuring value update	5 Hz (32 kHz sampling rate)		
Alarm outputs	2 optocoupler outputs max. 30 V DC, 50 mA		

Connections (measuring inputs) <ul style="list-style-type: none"> – Wire gauge – Wire strip length – Pitch 	0.2 – 3.3 mm ² (24 to 12 AWG) 7 – 8 mm 7.62 mm
Connections (supply, alarm outputs and RS485) <ul style="list-style-type: none"> – Wire gauge – Wire strip length – Pitch 	0.13 – 1.3 mm ² (26 to 16 AWG) 6 – 7 mm 3.5 mm
Operating temperature	0 °C to +50 °C
Storage temperature	-20 °C to +70 °C
Operating altitude	0 to 2000 m above sea level
IP code	IP00
Dimensions	67.5 mm × 93.5 mm × 61.2 mm
Depth	61.2 mm (with plugs, cable outlet at the front) 78.7 mm (with antenna)
Net weight	106 g

Dimensions [mm]

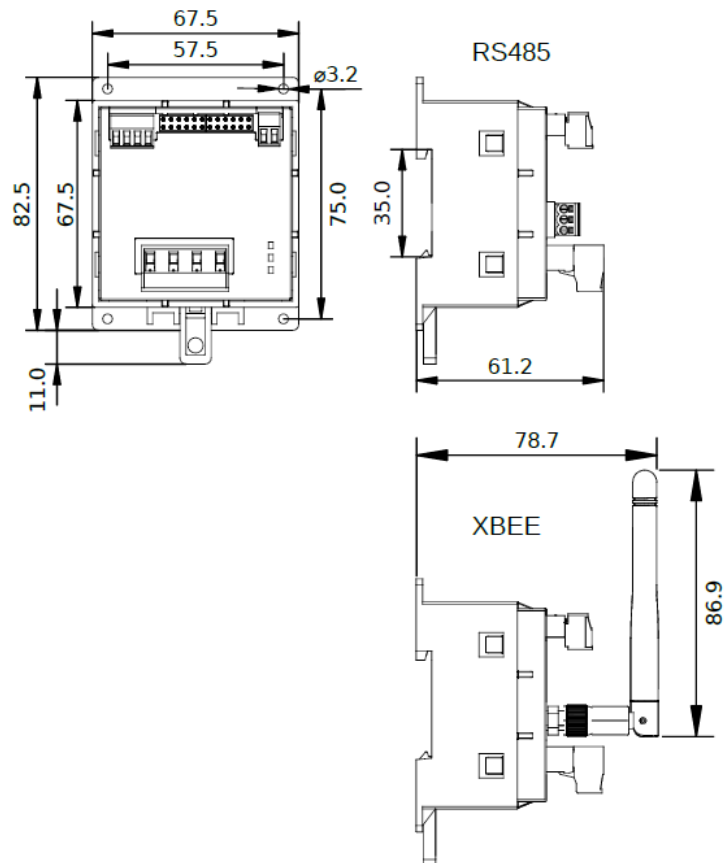

Contact information


TDE Instruments GmbH, Gewerbestraße 8, D-71144 Steinenbronn

Phone: +49 7157 20801

E-mail: info@tde-instruments.de

Internet: www.tde-instruments.de, www.digalox.com

Documents / Resources

 <p>Product: DPM72-MPP DIN Rail Meter Instruction Manual (PDF)</p> <p>Package contents: 1 x DPM72-MPP, 1 x RS485 cable, 1 x XBEE module, 1 x DIN rail (DIN 43880)</p> <p>1. Safety instructions:</p> <ul style="list-style-type: none"> Read the instruction manual carefully before operating the device for the first time. Observe the safety instructions and warnings in the instruction manual. Do not use the device in explosive or flammable atmospheres. Do not use the device in the presence of high voltage or high current. Do not use the device in the presence of strong magnetic fields. Do not use the device in the presence of strong electromagnetic interference. Do not use the device in the presence of strong radio frequency interference. Do not use the device in the presence of strong static electricity. Do not use the device in the presence of strong lightning. Do not use the device in the presence of strong thunder. Do not use the device in the presence of strong rain. Do not use the device in the presence of strong snow. Do not use the device in the presence of strong ice. Do not use the device in the presence of strong wind. Do not use the device in the presence of strong fog. Do not use the device in the presence of strong clouds. Do not use the device in the presence of strong sun. Do not use the device in the presence of strong moon. Do not use the device in the presence of strong stars. Do not use the device in the presence of strong planets. Do not use the device in the presence of strong galaxies. Do not use the device in the presence of strong universe. <p>2. Warranty:</p> <p>The manufacturer warrants the product for a period of 2 years from the date of purchase.</p> <p>3. Contact information:</p> <p>TDE Instruments GmbH, Gewerbestraße 8, D-71144 Steinenbronn, Germany</p> <p>Phone: +49 7157 20801</p> <p>E-mail: info@tde-instruments.de</p> <p>Internet: www.tde-instruments.de, www.digalox.com</p>	<p>TDE Instruments DPM72-MPP DIN Rail Meter [pdf] Instruction Manual</p> <p>DPM72-MPP, DIN Rail Meter, Rail Meter, DIN Meter, Meter, DPM72-MPP</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [Übersicht](#)
- [Übersicht](#)
- [TDE Großhandel für Messtechnik | TDE Instruments](#)