



The Art of Utility D42N Bluetooth Headset User Manual

[Home](#) » [The Art of Utility](#) » The Art of Utility D42N Bluetooth Headset User Manual 

Contents

- [1 The Art of Utility D42N Bluetooth Headset](#)
- [2 Get Started](#)
- [3 Touch Control Commands Are There](#)
- [4 Charge The Earbuds](#)
- [5 Reset My Earbuds](#)
- [6 FCC STATEMENT](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

The Art of Utility

The Art of Utility D42N Bluetooth Headset




Get Started

How do I get started?

1. Make sure the earbuds are fully charged. Do this by charging the earbuds in the charging case until all 4 lights on the charging case are lit.

How do I pair the earbuds?

When you power them on for the first time they will auto-pair. You will hear “earbuds paired” when this is done. This takes about one to two seconds after turning them on.

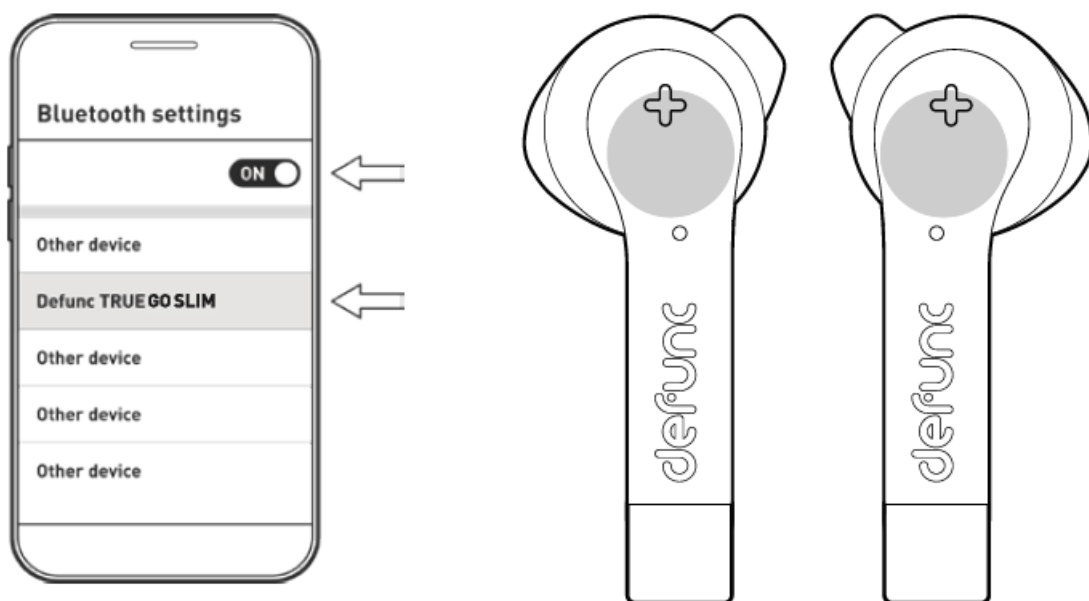

How do I pair my device?

1. Take the earbuds out of the charging case or press the touch control area (below the "+" area) on both earbuds for about 3 seconds until you hear the starting sound. Either course of action turns the earbuds on.
2. Go to the Bluetooth settings on your device and make sure Bluetooth is turned on.
3. In the list of available devices, choose Defunc TRUE GO SLIM and accept to pair.

Touch Control Commands Are There

What touch control commands are there?

1. **Power on:** Open the cap of the charging case and take the earbuds out for auto-power on. Or touch the left and right earbuds for 3 seconds to power on. Power off: Put the earbuds back in the charging case or touch either the right or left earbuds for 5 seconds. Auto-power-off will be activated after 5 minutes in a paired mode without a connected device. Play/pause: While listening to music, double-click the touch area of any earbud to play and pause the music.
2. **Next track:** While listening to music, press the right earbud for 2 seconds to get to the next song.
3. **Previous track:** While listening to music, press the left earbud for 2 seconds to play the previous song.
Volume increase: Click once on the right earbud. Wait 1 second between each touch if you want to increase the volume.
4. **Volume decrease:** Click once on the left earbud. Wait 1 second between each touch if you want to decrease the volume.
5. **Answer/end phone call:** Double-click either the left or right earbud to answer or end the phone call. Reject call: Press either the left or right earbuds for 2 seconds to reject the call.
6. **Voice assistant:** Triple-click on the left earbud to activate the voice assistant on your phone and triple-click on the left earbud again to end it.

Charge The Earbuds

How do I charge the earbuds?

Put the earbuds in the charging case and close the cap. Make sure that the charging case has battery life. How do I charge the charging case?

Plug the USB-C charging cable with the USB-C port on the charging case and plug the other end of the cable into a power source. Charging case and earbuds can be charged simultaneously. Do note that the charging case cannot be charged if you replace it with a USB-C to USB-C cable.

What do the lights on the charging case communicate?

Charging case battery status: A flashing light means that the earbuds are being charged. Each light on the charging case equals 25% battery life of the charging case. When each 25% is reached, the corresponding light becomes stable, and the next starts flashing. When charged to 100%, all lights are lit. Earbuds battery status: How much battery life there is in the earbuds can be seen on devices like a smartphone. Check the top bar of your phone for a battery icon that appears when you connect your earbuds with it.

I'm losing sound in one of the earbuds.

What do I do?

1. Make sure the earbud has battery life. If not, place the earbud in the charging case to charge it.
2. Create a new Bluetooth connection between the earbuds and the earbuds and your device by placing the

earbuds in the charging case and closing the cap. Then, open the cap and pick out the earbuds again.

Reset My Earbuds

I want to reset my earbuds. How do I do that?

1. Turn off the Bluetooth function on nearby devices to avoid accidental pairing
2. Take out the earbuds from the charging case. In pairing mode, tap 6 times quickly and press for 2 seconds on the 6th tap
3. The earbuds turn off automatically when you hear the notification sound
4. Take out the earbuds from the charging case turn on the Bluetooth function on the device you want to pair your earbuds with and choose Defunc TRUE BASIC in the list of available devices

Can the earbuds be connected to two devices at the same time?

No. They can only be connected to one device at a time.

Can I use one earbud and charge the other one in the charging case?

Yes, you can!

How do I unpair the earbuds and my device?

Go to the Bluetooth settings on your device and look for a text or graphic that reads “disconnect pairing” or similar. Tap on that text/graphic to unpair.

Why won't the earbuds sync with my device?

This can be due to a few different reasons. Please make sure ...

- the earbuds are turned on.
- Bluetooth is turned off on your device.
- that the earbuds aren't connected to another device.
- the earbuds have a low battery.

Bluetooth Interference

What should I know about Bluetooth interference?

Remember that when the 10-meter Bluetooth range is measured, it's measured between two points without any objects in the way blocking the signal. This means that even though you have your device in your back pocket, the connection might not be 100 percent. If you experience a bad connection, please make sure that as few objects as possible are in the way between your earbuds and your device, for example, clothes and accessories in your bag.

I would like to claim my Defunc product. What shall I do?

If you receive your goods and discover that it is damaged, or have other defects, please contact customer service.

- [Defunc.com/support/](https://defunc.com/support/).

Scroll down and click on the < GET IN TOUCH > button. Provide us with your contact and purchase details.

All ears around the world deserve good sound.



FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Scan the QR CODE for Defunc True GO SLIM full manual.



QR-CODE TO MANUAL



POWERFUL SOUND
SON PUISSANT
SONIDO POTENTE
STARKES KLANGBILD




SECURE FIT
MAINTIEN SECURISE
FIJACIÓN SEGURA
SICHERER HALT



PLAYTIME
AUTONOMIE
TIEMPO DE USO
SPIELZEIT

Documents / Resources

| | |
|---|---|
|  | The Art of Utility D42N Bluetooth Headset [pdf] User Manual D42N Bluetooth Headset, D42N, Bluetooth Headset, Headset |
|---|---|

References

- [User Manual](#)