



## THINKCAR THINKSCAN Max Car Diagnostic Scan Tool Instruction Manual




### Initial Use

The following settings should be made when you initially use the tool.



### Turn on the Machine

After pressing the power button, images will be shown on the screen as follows.

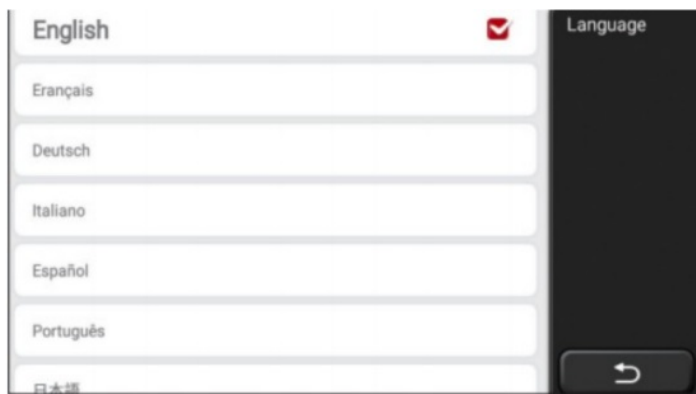


## Language Setting

Select the tool language from the languages displayed on the interface.

## Connect WIFI


The system will automatically search all available WIFI networks and you can choose the WIFI needed. If the chosen network is open, you can connect it directly; If the chosen network is encrypted, you must enter the correct password. Then You can connect WIFI after clicking “connect”.

**Tips:** Wi-Fi must be set. If no Wi-Fi network is available nearby, you can enable “Portable Mobile Hotspot”.

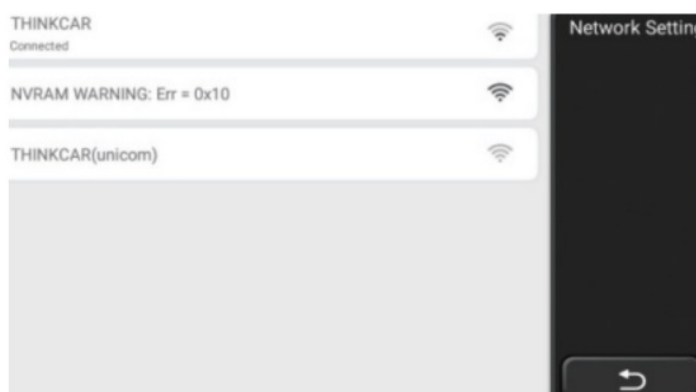

## Choose Time Zone

Choose the time zone of the current location, then the system will automatically configure the time according to the time zone you chose.

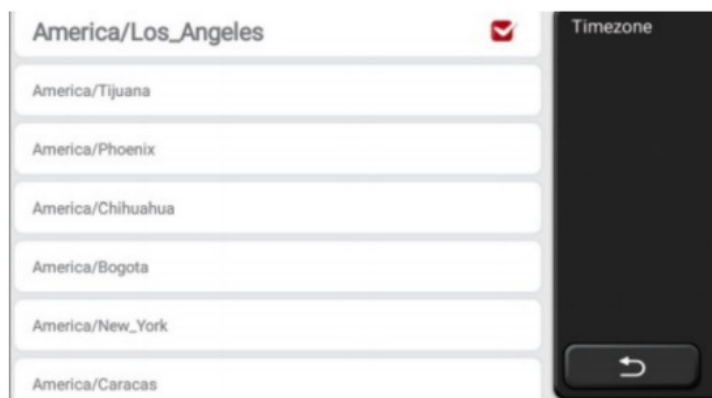

## User Agreement

Please read all the terms and conditions of the user agreement carefully. Choose “Agree all the above terms”, and click the “Agree” button to complete the registration process. Then the page will jump to the “Congratulations on your successful registration” interface.



Initial settings are finished after the above steps. It will automatically jump to the work interface after 3 seconds.

## Create an Account

You need to register an account through your e-mail box. If you have owned other products of THINK series, you can directly log in by using the account available.

09:43 70%

User name

Email

Verification code

Password

After each diagnosis, the diagnosis report will be automatically sent to the mailbox. If you do not want to receive such a report push, you can turn it off in the Settings.

Create Account

Next Step

↶

## Typing in Business Information

Typing in the repair shop information, which will be shown in the diagnostic report.

09:43 70%

Upload logo Shop name

Address

Phone number (optional)

The above information is only printed as the header content to help you better promote and promote, if skipped, can be further improved or modified in the Settings menu

Business Information

Skip

Create

↶

## Copyright Information

Copyright Information Copyright © 2020 by THINKCAR TECH. CO., LTD. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying and recording or otherwise, without the prior written permission of THINKCAR. The information contained herein is designed only for the use of this unit. THINKCAR is not responsible for any use of this information as applied to other units. Statement: THINKCAR owns the complete intellectual property rights for the software used by this product. For any reverse engineering or cracking actions against the software, THINKCAR will block the use of this product and reserve the right to pursue their legal liabilities.

## Trademark Information

THINKSCAN Max is a registered trademark of THINKCAR TECH CO., LTD. All other THINKSCAN Max trademarks, service marks, domain names, logos, and company names referred to in this manual are either trademarks, registered trademarks, service marks, domain names, logos, company names of or are otherwise the property of THINKCAR or its affiliates. In countries where any of the THINKSCAN Max trademarks, service marks, domain names, logos and company names are not registered, THINKSCAN Max claims other rights associated with unregistered trademarks, service marks, domain names, logos, and company names. Other products or company names referred to in this manual may be trademarks of their respective owners. You may not use any trademark, service mark, domain name, logo, or company name of THINKTOOL or any third party without permission from the owner of the applicable trademark, service mark, domain name, logo, or company name. You may contact THINKCAR TECH INC by visiting the website at [www.mythinkcar.com](http://www.mythinkcar.com), or writing to THINKCAR TECH CO., LTD.

## **General Notice**

- Other product names used herein are for identification purposes only and may be trademarks of their respective owners. THINKCAR disclaims any and all rights in those marks.
- There is a possibility that this unit is inapplicable to some of the vehicle models or systems listed in the diagnosis section due to different countries, areas, and/or years. Do not hesitate to contact THINKCAR if you come across such questions. We are to help you solve the problem as soon as possible.

## **Disclaimer**

- To take full advantage of the unit, you should be familiar with the engine.
- All information, illustrations, and specifications contained in this manual are based on the latest information available at the time of publication. The right is reserved to make change at any time without notice.
- Neither THINKCAR nor its affiliates shall be liable to the purchaser of this unit or third parties for damages, losses, costs or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this unit, or unauthorized modifications, repairs, or alterations to this unit, or failure to strictly comply with THINKCAR operating

and maintenance instructions.

- THINKCAR shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original THINKCAR
- Products or THINKCAR Approved Products by THINKCAR.

## **Safety Precautions and Warnings**

- To prevent personal injury or damage to vehicles and/or this tool, please read this user's manual first casually and observe the following safety precautions at a minimum whenever working on a vehicle:
- Always perform automotive testing in a safe environment.
- Do not attempt to operate or observe the tool while driving a vehicle. Operating or observing the tool will cause driver distraction and could cause a fatal accident.
- Wear safety eye protection that meets ANSI standards.
- Keep clothing, hair, hands, tools, test equipment, etc. away from all moving or hot engine parts.
- Operate the vehicle in a well-ventilated work area: Exhaust gases are poisonous.
- Put blocks in front of the drive wheels and never leave the vehicle unattended while running tests.
- Use extreme caution when working around the ignition coil, distributor cap, ignition wires and spark plugs. These components create hazardous voltages when the engine is running.
- Put the transmission in P(for A/T)or N (for M/T)and make sure the parking brake is engaged.
- Keep a fire extinguisher suitable for gasoline/chemical/ electrical fires nearby.
- Don't connect or disconnect any test equipment while the ignition is on or the engine is running
- Keep this tool dry, clean, free from oil/water or grease. Use a mild detergent on a clean cloth to clean the outside of the tool. when necessary.
- Please use the DC 5V power adaptor to charge this tool. No responsibility can be assumed for any damage or loss caused as a result of using power adaptors other than the night one.

## An Introduction to the company

THINKCAR TECH is a highly creative developer of vehicle diagnosis tools. By marrying user friendly creative ideas with technologies, the company has produced Think series products featured as ultimate experience and extraordinary imagination, including THINKOBD, THINKCAR, THINKDIAG, THINKPLUS, THINKSCAN and THINKTOOL. Those products prove to be a brand new generation of diagnosis tools through user oriented creative products forms and service system. THINKCAR TECH keeps striving for perfection in all aspects such as its products design, material selection, manufacturing and software service.

### Contents [ [hide](#) ]

- 1 [General information](#)
- 2 [Introduction to the Product](#)
- 3 [Preparation](#)
- 4 [Diagnosis starts](#)
- 5 [Q & A](#)
- 6 [Q: Why does it have no responses when connected to a car computer?](#)
- 7 [Q: Why does the system stop while reading the data stream?](#)
- 8 [Q. Communication error with vehicle ECU?](#)
- 9 [Q: Why does the host screen flash when the engine ignition starts?](#)
- 10 [Q: Please explain the account and points.](#)
  - 10.1 [Warranty Terms](#)
  - 10.2 [Documents / Resources](#)
    - 10.2.1 [References](#)

## General information

### On-Board Diagnostics (OBD) II

The first generation of On-Board Diagnostics (OBD I) was developed by the California Air Resources Board (ARB) and implemented in 1988 to monitor some of the emission control components on vehicles. As technology evolved and the desire to improve the On Board Diagnostic system increased, a new generation of On-Board Diagnostic

system was developed. This second generation of On Board Diagnostic regulations is called "OBD II".


The OBD II system is designed to monitor emission control systems and key engine components by performing either continuous or periodic tests of specific components and vehicle conditions. When a problem is detected, the OBD II system turns on a warning lamp (MIL) on the vehicle instrument panel to alert the driver typically by the phrase of "Check Engine" or "Service Engine Soon". The system will also store important information about the detected malfunction so that a technician can accurately find and fix the problem. Here below follow three pieces of such valuable information:

1. Whether the Malfunction Indicator Light (MIL) is commanded 'on' or 'off ';
2. Which, if any, Diagnostic Trouble Codes (DTCs) are stored;
3. Readiness Monitor status.

### **Diagnostic Trouble Codes (DTCs)**


OBD II Diagnostic Trouble Codes are codes that are stored by the on-board computer diagnostic system in response to a problem found in the vehicle. These codes identify a particular problem area and are intended to provide you with a guide as to where a fault might be occurring within a vehicle. OBD II Diagnostic Trouble Codes consist of a five-digit alphanumeric code. The first character, a letter, identifies which control system sets the code. The second character, a number, 0-3; other three characters, a hex character, 0-9 or A-F provide additional information on where the DTC originated and the operating conditions that caused it to set. Here below is an example to illustrate the structure of the digits:



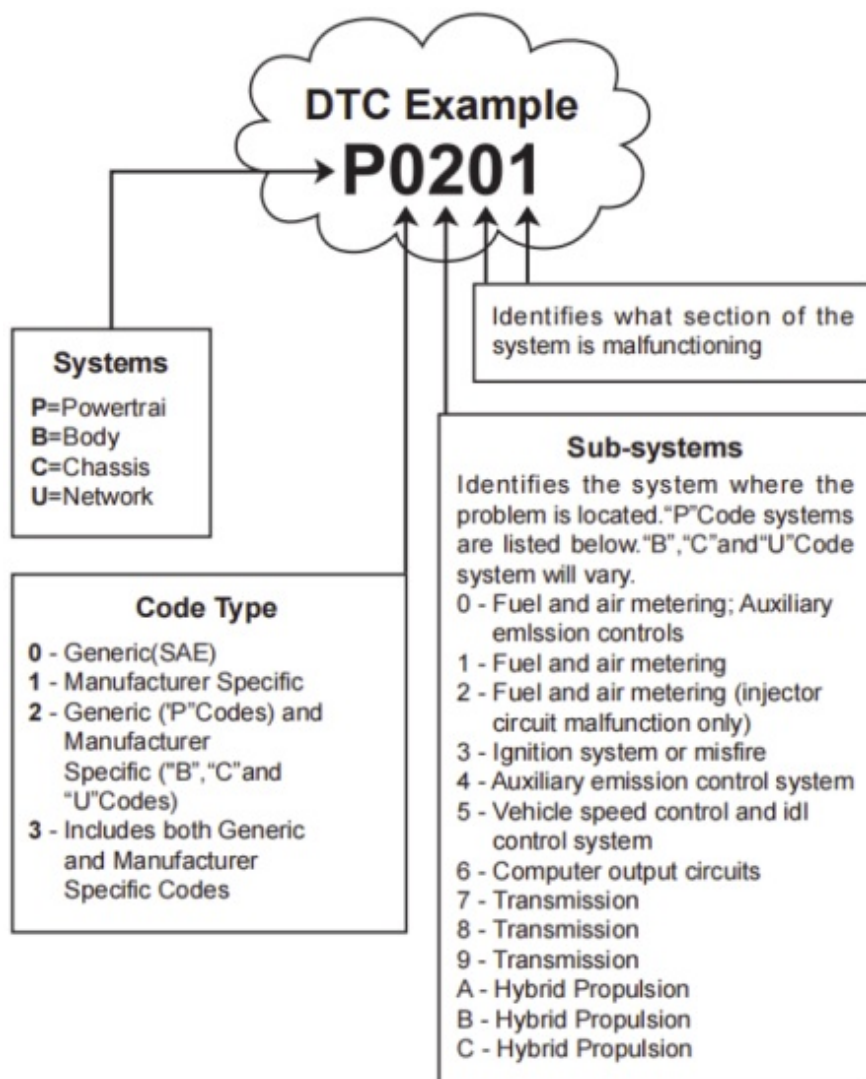

## Data Link Connector (DLC) Location

The DLC (Data Link Connector or Diagnostic Link Connector) is typically a 16pin connector where diagnostic code readers interface with the vehicle's onboard computer. The DLC is usually located 12 inches from the center of the instrument panel (dash), under or around the driver's side for most vehicles. If Data Link Connector is not located under dashboard, a label should be there telling location. For some Asian and European vehicles, the DLC is located behind the ashtray and the ashtray must be removed to access the connector. If the DLC cannot be found, refer to the vehicle's service manual

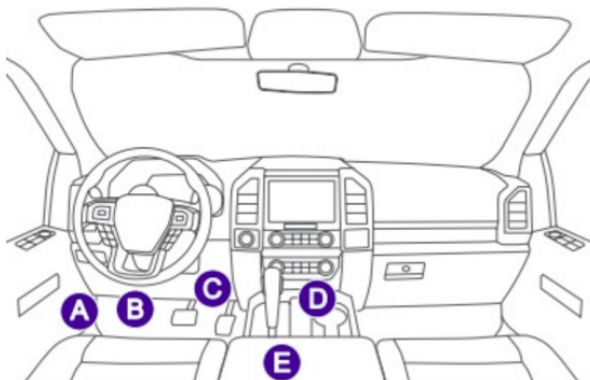

for the location.

## **OBD II Readiness Monitors**

An important part of a vehicle's OBD II system is the Readiness Monitors, which are indicators used to find out if all of the emissions components have been evaluated by the OBD II system. They are running periodic tests on specific systems and components to ensure that they are performing within allowable limits. Currently, there are eleven OBD II I Readiness Monitors (or I/M Monitors) defined by the U.S. Environmental Protection Agency (EPA). Not all monitors are supported in every vehicles and the exact number of monitors in any vehicle depends on the motor vehicle manufacturer's emissions control strategy. Continuous Monitors — Some of the vehicle components or systems are continuously tested by the vehicle's OBD II system, while others are tested only under specific vehicle operating conditions. The continuously monitored components listed below are always ready:

1. Misfire
2. Fuel System
3. Comprehensive Components (CCM)

Once the vehicle is running, the OBD II system is continuously checking the above components, monitoring key engine sensors, watching for engine misfire, and monitoring fuel demands.

Non-Continuous Monitors — — Unlike the continuous monitors, many emissions and engine system components require the vehicle to be operated under specific conditions before the monitor is ready. These monitors are termed noncontiguous monitors and are listed below:

1. EGR System
2. O2 Sensors
3. Catalyst
4. Evaporative System
5. O2 Sensor Heater
6. Secondary air Injection
7. Heated Catalyst

## 8. A/C system

### **OBD II Monitor Readiness Status**

OBD II systems must indicate whether or not the vehicle's PCM's monitor system has completed testing on each component. Components that have been tested will be reported as "Ready", or "Complete", meaning they have been tested by the OBD II system.

The purpose of recording readiness status is to allow inspectors to determine if the vehicle's OBD II system has tested all the components and/or systems. The Powertrain Control Module (PCM) sets a monitor to "Ready" or "Complete" after an appropriate drive cycle has been performed. The drive cycle that enables a monitor and sets readiness codes to "Ready" varies for each individual monitor. Once a monitor is set as "Ready" or "Complete", it will remain in this state. A number of factors, including erasing of Diagnostic Trouble Codes (DTCs) with a code reader or a disconnected battery, can result in Readiness Monitors being set to "Not Ready". Since the three continuous monitors are constantly evaluating, they will be reported as "Ready" all of the time. If testing of a particular supported non-continuous monitor has not been completed, the monitor status will be reported as "Not Complete" or "Not Ready." In order for the OBD monitor system to become ready, the vehicle should be driven under a variety of normal operating conditions.

These operating conditions may include a mix of highway driving and stop and go, city type driving, and at least one overnight-off period. For specific information on getting your vehicle's OBD monitor system ready, please consult your vehicle owner's manual.

### **OBD II Definitions**

**Powertrain Control Module (PCM)** — OBD II terminology for the on-board computer that controls engine and drive train.

**Malfunction Indicator Light (MIL)** — Malfunction Indicator Light (Service Engine Soon, Check Engine) is a term used for the light on the instrument panel. It is to alert the driver and/or the repair technician that there is a problem with one or more of vehicle's systems and may cause emissions to exceed federal standards. If the MIL illuminates with a

steady light, it indicates that a problem has been detected and the vehicle should be serviced as soon as possible. Under certain conditions, the dashboard light will blink or flash.

This indicates a severe problem and flashing is intended to discourage vehicle operation.

The vehicle onboard diagnostic system cannot turn the MIL off until the necessary repairs are completed or the condition no longer exists.

**DTC** — Diagnostic Trouble Codes (DTC) that identifies which section of the emission control system has malfunctioned.

**Enabling Criteria** — Also termed Enabling Conditions. They are the vehicle specific events or conditions that must occur within the engine before the various monitors will set, or run.

Some monitors require the vehicle to follow a prescribed “drive cycle” routine as part of the enabling criteria. Drive cycles vary among vehicles and for each monitor in any particular vehicle. Please refer to the vehicle’s factory service manual for specific enabling procedures.

**OBD II Drive Cycle** — A specific mode of vehicle operation that provides conditions required to set all the readiness monitors applicable to the vehicle to the “ready” condition.

The purpose of completing an OBD II drive cycle is to force the vehicle to run its onboard diagnostics. Some form of a drive cycle needs to be performed after DTCs have been erased from the PCM’s memory or after the battery has been disconnected. Running through a vehicle’s complete drive cycle will “set” the readiness monitors so that future faults can be detected. Drive cycles vary depending on the vehicle and the monitor that needs to be reset. For vehicle specific drive cycle, consult the service manual.

**Freeze Frame Data** — When an emissions related fault occurs, the OBD II system not only sets a code but also records a snapshot of the vehicle operating parameters to help in identifying the problem. This set of values is referred to as Freeze Frame Data and may include important engine parameters such as engine RPM, vehicle speed, air flow,

engine load, fuel pressure, fuel trim value, engine coolant temperature, ignition timing advance, or closed loop status.

**Fuel Trim (FT)** — Feedback adjustments to the base fuel schedule. Short-term fuel trim refers to dynamic or instantaneous adjustments. Long-term fuel trim refers to much more gradual adjustments to the fuel calibration schedule than short-term trim adjustments. These long-term adjustments compensate for vehicle differences and gradual changes that occur over time.

## **Introduction to the Product**

### **General introductions**

THINKSCAN Max, one of the diagnostic products launched by THINKCAR TECH INC, is the highest-level OBD product of the THINK series for DIY users. Equipped with Android operating system, it features powerful functions and can be updated online. Moreover, full communication protocols make it cover a wider range of vehicle models.

Through the simple Bluetooth communication between diagnostic dongle and the host computer, it achieves full car model and full system vehicle trouble diagnosis, which include Reading DTCs, Clearing DTCs, Reading Data Stream, Actuation Test and Special Functions.

### **Diagnostic host**



### 1. Power inlet

Connect a charger for charging or data transmission.

### 2. USB expansion slot

### 3. Power source/Lock screen button

When the host is off , turn on it by pressing the button for 3 seconds.

When the host is on, press the button to wake up the screen or turn off the screen.

Turn off the host by pressing the button for over 3 seconds; force a shut down by pressing the button for over 8 seconds.

### 4. Loudspeaker

### 5. Screen

### 6. Diagnostic dongle

It is pre-installed in the docking slot on the bottom of the host computer. Use the hand to press the dongle once, it will be automatically ejected from the docking slot. When it is not in use, please reinsert it into the slot to avoid loss.

## Technical indications

The host product package includes a host, a diagnostic dongle, a charging cable, and a power adapter. The following are performance parameters.

## THINKSCAN Max host computer

- **Battery Capacity:** 3100mAh/7.6V
- **Screen Size:** 5.99 inches
- **Resolution:** 720\*1440 pixel
- **Working Voltage:** 5V
- **Working Current:**  $\leq 2.5A$
- **Working Environment:** 32 °F ~122 °F (0°C ~50°C )
- **Storage Environment:** -4 °F ~140 °F (-20°C ~60°C )

## THINKSCAN Max Diagnostic Dongle

- **Working Voltage:** 12V
- **Working Current:**  $\leq 60mA$
- **Working Environment:** 14 °F ~122 °F (-10°C ~50°C )
- **Storage Environment:** -4 °F ~140 °F (-20°C ~60°C )

## Preparation

### Charge the host

Follow the steps below to charge the host:

1. Connect one end of the power cord to the USB socket of the power adapter.
2. Connect the other end to the charging jack on the bottom of the host.
3. Plug the charger power plug into a power outlet to start charging. When the battery status icon displays , the host has been charged. When it displays the charging process has been completed and you shall disconnect the host.

### Battery

- It is normal that the host won't turn on when charging because the battery has not been used for a long time or it is exhausted. Please turn on the host again after charging the battery for a while.
- Please charge the host through the charger in the package. The company assumes no responsibility for damages and losses caused by charging with chargers other than

those specified by the company.

- The battery can be recharged repeatedly. However, as the battery is wearable, the standby time of the device will be shortened after long-time use. Please avoid frequent repeated charging so as to extend battery life.
- The battery charging time varies with temperature and battery status.
- When the battery power is low, the system will pop up a prompt reminding you to connect the charger. When the battery power is too low, the device will turn off .

## Power on and off

### Power on

Long press the power button and then the start interface will appear.

**Tips:** The device may fail to turn on if you use it for the first time or haven't used it for a long time. This may be caused by too low battery power. Please try to turn it on again after charging the device for a while.

### Power off

Long press the power button until the dialog box pops up, and then turn off the device according to the prompts. If you need to force shutdown, long press the power button for more than 8 seconds until the screen goes dark.

## Functions Descriptions

The THINKSCAN Max host computer have 8 functions, namely, OBD, Scan, Maintenance & Service, Think File, Think Store, Repair Info, Setup and Update.



### Diagnosis

Full system diagnosis: it supports more than 100 automobile brands, smart diagnosis and traditional diagnosis covering OBD II full-function diagnosis, full-system and full




function diagnosis: read fault codes, clear fault codes, read real-time data streams, special functions, motion tests, etc.. A diagnostic report will be automatically generated after the diagnosis.


## Smart diagnosis

Plug the dongle into the vehicle's DLC port, then click "Scan" on the main interface. Then, click "AUTOSEARCH" to start communicating with the dongle via Bluetooth. After a good communication is established, the system starts reading the vehicle VIN.

**Tips:** if communication failure occurs, a prompt message box will pop up on the screen. Follow the on-screen prompts to proceed.

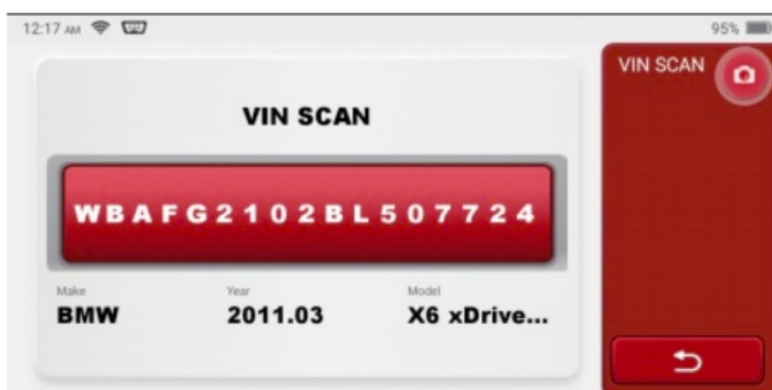

If it fails to read VIN, you need to enter VIN manually

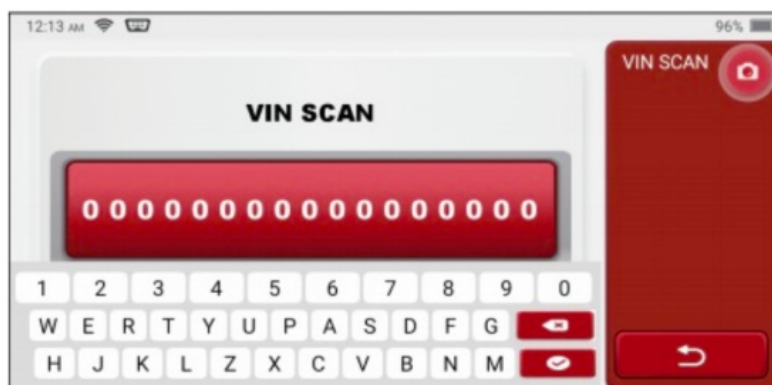


## Diagnosis starts

1. **Choose test mode:** after reading VIN, the screen will enter the test mode selection interface:




**A. Health Report:** this mode is to quickly check the vehicle and display the vehicle health report (it's available only when the the diagnosis software support this function).

After clicking “quick test”, the system starts scanning DTC respectively and show the result.

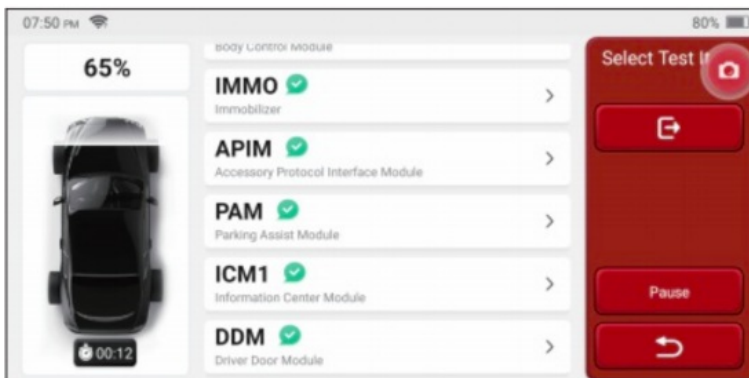

If you want to pause the scan, click “Pause”.

After the scan is over, the system will display the diagnostic report directly. The DTC can be hidden by clicking the button after it.

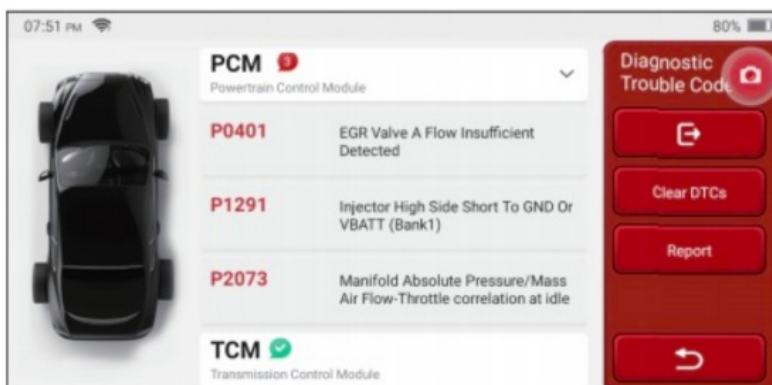


The system with DTC will be displayed on the screen in red font, and the specific number of DTC will be shown. A DTC-free system will be displayed as “OK”. Click the system name to see the specific definition of the DTC.

**B. System Scan:** automatically scan all systems of the vehicle.

**C. System Selection:** manually choose the automotive electronic control system.

2. **Choose the system:** Click “PCM” (e.g.), and the screen will enter selection interface.

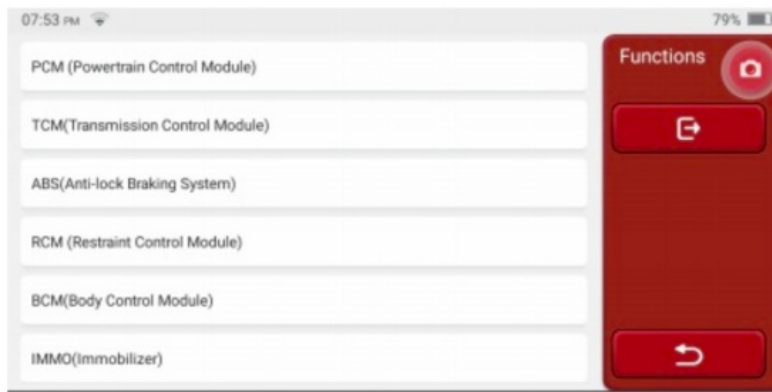

3. **Choose the function:** click the function to be tested.



**Tips :** The diagnosis menu varies with different vehicles.

### **A. Version Information**


As shown in the picture, click “Version Information” to read the current version information of the car ECU.

### **B. Read Fault Code**

This function is to read the DTC in the ECU memory , helping maintenance personnel to quickly identify the cause of the vehicle breakdown.

**Tips:** Reading the DTC when troubleshooting a vehicle is only a small step in the entire diagnostic process. Vehicle DTC are for reference only, and parts cannot be replaced directly based on the given DTC definition. Each DTC has a set of test procedures. The maintenance technician must strictly conform to the operation instructions and procedures described in the car maintenance manual to confirm the root cause of the breakdown.

As shown below, click “Read Fault Code”, and then the screen will display diagnostic results.

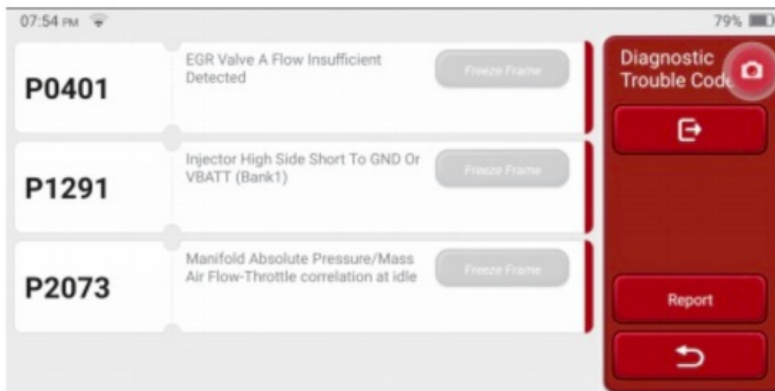

### Screen buttons:

**Freeze frame:** If this button is highlighted, it means there is freeze frame information. The freeze frame serves to record some specific data streams at the moment when the car breaks down. The number is for verification.

**Report:** Save the current diagnosis result as a diagnosis report. The diagnostic report is saved in the Think File module and can be sent to designated e-mail boxes.

**Tips:** After the report is produced, the technician can take a real-time photo of the vehicle and save it as a vehicle maintenance file.

### C. Clear Fault Code

This function serves to clear the DTC of the ECU memory of the tested system. Click “Clear Fault Code”, and then the system can automatically delete the existing DTC and pop up the dialogue box saying “DTC successfully cleared”.

**Note:** For general vehicles, please strictly follow the normal sequence: read the DTC , clear it, have a test run, read the DTC again for verification, repair the vehicle, clear the DTC, and try again to confirm that the DTC no longer appear.

### D. Read Data Stream

This function is majorly used to read and display real-time data and parameters of the car

ECU. Through observing these data streams, maintenance technicians can understand the vehicle’s overall performance and offer maintenance suggestions.




## Screen buttons:

**Select all:** If you want to check some data stream, tick the box before its name. If you want to choose all the data streams, click this button.

**Deselect:** Click this button to deselect all checked data streams.

**OK:** Confirm current operations. Click “OK” after selection, and then the system will display the dynamic data of selected data streams.

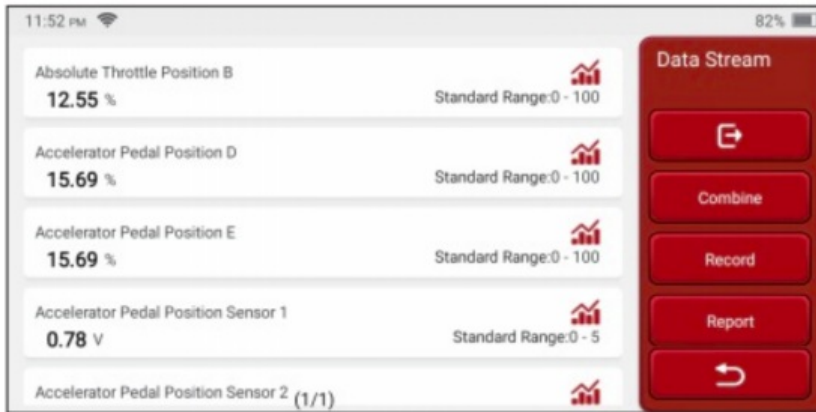

## Screen buttons:



**(Graph):** Click it and the data streams are displayed in dynamic wave patterns.

**Report:** Click the button to save the number of current data streams.

**Record:** It's used to record diagnosis data so that users can replay and check it. If you want to stop the reading, click “stop” (the white box before the progress bar). The diagnostic record is saved in the Think File module. It can be sent to designated e-mail boxes and reviewed for troubleshooting and analysis. If the 1 / X appears, it means that the data stream options haven't fully displayed. Swipe the screen from bottom to top to display the remaining options. With 3 display modes available, you can browse it with suitable ways:

- **Figure:** Displays parameters with wave patterns.
- **Value:** The default display mode shows parameters with numbers and lists.  
**Note:** If the value of the data stream is not within the standard value range, the data stream will be displayed in red.
- **Combine:** The graphs are presented together for users to make comparisons.  
**Note:** different data flow options are marked in different colors.

### How to check one wave pattern?

Click  On the display page of wave patterns.




Choose the data stream options to be checked (Note: Only a maximum of 4 data streams can be displayed).

If you want to remove the wave pattern of some data stream, just deselect it.

### **How to check several wave patterns together?**

Click [Combine] button and then the system will display the parameters of the selected data streams with wave patterns.

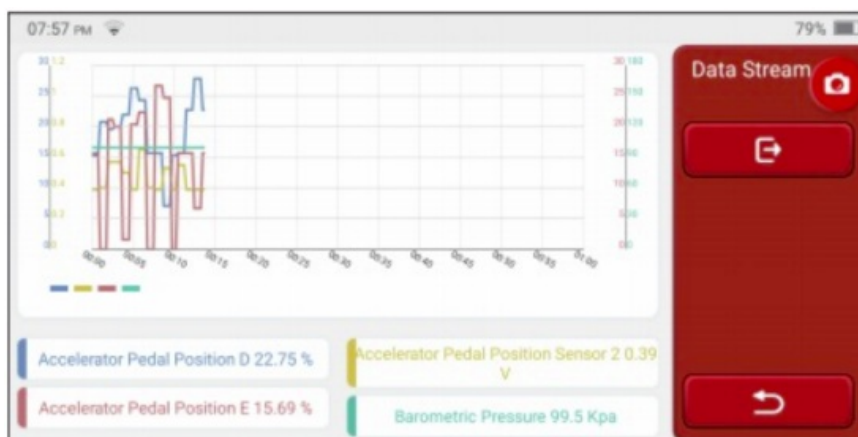

### **E. Actuation Test**

This function is used to test whether the execution components in the electronic control system can work normally.

### **Diagnosis History**

Usually, every time a car is diagnosed, the system will record each step. This function help users quickly enter a previously tested vehicle and continue its testing without starting anew. Click “HISTORY” and all previous records will be displayed on the screen chronologically.



### Screen buttons:

**Select all:** click it and select all diagnosis records.

**Delete:** click the button to delete some checked diagnosis record.

**Unselect:** click it to deselect all checked diagnosis records.

Click some diagnosis record to check details about vehicle information and DTC.

Click "Quick access" to test other systems.

## Maintenance & Reset

The host computer boasts the 28 most commonly used maintenance and reset functions, namely, Maintenance light reset, Steering angle reset, Battery matching, ABS exhaust, Throttle matching, Brake pad reset, DPF regeneration, Anti-theft matching, Nozzle coding, Tire pressure reset, Suspension level calibration, Headlight matching, Gearbox matching, Sunroof initialization, EGR Adaption, Gear Learning, ODO Reset, Airbag Reset, Transport Mode, A/F Reset, Stop/Start Reset, NOx Sensor Reset, Ad Blue Reset (Diesel Engine Exhaust Gas Filter), Seat Calibration, Coolant Bleeding, Tyre Reset, Windows Calibration and Language Change.

### Maintenance light reset

The lightening of the car maintenance light indicates that the vehicle needs maintenance.

Reset the mileage or driving time to zero after the maintenance, so the maintenance light will go out and the system will start a new maintenance cycle.

### Steering angle reset

Find the position where the car keeps driving straight. With this position as a reference, the ECU can calculate the accurate angle when the car turns left and right. Generally, after replacing the steering angle position sensor, replacing the mechanical parts of the



steering system (such as steering gear, steering column, tie rod ball head, steering knuckle), completing the four-wheel positioning, body repair, etc., it is required to reset the steering angle to zero.

### **Battery matching**

Battery matching is to use a car diagnostic tool to reset the monitoring unit of the car battery. By clearing the original breakdown information about the lack of battery power, rematch the battery. Based on the related information of the existing battery, the monitoring unit implements monitoring. Battery matching is required in the following

#### **situations:**

1. Replacement of the main battery needs to utilize battery matching to clear the former information about the lack of power, thus avoid false information detected by the relevant control module which will cause the failure of some electronic auxiliary functions. For example, the vehicle automatically stops; the sunroof can't work by one key; electric windows can't open and close automatically.
2. The battery monitoring sensor uses the battery matching function to re-match the control module with the monitoring sensor, so as to more accurately detect the use of the battery power, and avoid receiving wrong information from instrument prompts and causing false alarms.

### **ABS exhaust**

When the ABS system contains air, it is necessary to exhaust the brake system through the ABS exhaust function to restore its braking sensitivity. In addition, when replacing the ABS computer, ABS pump, brake master cylinder, brake cylinder, brake line, and brake fluid, the ABS exhaust function is a necessity.

### **Throttle matching**

Throttle matching is to utilize the car decoder to initialize the throttle actuator so that the learning value of the ECU returns to the initial state. By doing these, the movement of the throttle (or idle motor) can be more accurately controlled, thus adjust the intake volume. Situations when throttle matching is needed:

**a)** After replacing the electronic control unit, the relevant characteristics of the throttle operation have not been stored in the electronic control unit.



- b)** After the electric control unit is powered off , the memory of the electric control unit's memory is lost.
- c)** After replacing the throttle assembly, you need to match the throttle.
- d)** After replacing or disassembling the intake port, the controlling of the idle speed by the coordination between the electronic control unit and the throttle body is affected.
- e)** Although the characteristics of the idle throttle potentiometer have not changed, the intake volume has changed and the idle control characteristics have changed at the same throttle openings.

### **Brake pad reset**

When the brake pad reaches certain thickness, the brake pad induction wire will be worn. At this time, the wire will send a signal induction wire to the on-board computer to prompt the replacement of the brake pad. After replacing the brake pad, the brake pad need to be reset, otherwise the car will continue to alarm. Situations when the reset is required:

- a)** After the brake pad is replaced and when brake pad wears sensors;
- b)** when the brake pad indicator lightens;
- c)** After the brake pad sensor circuit is repaired;
- d)** After the servo motor is replaced.

### **DPF regeneration**

The DPF regeneration function is mainly to periodically use combustion oxidation methods (such as: high-temperature heating and combustion, the combustion through the use of fuel additives or catalysts to reduce the ignition point of particulate matters) to remove particulate matters from the trap, so that the performance of the trap is always stable. DPF regeneration matching is required in the following situations:

- a)** replace the exhaust back pressure sensor;
- b)** disassembly or replacement of the particle trap;
- c)** removal or replacement of fuel additive nozzles;
- d)** removal or replacement of catalytic oxidizer;
- e)** the DPF regeneration fault lamp is lit and matched after maintenance;
- f)** repair and replace the DPF regeneration control module.

### **Anti-theft matching**

In order to prevent the car from being used by illegal keys, the car's anti-theft matching function enables the car's immobilizer control system to identify and authorize the remote control key before the car can be turned on and used normally. In addition, when replacing the ignition key, ignition switch, instrument cluster, engine control unit (ECU), body control module (BCM), and remote control battery, it is necessary to match the anti-theft key.

### **Nozzle coding**

Write the actual code of the fuel injection nozzle or rewrite the code in the ECU to the code corresponding to the fuel nozzle of each cylinder, so that the fuel injection amount of each cylinder can be controlled or corrected more accurately. Usually after replacing the ECU and the fuel injector, the coding of each cylinder fuel nozzle needs to be confirmed or recoded, thus the cylinder can better identify the fuel injector of each cylinder and control the fuel injection accurately.

### **Tire pressure reset**

When the car tire pressure fault indicator light is on, this function is to reset the tire pressure and turn off the tire pressure fault indicator. If the tire pressure is too low or leaks, replace or install tire pressure monitoring equipment, and replace the tire. When the vehicle with a damaged tire pressure sensor and tire pressure monitoring function has rotated its tires, the tire pressure reset must be carried out after maintenance.

### **Suspension level calibration**

This function can adjust the vehicle body height. When replacing the vehicle height sensor or control module in the air suspension system or the vehicle level is wrong, this function can adjust the vehicle height sensor for level calibration.

### **Headlight matching**

This function can initialize the adaptive headlight system. This system can decide whether to automatically turn on the headlights based on the ambient light intensity, monitor the vehicle's driving speed, body posture, etc., and adjust the headlight lighting angle timely.

### **Gearbox matching**

This function can complete the self-learning of the gearbox and improve the shift quality.

When the gearbox is disassembled or repaired (after some batteries are powered off ), it will cause shifting delay or car impact. At this time, this function is to make the gearbox automatically compensate according to driving conditions, thus achieve more comfortable, more ideal shift quality.

### **Sunroof initialization**

This function can set the sunroof lock off , close in rain, memory function of sliding / tilting sunroof, outside temperature threshold, etc.

### **EGR Adaption**

This function is used to learn the EGR (Exhaust Gas Recirculation) valve after it is cleaned or replaced.

### **Gear Learning**

The crankshaft position sensor learns crankshaft tooth machining tolerance and saves to the computer to more accurately diagnose engine misfires. If tooth learning is not performed for a car equipped with Delphi engine, the MIL turns on after the engine is started. The diagnostic device detects the DTC P1336 'tooth not learned'. In this case, you must use the diagnostic device to perform tooth learning for the car. After tooth learning is successful, the MIL turns off. After the engine ECU, crankshaft position sensor, or crankshaft flywheel is replaced, or the DTC 'tooth not learned' is present, tooth learning must be performed.

### **ODO Reset**

**a)** ODO reset is to copy, write, or rewrite the value of kilometers in the chip of odometer by using a car diagnostic computer and data cable, so that the odometer shows the actual mileage.

**b)** Usually when the mileage is not correct due to the damaged vehicle speed sensor or odometer failure, it is necessary to do ODO reset after maintenance.

### **Airbag Reset**

This function resets the airbag data to clear the airbag collision fault indicator. When the vehicle collides and the airbag deploys, the corresponding fault code of the collision data appears, the airbag indicator lights up, and the fault code cannot be cleared. Since the data inside the airbag computer is disposable, it is required that all new accessories

must be replaced, but after performing this function, the data of the airbag computer can be recovered and the fault code can be cleared, the airbag light will go out, and the airbag computer can continue to use.

### **Transport Mode**

In order to reduce power consumption, the following functions may be disabled, including limiting the vehicle speed, not waking up the door opening network, and disabling the remote control key, etc. At this time, the transport mode needs to be deactivated to restore the vehicle to normal.

### **A/F Reset**

This function is applied to set or learn Air/Fuel ratio parameters.

### **Stop/Start Reset**

This function is used to open or close the automatic start-stop function via setting the hidden function in ECU (provided that the vehicle has a hidden function and supported by hardware).

### **NOx Sensor Reset**

NOx sensor is a sensor used to detect the content of nitrogen oxides (NOx) in engine exhaust. If the NOx fault is re-initialized and the NOx catalytic converter is replaced, it is necessary to reset the catalytic converter learned value stored in the engine ECU.

### **Ad Blue Reset (Diesel Engine Exhaust Gas Filter)**

After the diesel exhaust treatment fluid (car urea) is replaced or filled up, urea reset operation is required.

### **Seat Calibration**

This function is applied to match the seats with memory function that are replaced and repaired.

### **Coolant Bleeding**

Use this function to activate the electronic water pump before venting the cooling system.

## Tyre Reset

This function is used to set the size parameters of the modified or replaced tire.

## Windows Calibration


This feature is designed to perform door window matching to recover ECU initial memory, and recover the automatic ascending and descending function of power window.

## Language Change

This function is used to change the system language of the vehicle central control panel.


## Think File

It is used to record and establish the file of the diagnosed vehicles. The file is created based on the vehicle VIN and check time, including all diagnostic-related data such as diagnostic reports, data stream records and screenshots.

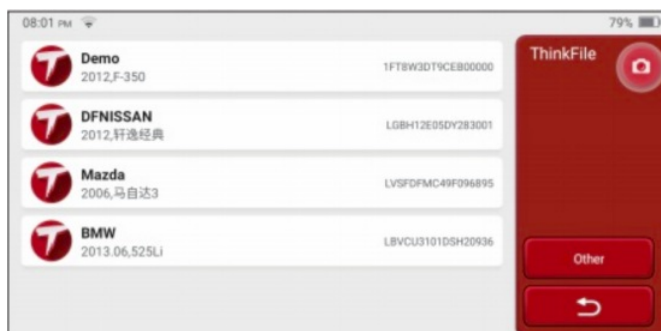


## Think Store

Think Store, launched by THINKCAR TECH, is the place where you can download all diagnostic software and purchase hardware products. In the store, vehicle diagnostic and maintenance software can be bought. Each diagnostic software has a detailed function introduction, as well as user ratings and comments on the software. All THINKCAR hardware products can also be purchased online and the price can be deducted by using points (1 point = 1 USD).

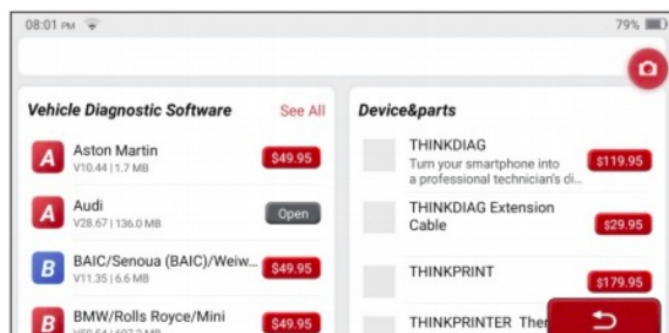

**Tips:** The purchase of a THINKSCAN Max host computer includes one-year free usage

right of five software. When you need to use other diagnostic software, extra fees should be paid.

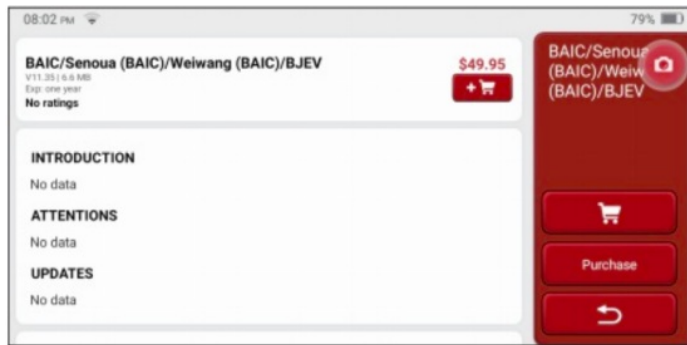

## Repair Info


It includes 4 items, namely, a fault code data base, a table of vehicles able to be diagnosed, videos, a learning course. The maintenance technician can quickly refer to the explanation of the fault codes, and understand all the vehicles that can be diagnosed through the table.

The videos contain equipment usage guides, maintenance and diagnosis guides. The learning course demonstrates how tools are operated. These four functions help technicians quickly grasp the equipment use and improve diagnostic efficiency.

## Software update

This module allows you to update the diagnostic software & App and set frequently used software.

If you did not download the software in process of product registration or a pop-up message prompting you that some new software can be updated, you may use this option to download it or keep it synchronized with the latest version.

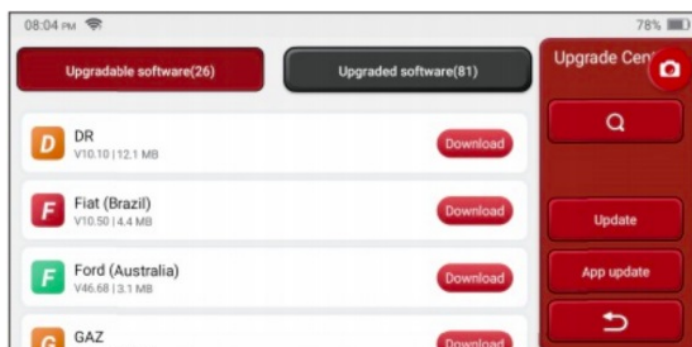

## Settings

The host uses system settings. After the initial setting is completed, the user can modify or add related information here or swipe the screen from the top to make settings.

## Account information

Users need to register the following information including email, points, orders, homepage, etc.


**Points:** Points can be earned by participating in events organized by THINKCAR, or by recommending others to purchase our products. Every 1 point deducts 1 USD when purchasing THINKCAR's products and services.

**Cart:** check and manage the shopping cart.

**Order:** diagnostic software purchase records.

**Feedback:** allows you to feedback the diagnostic software/app bugs to us for analysis and improvements.

**Dongles:** It is used to activate diagnostic dongle and bind to the host, which can realize wireless diagnosis by connecting to Bluetooth.

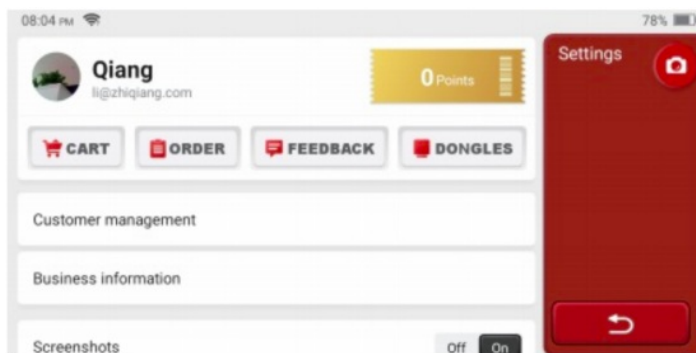

## Customer management

Information of all clients whose vehicles have been diagnosed will be displayed here in turn.

## Business information

Add the repair shop information, which will be displayed to the owner in the diagnostic.

## Network

Set the connectable WIFI network.

## Firmware upgrade

Used to update the firmware.

## Q & A

Here we list some common questions and answers related to this tool.

---

**Q: Why does it have no responses when connected to a car computer?**

A: Check whether the connection with the vehicle diagnostic socket is normal, whether the ignition switch is on, and whether the tool supports the car.

---

**Q: Why does the system stop while reading the data stream?**

A: This may be caused by loose diagnostic dongles. Please unplug the dongle and reconnect it firmly.

---

**Q. Communication error with vehicle ECU?**

A: Please confirm: 1. Whether diagnostic dongle is correctly connected. 2. Whether ignition switch is ON. 3. If all checks are normal, send vehicle year, make, model and VIN number to us using Feedback feature.

---

**Q: Why does the host screen flash when the engine ignition starts?**

A: It is normal and caused by electromagnetic interference.

---

**Q: Please explain the account and points.**

A: To use THINKSCAN Max, you need to register an account. Each account has the opportunity to earn points by recommending others to buy products and participating in official events. 1 point can be deducted for 1 dollar when purchasing products or services.

## **Warranty Terms**

This warranty applies only to users and distributors who purchase THINKCAR TECH INC products through normal procedures. Within one year from the date of delivery, THINKCAR TECH warrants its electronic products for damages caused by defects in materials or workmanship. Damages to the equipment or components because of



abuse, unauthorized modification, use for non-designed purposes, operation in a manner not specified in the instructions, etc. are not covered by this warranty. The compensation for dashboard damage caused by the defect of this equipment is limited to repair or replacement.

THINKCAR TECH does not bear any indirect and incidental losses. THINKCAR TECH will judge the nature of the equipment damage according to its prescribed inspection methods. No agents, employees or business representatives of THINKCAR TECH are authorized to make any confirmation, notice or promise related to THINKCAR TECH products.

**Service Line:** 1-[833-692-2766](tel:833-692-2766)

**Customer Service Email:** [support@mythinkcar.com](mailto:support@mythinkcar.com)

**Official Website:** [www.mythinkcar.com](http://www.mythinkcar.com)

Products tutorial, videos, FAQ and coverage list are available on Think car official website.

**Follow us on**




@thinkcar.official



@Obd Think car

## Documents / Resources

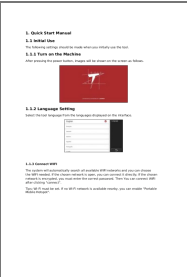	<p><a href="#">THINKCAR THINKSCAN Max Car Diagnostic Scan Tool [pdf]</a> Instruction Manual</p> <p>THINKSCAN Max Car Diagnostic Scan Tool, THINKSCAN Max, Car Diagnostic Scan Tool, Diagnostic Scan Tool, Scan Tool</p>
---	---

## References

- [User Manual](#)

THINKCAR

Car Diagnostic Scan Tool, Diagnostic Scan Tool, Scan Tool, THINKCAR, THINKSCAN Max, THINKSCAN Max Car Diagnostic Scan Tool

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.