Home » Support » A800R IPV6 function settings 🖺

# A800R IPV6 function settings

#### **Contents**

- 1 A800R IPV6 function settings
- 2 DOWNLOAD
- **3 Related Posts**

## A800R IPV6 function settings

It is suitable for: A800R

**Application introduction:** This article will introduce the configuration of IPV6 function and will guide you to configure this function correctly. In this article, we will take A800R as an example.

Note:

Please make sure that you are provided IPv6 internet service by your internet provider. If not, please contact with your IPv6 internet provider first.

### STEP-1:

Make sure you have set up an IPv4 connection either manually or by using the Easy Setup wizard before setting up an IPv6 connection.


#### STEP-2:

Connect your computer to the router by cable or wireless, enter http://192.168.0.1




#### STEP-3:

Please go to **Network ->WAN setting.** Select **WAN Type** and configure the IPv6 parameters(here is PPPOE as an example). Click **Apply**.

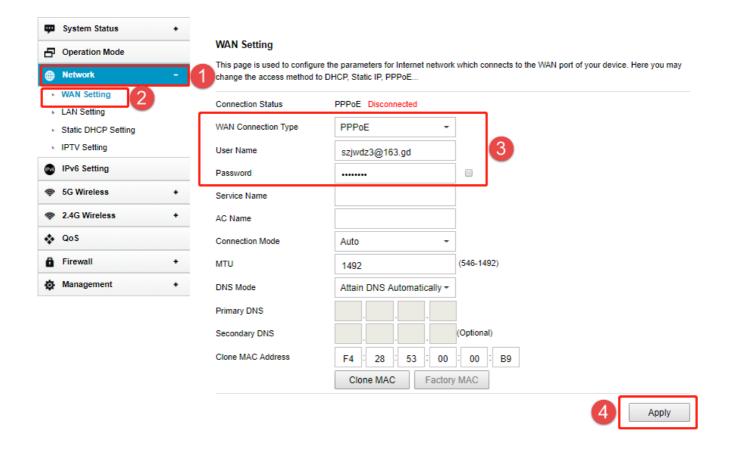

#### STEP-4:

Switch to the IPV6 configuration page. **Enable** IPv6, and configure the IPv6 parameters(here is PPPOE as an example). Click **Apply**.

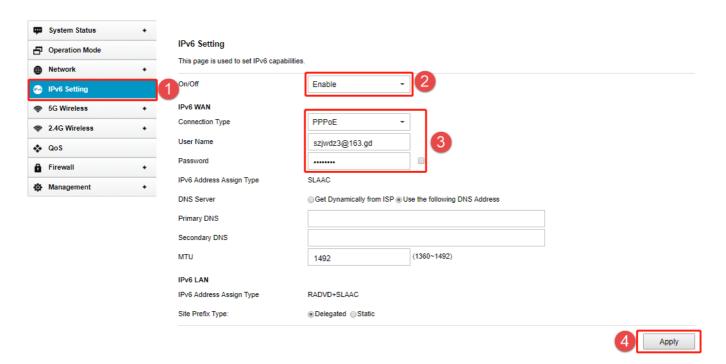

Finally in the status bar page to see if you get the IPV6 address.

## **DOWNLOAD**

A800R IPV6 function settings – [Download PDF]			

Manuals+,