

TRIACLE

Spark Two Kids
Activity Tracker
Smartwatch



TRIACLE Spark Two Kids Activity Tracker Smartwatch Instruction Manual

[Home](#) » [TRIACLE](#) » TRIACLE Spark Two Kids Activity Tracker Smartwatch Instruction Manual 

Contents

- 1 TRIACLE Spark Two Kids Activity Tracker Smartwatch
- 2 Warning and Precautions
- 3 Quick start guide
- 4 How to use
- 5 Main Menu
- 6 Specification
- 7 Documents / Resources
 - 7.1 References
- 8 Related Posts

TRIACLE

TRIACLE Spark Two Kids Activity Tracker Smartwatch



Thank you for choosing the TRIACLE SPARK TWO Kids Activity Tracker Smartwatch. Please read this manual carefully and retain it for future reference.

To achieve optimum performance, please ensure the product is fully charged before attempting to use. Please read this instruction manual completely before use.

This Triacle Kids Activity Tracker Smartwatch is not a medical device. All sports or activity data recorded and outputted by this device are for your exercise reference but not intended for medical or diagnostic information. Always consult your physician for a professional diagnosis.

Warning and Precautions

1. Your Triacle Kids Activity Tracker Smartwatch must be connected with your smartphone via the “Fit4Kid” App. Use the “Fit4Kid” App to search and connect this device; do not search it via Bluetooth settings in your smartphone.
2. This model has an IP68 water resistance rating which makes it fit for use in rain, during showers and swimming. The model should, however not be put under water for more than 30 minutes at a time and not deeper than 1 meter. Please dry it thoroughly after it’s been used in a wet environment, and especially before charging the battery.
3. The device has built-in battery. Do not place the device near sources of excessive heat. The source or power supply of charging must be located near the device and should be easily accessible.
4. Please do not use any corrosive chemicals to clean the device. Use a soft cleaning cloth for the watch and some mild soap and water for the band.
5. To prevent technical problems due to water:
 1. Do not use the device in water deeper than 1 meter.
 2. Do not submerge the device in water for more than 30 minutes at the time.
 3. Dry of the device completely using some form of cloth or paper towel after use in wet environments.
 4. Make sure the device is completely dry before charging.


Quick start guide

Overview



1. Touch screen
2. Button
3. Charging POGO PINS
4. Camera

- Make sure the POGO-pins on the charging cable fit correctly onto the charging terminals on the back of your smart watch.
- Plug the big end of the USB cable into the power supply, match the magnetic end with the watch. When it is connected successfully, a charging icon will appear on the screen.

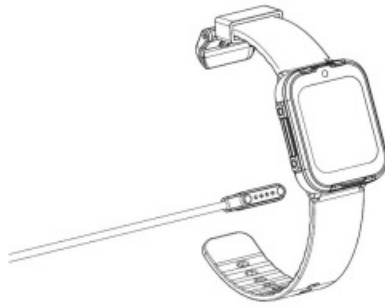

Install “Fit4Kid” App on phone.

Search “Fit4Kid” App from Google Play or Apple Store, download and install it in your smartphone. Connect Kids Activity Tracker Smartwatch with your smartphone.

1. Enable Bluetooth on your smartphone.
2. Open “Fit4Kid” App on your smartphone, set your kids profile in Settings.
3. Tap “Connect Smartwatch” in Settings and select “TRISPARK2” to connect.

Unbind the Fitness Activity Tracker Smartwatch with mobile phone.


1. Open “Fit4Kid” App on your smartphone
2. Tap “Forget this Smartwatch” in Settings.
3. Please select “TRISPARK2” and click “Forget This Device” in Bluetooth setting on your smart phone. (For iPhone only).

How to use

- Power on: Press and hold the button on the side of the watch for about 3 seconds.
- Go to main menu: Slide from left to right on main interface; slide up and down to check more functions.
- Select a function: Slide up and down; tap the icon.
- Confirm: Tap the icon.
- Exit menu: Slide from left to right on the screen or click side button.

Shortcuts

Slide up and down from the main interface.

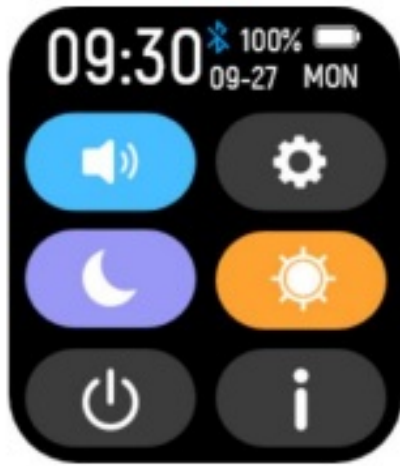

Adjust the volume of your watch.



Go to the setting.



Do not Disturb mode



Brightness Adjustment.



Power Off



System information

Main Menu


Daily Activity

The watch automatically records your daily activity data, counts walking steps and kilometers you have covered every day.



Reward

You can add some tasks and corresponding reward mechanism to your watch through the APP, then you can see these tasks and the number of rewards on the watch, confirm the rewards by completing the tasks.

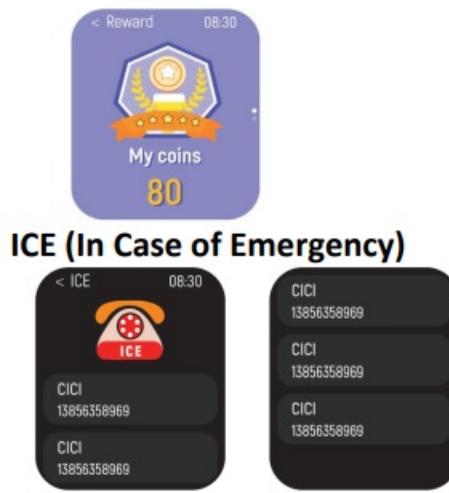


You can add information of 3 contacts to the watch through the App. Input your emergent contact information into the ICE widget, so it can quickly be accessed when necessary.

Games


There are four games to play, including Pedometer, Math, Puzzle, and 2048.

Pedometer

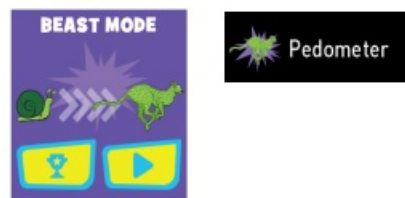

Tap this icon to enter the Pedometer game. Completing the corresponding steps will show different characters.

Math

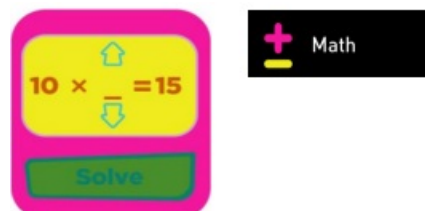


Tap this icon to enter the Math game. Tap the up or down icon to select a correct number, then tap the 'Solve' button to enter. Each correct answer endues 10 points. When you collect 100 points, you will pass the game.

Puzzle



Figure out a complete picture in whole, keep sliding a cell next to the space cell until the correct picture is completed.

2048

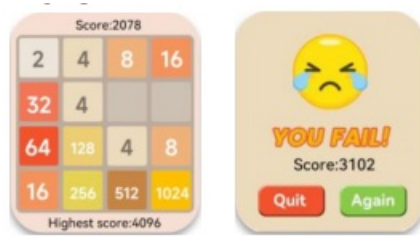

Slide to combine the same numbers to make the number in each cell as big as possible, and the screen refresh to pop up with more numbers. When all cells are occupied and the screen no longer refreshes with new numbers, the game is over.

Learn Card

There are four kinds of cards to learn: Animal, Colors, Fruit and Greens.



Storybook

When you listen story, you can see the plot of the story book.



Camera


Tap the camera to take a photo by the watch. Tap the left icon to choose two photo effects. Tap the middle icon for snap snapshot. Tap the right icon for photo display. In display mode, tap the trash bin icon to delete the photo.






Recorder


Tap the Recorder icon  to enter the recorder function. Click the Microphone icon  to start the voice

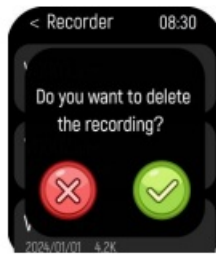recorder. Tap it again to stop recording. Tap the 3-dot icon  to playback the recordings or delete all. Long press a recording file until it pops up a note "Do you want to delete the recording?", then tap the tick icon to confirm or the cross icon to return.




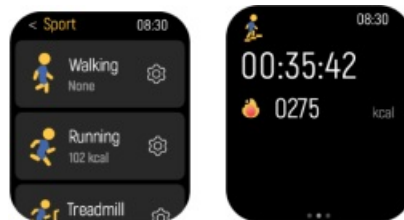
Video


Tap the Video icon  to enter the video recorder function. Click the recording icon  to start and stop. Click the video action icon  to playback or delete all recordings. Long press a recording file until it pops up a note "Do you want to delete the recording?", then tap the tick icon to confirm or the cross icon to return.

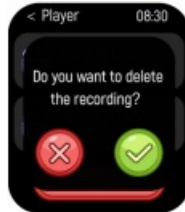


Exercise

Tap the Exercise icon  to enter the multi-sport mode. The smart watch has 22 sport modes. Slide up or down the screen to choose a desired sport mode then do that sport. The smart watch will record your exercise data.




If you want to end the exercise, slide the screen to the right and tap the End icon  to finish your sport and save the data.

Music

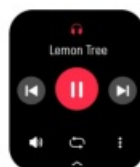

Tap the Music icon to play music. You can select the previous/next song, and play/pause music. To exit music playback control, slide the screen from left to right.

How to download the local music into the watch?

Enter 'Settings' on the watch and tap PC mode icon , then connect the watch by the charging cable with your computer. The computer will pop up a folder of USB flash drive. Copy the music files from your computer to the watch (USB drive). You also can connect to Bluetooth headphones to listen to music.

How to connect a Bluetooth headset

Tap the 3-dot icon in the Audio Channel, then you can see "My TWS", click it, and it will automatically search for your Bluetooth earphones. Click the correct Bluetooth name to connect successfully.





Alarm clock


Enter the 'Alarm' setting to add an alarm reminder on the App or on the watch.





Stopwatch

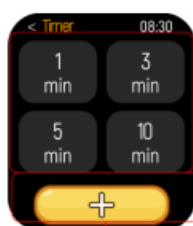


Enter stopwatch mode and tap the Play icon  to start the timer. Tap it again to stop. Tap the return icon  to clear off the timer.

Timer




Click this icon  to set the target time. The watch will vibrate when the countdown is over. Press the play icon  to start the timer, press the pause icon  to pause. Press the reset icon  to reset.


Breathing

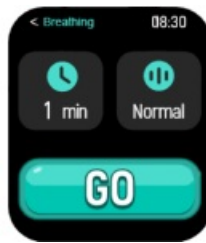


Breathing training is available. You can set the time and speed. Then press “GO” to follow the training.


Edit Card

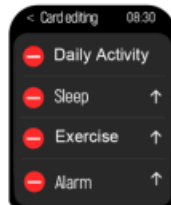


Press the arrow icon  to adjust the menu order. Return to the main menu and slide from right to left, you can get the menu shortcuts in the order you set.

Player

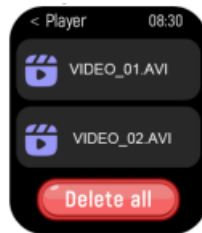


Click this icon  to play the video you shot. Long press it to delete the video you don't need.

Sedentary

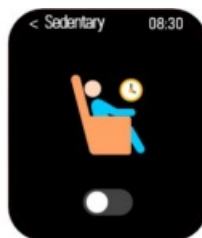

On the Fit4Kid App, set the start time and the end time in the Sedentary mode. You can turn on or off sedentary reminder on the watch. Slide from left to right on the screen to exit.

Settings

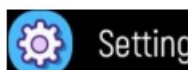



Find My Phone.



Brightness: Tap the brightness icon to adjust the screen brightness.



Screen Duration: Choose different screen display duration time, from the longest of 200s to the shortest of 5s.



Dial Option: Choose different clockfaces as you like.



Menu View: Choose different menu style.



DND Mode: Do not disturb mode.



Power Saving.



Language: Choose 5 different languages on the watch.



Vibration Intensity: Adjust the vibration intensity.



Calculator.



Restart: Tap to restart the watch.



Reset: Tap to reset the watch.

Please note when you tap the tick icon to confirm reset, all your preset personal data in the watch will be erased. Tap the cross icon to exit



Power Off.



System: Tap to find the MAC address, BT name, etc.



Switches: Enter 'Switches' reminder, 'Smart Wake up' or 'Drink Water reminder' to enable or disable 'Sedentary'. *(Please set them on the APP before use.)*



Time Setting: Enter to set the time and date in the watch.



PC Mode: Tap to connect a computer with the watch to transfer photo or MP3/WMA music files.

Specification

- Product TRIACLE Spark Two Smart kids watch
- Screen 1,7" IPS Touch Screen
- Battery 300mAh
- Charging Mode Magnetic USB Charge Cable
- Charging Voltage DC 5V 500mA
- Charging time Up to 3 hours
- Working Time Up to 5 days

- Standby time Up to 15 days
- Operation Full Touch



■ This symbol on product or in instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.
Power International AS, PO Box 523, 1471 Lørenskog, Norway

Power Norge:

<https://www.power.no/kundeservice/>

T:21 00 40 00

Expert Danmark:

<https://www.expert.dk/kundeservice/>

T:70 70 17 07

Power Danmark:

<https://www.power.dk/kundeservice/>

T:70 33 80 80

Punkt 1 Danmark:

<https://www.punkt1.dk/kundeservice/>

T:70 70 17 07

Power Finland:

<https://www.power.fi/tuki/asiakaspalvelu/>


T:0305 0305

Power Sverige:





<https://www.power.se/kundservice/>

T: 08 517 66 000

Documents / Resources

	<p>TRIACLE Spark Two Kids Activity Tracker Smartwatch [pdf] Instruction Manual Spark Two Kids Activity Tracker Smartwatch, Activity Tracker Smartwatch, Tracker Smartwatch</p>
---	--

References

-  [Kundeservice - Expert.dk](#)
-  [POWER Kundeservice - Power.dk](#)
-  [Kundeservice - Power.no](#)
-  [Kundeservice - Power.se](#)

- [!\[\]\(effbd7993c63c039a58fd3395789cf3f_img.jpg\) **Kundeservice - Punkt1.dk**](#)
- [**User Manual**](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.