



## UNI-T UT501C Insulation Resistance Tester User Manual

[Home](#) » [UNI-T](#) » UNI-T UT501C Insulation Resistance Tester User Manual 

# UNI-T®



P/N:110401110429X  
UT501C/UT502C  
Insulation Resistance Tester  
User Manual



## Contents

- [1 Preface](#)
- [2 Limited Warranty and Liability](#)
- [3 Overview](#)
- [4 Safety Instructions](#)
- [5 Technical Specifications](#)
- [6 External Structure](#)
- [7 LCD Description](#)
- [8 Button and Rotary Switch Functions](#)
- [9 AC Voltage Test](#)
- [10 Insulation Resistance](#)
- [11 Common Connection Methods of Insulation Resistance Test](#)
- [12 Battery Replacement and Adapter Power Supply](#)
- [13 Maintenance](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)

## Preface

Thank you for purchasing this brand-new product. In order to use this product safely and correctly, please read this manual thoroughly, especially the safety notes.

After reading this manual, it is recommended to keep the manual in an easily accessible place, preferably close to the device, for future reference.

## Limited Warranty and Liability

Uni-Trend guarantees that the product is free from any defect in material and workmanship within one year from the purchase date. This warranty does not apply to damages caused by accident, negligence, misuse, modification, contamination, or improper handling. The dealer shall not be entitled to give any other warranty on behalf of Uni-Trend. If you need warranty service within the warranty period, please contact your seller directly.

Uni-Trend will not be responsible for any special, indirect, incidental, or subsequent damage or loss caused by using this device.




## Overview

UT500 series digital insulation resistance testers, with their new design, large-scale integrated circuit, and digital circuit, are utilized to measure insulation resistance, alternating voltage, and other parameters. This series of testers have features of complete functions, high accuracy, stable performances, and comfortable and reliable operation. The tester is used in maintenance, test, and verification for various electrical equipment and is applicable to measure the insulation resistance of the transformer, motor, cable, switch, electric appliances, etc.

## Safety Instructions

The Tester is designed and manufactured according to the safety requirements of the electronic measuring apparatus and IEC61010-1 safety standards. It conforms to double-insulation overvoltage standard (CAT III 600V) and safety standards of pollution degree II. The protection supplied by the Tester can be compromised or lost if you do not observe the operating instructions to use the Tester.

### **Symbols description 1:**

	Danger	Identify conditions that could cause severe or fatal harm.
	Warning	Avoid electric shock hazard
	caution	Avoid damage to the Tester and make accurate measurements.


### **Danger**

- Do not measure in circuits with voltage above AC 750V.
- Do not test in flammable places. Sparks may cause an explosion.
- Never use the Tester if its surface or the operator's hands are wet.
- Do not touch the live part of the test probe during measurement.
- Never open the battery cover during measurement.
- Do not touch the circuit under test when measuring insulation resistance. ,




### **Warning**

- Stop using the Tester if it behaves abnormally (such as bare test lead, or damaged tester).
- Be cautious when the test is conducted under voltage above 30Vrms, 42.4Vacrms, or 60Vdc, such voltages may pose a shock hazard!
- Do not replace the battery in damp environments.
- Ensure secure connection between all test leads and test ports of the Tester.
- Please switch off the Tester and remove the test leads before replacing the batteries.
- Please read the user manual before use.
- Observe the requirements of the user manual in any situation. Keep the manual an easily accessible place for future reference.
- Misoperation can cause accidents and damage to the Tester during measurement.

### **Caution**

- Before measuring insulation resistance, the circuit to be tested must be fully discharged and separated from other power circuits.
- If the test leads appear damaged, replace them with test leads with the same model and electric specification.
- Stop using the Tester when the symbol  indicates a low battery. If the Tester is not used for an extended period of time, please store the Tester after removing the battery.
- Do not use or store the Tester in high temperature, high humidity, flammable, explosive, or strong magnetic field environments.

## **Symbols description 2:**

	Possible electric shock
	Double or reinforced insulation
<b>DC</b>	Direct current
<b>AC</b>	Alternating current
	Earth (ground) terminal

## Technical Specifications

Error limit:  $\pm$  (a% Reading+ Number of digit), one year warranty.

Ambient temperature: (23 $\pm$ 5) °C Ambient humidity: 45%-75%

### 3.1 UT501C Insulation Resistance Test Index

Voltage rating	100V	250V	500V	1000V
Measurement range	0.00M $\Omega$ -100M $\Omega$	0.00M $\Omega$ -500M $\Omega$	0.00M $\Omega$ -2.00G $\Omega$	0.00M $\Omega$ -5.00G $\Omega$
Open-circuit voltage	DC 100V+10%	DC 250V+10%	DC 500V+10%	DC 1000V+10%
Test current rating	Loaded at 1001 $\Omega$ . 1.0mA-1.1mA	Loaded at 2501 $\Omega$ . 1.0mA-1.1mA	Loaded at 5001 $\Omega$ . 1.0mA-1.1mA	Loaded at 1001 $\Omega$ . 1.0mA-1.1mA
Short-circuit current	< 2.0mA approximately			
Accuracy range	0.00M $\Omega$ -99.9M $\Omega$ : $\pm$ (3%+5); 100M $\Omega$ -5.00G $\Omega$ : $\pm$ (5%+5)			





### 3.2 UT502C Insulation Resistance Test Index

Voltage rating	250V	500V	1000V	2500V
Measurement range	0.00m $\Omega$ -500M $\Omega$	0.00M $\Omega$ -2.00G $\Omega$	0.00M $\Omega$ -5.00G $\Omega$	0.00M $\Omega$ -20.0G $\Omega$
Open-circuit voltage	DC 250V+10%	DC 500V+10%	DC 1000V+10%	DC 2500V+0%
Test current rating	Loaded at 250K $\Omega$ . 1.0mA-1.1mA	Loaded at 500K $\Omega$ . 1.0mA-1.1mA	Loaded at 1M $\Omega$ . 1.0mA-1.1mA	Loaded at 2.5M $\Omega$ . 1.0mA-1.1mA
Short-circuit current	< 2.0mA approximately			
Accuracy range	0.00M $\Omega$ -99.9M $\Omega$ : $\pm$ (3%+5); 100M $\Omega$ -9.99G $\Omega$ : $\pm$ (5%+5); 10.0G $\Omega$ -20.0G $\Omega$ : $\pm$ (10%+5)			


### 3.3 Voltage Test Index

Alternating Voltage		
Test range	30V-750V	(50/112/60Hz)
Resolution		1V
Accuracy	$\pm (2\%/4-3)$	


### 3.4 Functions and Features

- Auto-range function.
- Auto power off function. The Tester powers off automatically after 10 minutes of inactivity.
- Data hold: The data hold function is enabled when measuring the insulation resistance function, it is disabled for AC voltage measurement.
- The measured insulation resistance itself is charged ( $>30V$ ), and the symbol  will flash when the insulation resistance test function is turned off.
- After starting up, a full display will appear on the LCD for about 1 second, display screen: an 80.0'50.0mm visible area, the maximum display is "9999".
- Low battery indication: when the battery power is  $C:7\pm0.2V$ , the symbol  lights up: when the battery power is  $tC6.4V$ , the symbol  flashes 10 times and the Tester shuts down automatically.
- Powered by adapter (without charging function): the symbol  is displayed in priority when charged by an adapter, the battery symbol is not displayed.
- Overrange Indication: Overrange indication for insulation resistance measurement is  $>110M\Omega$ ,  $>550M\Omega$ ,  $>2.2000$ ,  $>5.5000$ , or  $>22.000$ : overrange indication for AC voltage is  $>750V AC$ .
- Auto backlight function: the backlight lights up for about 5 seconds when the Tester is turned on. The backlight automatically turns on when the measurement starts for the insulation resistance test, and it automatically turns off when the measurement stops. The backlight function is disabled for AC voltage measurement.
- Red warning light: the light is on when high voltage is output.
- Operating condition: temperature:  $0^{\circ}C-35^{\circ}C$ ; humidity:  $-C.- 75\%RH$ ; altitude:  $-...2000m$ .
- Storage condition:  $-20^{\circ}C-60^{\circ}C$ , humidity:  $-...80\%RH$ .
- External dimension: 183.5(L)x115(W)x74mm(D).
- Power supply: 6x 1.5V AA alkaline batteries or dedicated power adapter (Optional), (Model: XZF48-156000; Input: AC 230V-501-1z 90mA; Output: DC 15V 0.6A)
- Weight: 0.6kg (including batteries).
- Accessories: test leads, alligator clips, user manual, carrying bag, strap.


### External Structure

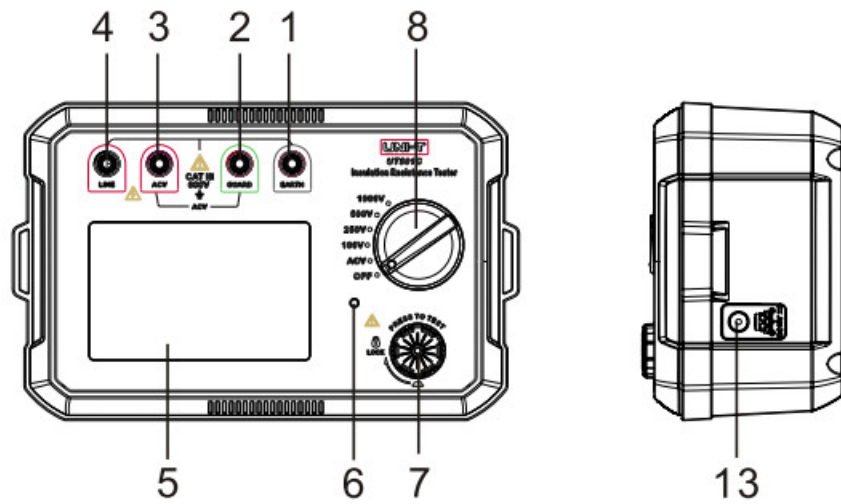

- |   |  |
|---|--|
| <p>1) EARTH: Terminal for insulation resistance sampling test</p> <p>2) GUARD: Negative input terminal for voltage test lead</p> <p>3) ACV: Positive input terminal for AC voltage test lead</p> <p>4) LINE: Terminal for high voltage output test lead</p> <p>5) Liquid Crystal Display</p> <p>6) High voltage output warning indicator</p> <p>7) Insulation resistance test buttons</p> | <p>8) Functional rotary switch</p> <p>9) UT501C alligator clip</p> <p>10) UT501C test probe</p> <p>11) UT502C alligator clip</p> <p>12) UT502C test lead</p> <p>13) Power adapter port</p> |
|---|--|



## LCD Description

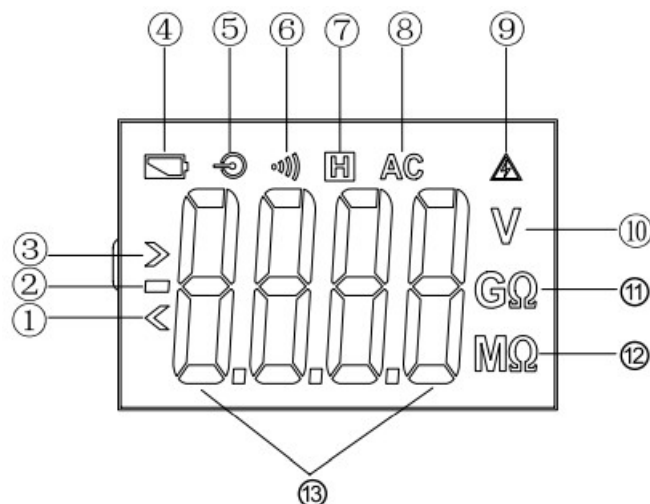

1	Less than	8	Alternating current
2	Negative value	9	High voltage alarm
3	Greater than	10	Voltage unit
4	Battery symbol	11	Insulation resistance unit (GO)
5	Powered by adapter	12	Insulation resistance unit (MO)
6	The audible and visual alarm symbol	13	Displayed value
7	Data hold		


## Button and Rotary Switch Functions

1. Turn on/off high voltage measurement with “TEST”.
2. Turn the rotary switch to the ACV position for AC voltage measurement.
3. UT501C rotary switch can be turned to 100V/250V/500V/1000V position, and UT502C rotary switch can be turned to 250V/500V/1000V/2500V position, selected desired output voltage for insulation resistance measurement.
4. The Tester shuts down automatically after 10 minutes of inactivity. To reboot the Tester turn the rotary switch from OFF to the desired position (The Tester can be turned on at the functional position by connecting the adapter or plugging the battery).

## AC Voltage Test

Both UT501C and UT502C have AC voltage measurement functions. Do not measure AC voltage over 750V to avoid damage to the Tester. Considering external interference during the AC voltage test. ACV and GUARD test probes can be used to short-circuit for zero calibration. The figure and AC voltage measurement steps are shown as below:

1. Turn the rotary switch to the ACV position for AC voltage measurement.
2. Connect the red test lead to the “ACV” input terminal, and connect the black test lead to the “GUARD” input terminal.

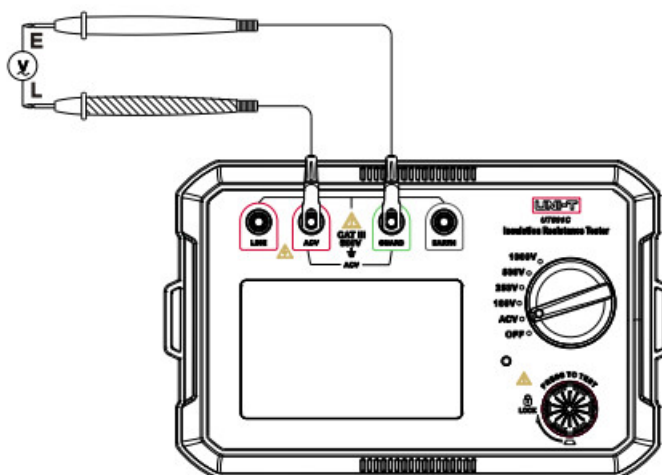


- Do not input AC voltage over 750Vrms. It's possible to display higher voltage, but it may damage the Tester or pose a shock hazard.
- Disconnect the test lead from the measured circuit and remove them from the input terminal after all measurement operations are completed.
- Do not conduct a test with the battery cover opened, otherwise it may pose an electric shock.

## Insulation Resistance

### Caution

- Two test leads must be separated during measurement.
- Clamp the insulation resistor before high voltage output.
- Do not short-circuit two test leads at high voltage output.

Do not conduct a test with the battery cover opened, otherwise it may pose an electric shock.

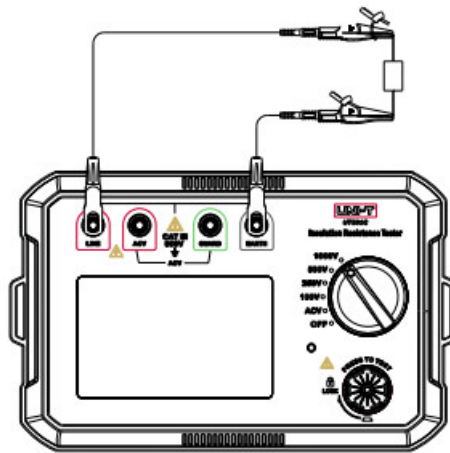

### 1. Press the functional knob to select a test voltage

- (1) Before measuring insulation resistance, the circuit to be measured must be fully discharged and separated from the power circuit.
- (2) Connect red test lead to 'LINE' input terminal, and connect black test lead to "EARTH" input terminal.
- (3) Connect red and black alligator clips to the measured circuit, the voltage is output from the LINE terminal.

### 2. Continuous measurement operation

After selecting a test voltage, press and rotate TEST to LOCK position for continuous measurement, output insulation resistance test voltage, the indicator lights up red. After the test is completed, press and rotate the TEST button to unlock and stop the test.

### Caution


- Make sure that the circuit to be tested is fully charged, do not measure live devices or circuits.
- Do not touch the circuit after the test is completed, the capacitance stored in the circuit can pose electric shock.
- Disconnect the test lead from the connected circuit, do not touch it by hand until the test voltage is fully discharged.
- Do not conduct a test with the battery cover opened, otherwise it may pose an electric shock;




## Common Connection Methods of Insulation Resistance Test

### 9.1 Cable Insulation Resistance Test

A. Common two-wire measurement connection method Test whether there is leakage current in the two conductors of the same cable. Connect the two ports of the insulation resistance test to the metal body of the two conductors in the same cable. Measure the insulation resistance between the two conductors. As shown below:

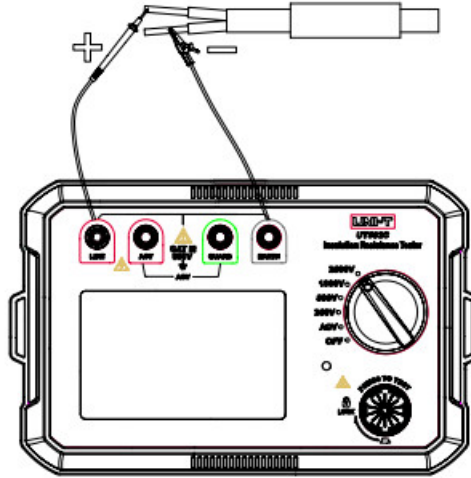


B. Common single-wire measurement connection method Measure the resistance value between the conductor wire and the bare metal wire to determine whether there is a leakage current in the conductor. As shown below:

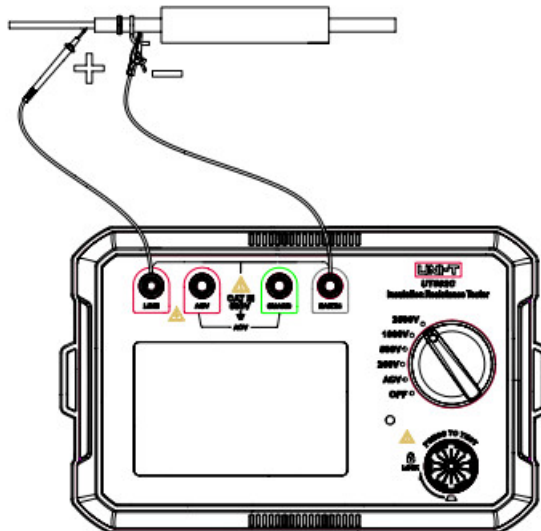


### 9.2 Transformer Insulation Resistance Test


A. Test of Insulation Resistance between Primary Winding and Secondary Winding Grounding

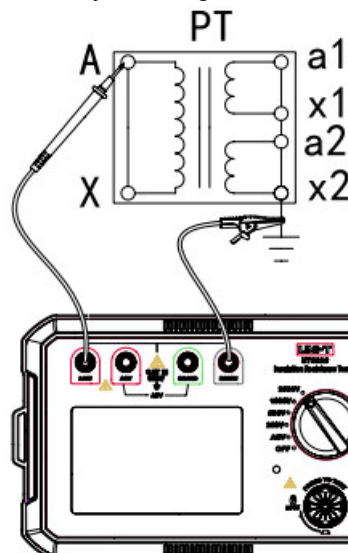


## B. Test of Insulation Resistance between Primary Winding Grounding and Secondary Winding

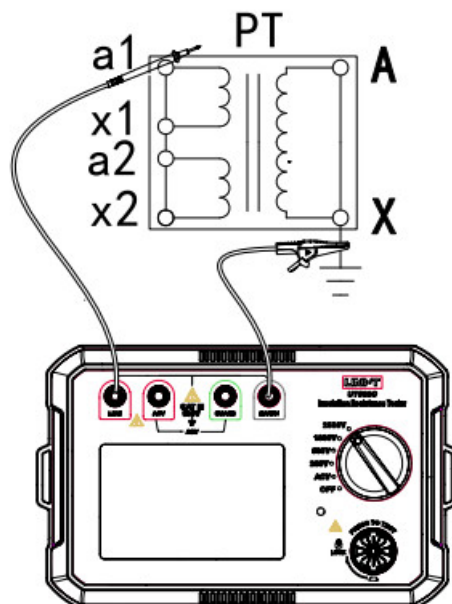


## C. Test of Insulation Resistance between Secondary Windings

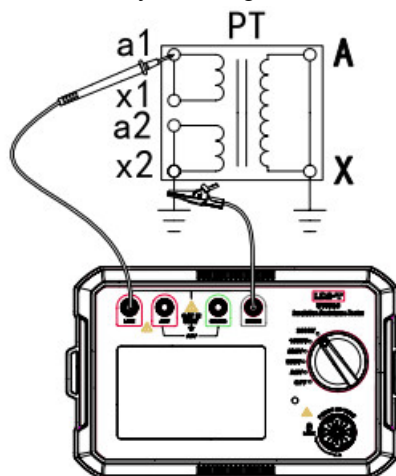

## D. Test of Winding and Magnetic Core

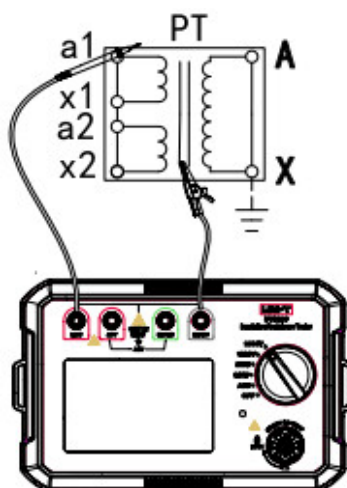

## Battery Replacement and Adapter Power Supply

Low voltage symbol	Battery voltage
	≤7V

Follow the steps below to replace the batteries:

1. To avoid electric shock, turn the functional rotary switch to the OFF position to power off the Tester and remove test leads before replacing the batteries.
2. Unscrew and remove the battery cover to replace it with 6pcs 1.5V AA alkaline batteries.
3. Tighten the screws after the replacement.


### **Caution**

- Do not mix new and old batteries.
- The same brand of battery is recommended.
- Pay attention to the battery polarity when installing batteries.
- Do not measure if the battery compartment is open.



### **Powered by adapter:**

1. Power off the Tester and remove all test leads before switching batteries and power adapter.
2. Use dedicated power adapter only (Model: XZF48-15600D).
3. Connect the power adapter to the power port of the Tester before measurement. As shown below:

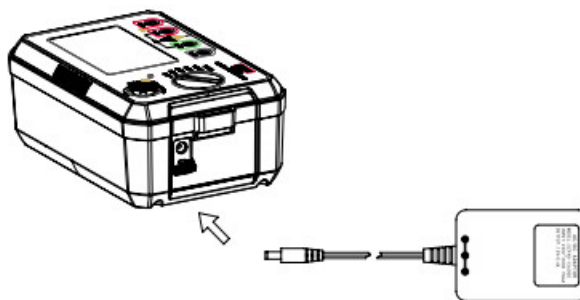

## **Maintenance**

### **Clean the Tester housing:**


- Wipe the Tester housing with a soft cloth or sponge dampened with clear water. Do not use abrasives or solvents.
- Do not immerse the Tester in water to avoid damage. If water gets into the Tester accidentally, please have it repaired by a professional.
- If the Tester is wet, allow time for drying before storing it.
- Have a qualified professional or designated department repair or service the Tester.

The contents of this manual are subject to change without notice.



UNI-TREND TECHNOLOGY (CHINA) CO., LTD.  
No.6, Gong Ye Bei 1st Road,  
Songshan Lake National High-Tech Industrial  
Development Zone, Dongguan City,  
Guangdong Province, China

## Documents / Resources

	<p><a href="#">UNI-T UT501C Insulation Resistance Tester</a> [pdf] User Manual UT501C, UT502C, Insulation Resistance Tester, Resistance Tester</p>
---	--

[Manuals+](#).