



UNI-T UT801 Bench Type Digital Multimeters User Manual

[Home](#) » [UNI-T](#) » UNI-T UT801 Bench Type Digital Multimeters User Manual 

Contents

- [1 UNI-T UT801 Bench Type Digital Multimeters](#)
- [2 Overview](#)
- [3 Safety Information](#)
- [4 General Specifications](#)
- [5 LCD Display](#)
- [6 Functions](#)
- [7 Operational Measurement Guide](#)
- [8 Accuracy Specifications](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



UNI-T UT801 Bench Type Digital Multimeters



Overview

Digital Bench-Type Multimeter Model UT801 is the maximum reading 1999 and 3 1/2 digits and UT802 is the maximum reading 19999 and 4 1/2 digits, both models are in manual range, DC / AC current type digital multimeter, This is also the extra large characters in LCD display backlight with full function, full measurement and full overload protection, as well as a good product design outlook, In addition to all the conventional features, include DC/AC voltage, DC/AC current, resistance, frequency, capacitance, temperature °C, Transistor hFE diode and continuity buzzer.

This operating manual covers information on safety and cautions. Please read the relevant information carefully and observe all the Warnings and Notes strictly.

Unpacking Inspection


Open the package case and take out the Meter. Check the following items carefully to see any missing or damaged part. If you find any missing or damage, please contact your dealer in your country.

- Operating Manual 1 piece
- Test Lead 1 pair
- Alligator Clip 1 pair
- K Type Temperature Probe 1 piece (For the temperature under 230°C testing)
- Multi-Purpose Socket 1 piece
- Power Cord 1 piece (AC220V 50Hz DC9V/200mA)

Safety Information



This Meter complies with the standards IEC61010-1 in pollution degree 2, overvoltage category (CAT II 1000V) and double insulation. If you can not follow up this operating instruction to use the meter and it reduces the chance to have an using protection.

1. Before using the Meter and Test Leads inspect both items. Do not use the Meter and Test Leads if it is damaged or the case (or part of the case) is removed or no reaction on LCD display. Prohibited to use the meter without housing or housing without screw fix up in order to avoid possible electric shock or to avoid possible damage to the meter or to the equipment under test.

2. If the damage of test leads, use only the same model number or identical electrical specifications replacement parts.
3. Do not use your finger to touch on any testing cable, connector, unused terminal input or circuit during the testing stage.
4. When the meter working at an effective voltage over 60V in DC or 30V rms in AC, special care should be taken for there is danger of electric shock.
5. Selecting the correct terminal input and turn the rotary switch to select the measuring function. In case of no any idea on the value input of the current, just simply test from the high value to low one.
6. Do not overload voltage or current on EITHER between terminal and terminal OR between terminal and grounding which indicate on meter limitation.
7. The rotary switch should be placed in the right position and no any changeover of range shall be made during measurement is conducted to prevent damage of the Meter.
8. Do not use or store the meter in an environment of high temperature, humidity, flammable and electromagnetic environment. The performance of the meter may deteriorate after dampened.
9. The internal circuit of the meter shall not be altered at will to avoid damage of the meter and any accident
10. Replace the battery as soon as the battery indicator “”Appears. With a low battery, the meter might produce false readings that can lead to electric shock and personal injury.
11. Turn the meter off when it is not is use and take out the battery when not using for a long time.

General Specifications









1. **Maximum Voltage between terminal input and COM:** 1000V(except 200mV, 250V)
2. **μA mA terminal input protection:** (CE)250mA 265V auto recovery fuse
3. **10A terminal input protection:** (CE)F1 (10A H 1000V) Fast-type melted fuse Φ10.3x38mm
4. **Resistance input protection:** PTC/1000V
5. **Capacitance input protection:** (CE)F2, F3 (0.5A H 1000V) Fast-type melted fuse Φ6.35×31.8mm
6. **Frequency input protection:** PTC/1000V
7. **Temperature input protection:** (CE)0.5A 1000V fuse
8.  **terminal input protection:** PTC/1000V
9. **hFE input protection:** (CE)250mA 265V auto recovery fuse, F3 (0.5A H 1000V) Fast type melted fuse Φ6.35×31.8mm
10. **Display:** LCD full function signal display, maximum reading is 1999(UT801) , 19999(UT802) Updates 2-3 times/second
11. **Range:** Manual
12. **Polarity Display:** Auto
13. **Overload indication:** 1
14. **Battery Deficiency:** 
15. **Operating Temperature:** 0 40°C(32°F 104°F)
16. **Storing Temperature:** -10 50°C(14°F 122°F)
17. **Relative Humidity:** 0°C 30°C below ≤75% 30°C 40°C ≤50%
18. **Electromagnetic Field:** Under 1V/m the influence of radiated radio-frequency electromagnetic field

phenomenon, Total accuracy= specific accuracy+ measurement 5%, Over 1V/m radiated radiofrequency electromagnetic which do not have any reference data on this topic.

19. **Power:** AC(external power adapter AC220V/ DC9V-200mA) or DC(internal battery type 2 R14/1.5V 6 pieces)
20. **Product size:** (300x245x105)mm
21. **Product Net Weight:** About1500g(without the accessories)
22. **Safety Compliances:** IEC 61010: CATII1000V

LCD Display

1. *Manual Range* Indicator of manual range
2. *Warning !* Indicator for Warning signal
3.  The battery is low
4.  Indicator for high voltage signal
5.  Indicator for Negative reading display
6. *AC* Indicator for AC voltage or current (DC indicator do not display)
7.  Data hold is active
8.  Test of diode
9.  The continuity buzzer is on
10. *Number* Indicates testing reading
11. *Units of measurement:*

mV, V	Unit of Voltage: The millivolt, volt
μ A, mA, A	Unit of current: Microampere, milliampere, ampere
Ω , k Ω , M Ω	Unit of electrical resistance: Ohm, thousand ohms, trillion ohm
nF/ μ F	Unit of electrical capacity: Accepts the farad, the microfarad
kHz	Unit of Frequency: Kiloherztz
°C	Unit of Temperature: Degree Celsius Factor
β	Unit of Triode enlargement: Times

Functions

Symbol	Terminal Input	Explanation
V	V ↔ COM	DC Voltage Measurement
V	V ↔ COM	AC Voltage Measurement
Ω	V ↔ COM	Resistance Measurement
➔ ···)	V ↔ COM	Diode / Continuity Buzzer Measurement
kHz	V ↔ COM	Frequency Measurement
A=	mA μA ↔ COM	mA/μA DC Current Measurement
	10A ↔ COM	ADC Current Measurement
A~	mA μA ↔ COM	mA/μA AC Current Measurement
	10A ↔ COM	A AC Current Measurement
F	V ↔ mA μA	Capacitance Measurement
(Use Multi-Purpose Socket)		
°C	V ↔ mA μA	Temperature Measurement
(Use Multi-Purpose Socket)		
hFE	V ↔ mA μA	Triode Enlargement Factor Measurement
(Use Multi-Purpose Socket)		

Functional Buttons

⏻	Turn the power on and off Turn the display
LIGHT	backlight on and off(suitable for battery supply, backlight turn on about 10 seconds after auto shut down.)
HOLD	Press Hold to enter and exit the hold mode in any mode, the meter beeps.

Operational Measurement Guide

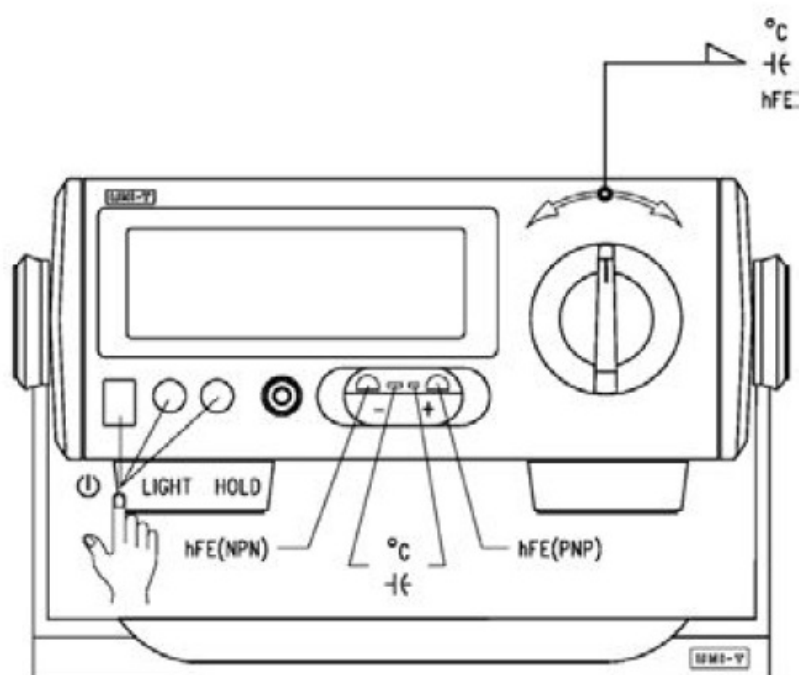


Diagram 1

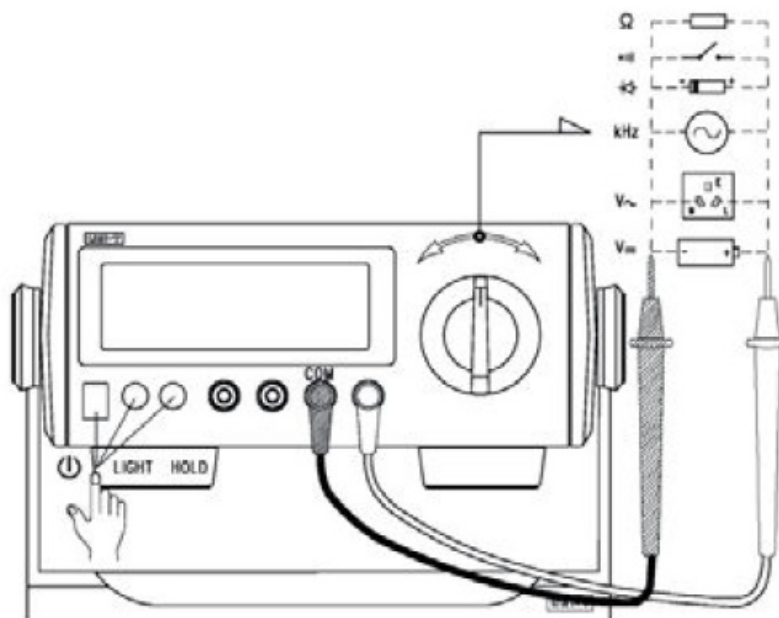


Diagram 2

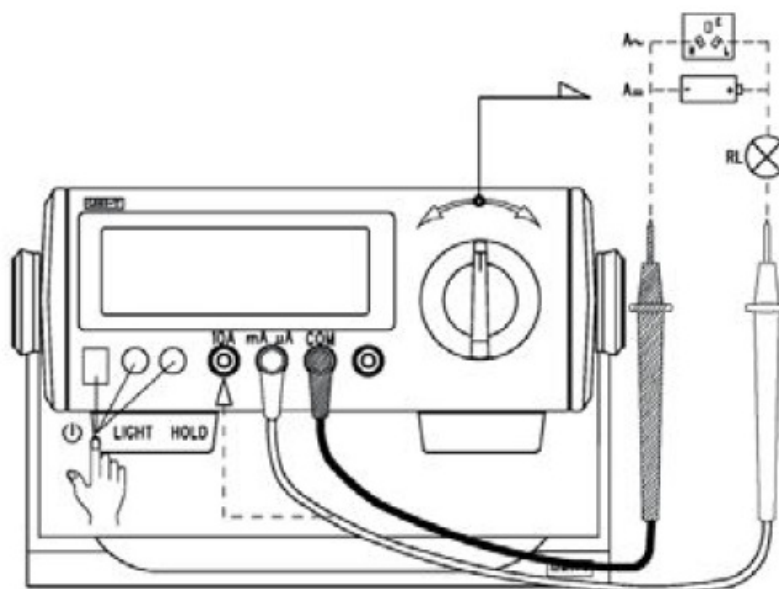


Diagram 3

1. Selecting the correct terminal input and turns the rotary switch to select the measuring function. If fail to do that, the buzzer beep and the warning signal will be on.

Range	Alarm Alert On False Terminal Input
V Hz 0-c	10A mA μ A
mA μ A hFE F	10A
10A	mA μ A

2. DC or AC Voltage Measurement

- To avoid harms to you or damages to the Meter from electric shock, please do not attempt to measure voltages higher than 1000 V although reading may be obtained.

- The Meter has an input impedance of 10MO (except UT802/ACV input impedance of 2MO). This loading effect can cause measurement errors in high impedance circuits and so you need to take a note on it.

3. DC or AC Current Measurement

- Before connecting the Meter in series with the tested return circuit, close the return circuit current to avoid the danger of sparking.
- Do not use over >10A current measurement. Although the meter can work on below 20A current testing but for Isha avoiding any harms to you or damages to the Meter.

4. Measuring Resistance, Diodes, Continuity or capacitance

- To maintain the measurement accuracy, disconnect circuit power and discharge all Isha high voltage capacitors during Isha measuring resistance.
- When measuring high resistance on 1MO or above, it is normal to take several seconds to obtain a stable reading. In order to obtain stable reading, choose shorter test lead to carrying out measurement.
- The test leads and the Meter inside wire will bring around 0.10~0.20 of error to resistance measurement when measuring low resistance. To obtain accurate readings in low-resistance, short circuit the test leads beforehand and record the reading obtained, call this reading as X. Then use the equation: measured resistance value (Y) – {X} = accurate readings of resistance.
- During measurement, Diodes is in a good silicon junction drops between 500mV~800mV & is the normal value. The continuity measurement, the poles between resistance is >1000. It is a short circuit, but on the poles between resistance is ≤100, it is a good connection, buzzer is continually beep on, and the reading value is nearly to the circuit resistance value, Unit is C.

Accuracy Specifications

- **Accuracy:** ±(% reading + digits), guarantee for 1 year
- **Operating temperature:** 18°C~28°C
- **Environmental humidity:** Less than 75%RH

1. DC Voltage

- **Input Impedance:** is average on 10MO Maximum
- **Voltage Input:** 1000V (Except 200mV, 250V)

2. AC Voltage

- **Input Impedance:** UT801 is average on 10MO UT802 is about 2MO.
- **Maximum Voltage Input:** 1000V AC
- **Frequency:** 45Hz~400Hz
- **Display:** True RMS

3. DC Current

Range	Resolution		Accuracy Tolerance: \pm (% Reading+Oigits)	
	UT801	UT802	UT801	UT802
200 μ A	0.1 μ A	0.01 μ A	\pm (0.8%+2)	\pm (0.5%+20)
2mA	1 μ A	0.1 μ A		
20mA	10 μ A	1 μ A		
200mA	0.1mA	0.01mA		
10A	10mA	1mA	\pm (2.0%+4)	\pm (1.5%+40)

- When 10A, Continuous measurement less than 10 seconds at an interval more than 15 minutes.

4. AC Current

Range	Resolution		Accuracy Tolerance: \pm (% Reading+Digits)	
	UT801	UT802	UT801	UT802
2mA	1 μ A	0.1 μ A	\pm (1.0%+3)	\pm (0.8%+40)
20mA	10 μ A	1 μ A		
200mA	0.1mA	0.01mA		
10A	10mA	1mA	\pm (2.5%+5)	\pm (2.0%+40)

- **Frequency:** 45Hz~400Hz
- When 5A, Continuous measurement less than 10 seconds at an interval more than 15 minutes.

5. Resistance

Range	Resolution		Accuracy Tolerance: \pm (% Reading+Digits)	
	UT801	UT802	UT801	UT802
2000	0.10	0.010	\pm (0.8%+3)	\pm (0.5%+10)
2k0	10	0.10		
20k0	100	10		
200k0	1000	100		
2MO	1k0	1000	\pm (1.5%+5)	
20MO	10k0			
200MO		10k0		\pm (5%+40)

- When >100M Ω resistance measurement as reference purpose.

6. Capacitance

Range	Resolution		Accuracy Tolerance: $\pm(\% \text{ Reading} + \text{Digits})$	
	UT801	UT802	UT801	UT802
20nF	10pF	1pF	$\pm(4\%+3)$	$\pm(4\%+10)$
2 μ F	1nF	100pF		
200 μ F'	100nF	10nF	$\pm(5\%+5)$	$\pm 5\%+10)$

- ">40 μ F capacitance measurement as reference purpose.

7. Frequency

Range	Resolution	Accuracy Tolerance:±(% Reading+Digits)	
	UT801 UT802	UT801	UT802
2kHz	1Hz 0.1Hz	±(1.5%+5)	±(1.2%+10)
200kHz	100Hz 10Hz		


- **Input Amplitude a:**
 - (2kl-lz range) 50mV: sas30Vrms
 - (200kHz range)150mV: sa:530Vrms

8. Temperature

Range	Resolution		Accuracy Tolerance: $\pm(\% \text{ Reading} + \text{Digits})$	
	UT801	UT802	UT801	UT802
-40~20°C	1.°C	0.1.°C	$-(8\%+5)$	$-(8\%+40)$
>-20.°C			$\pm(1.2\%+4)$	$\pm(1.2\%+30)$
>0-100.°C			$\pm(1.2\%+3)$	$\pm(1.2\%+25)$
>100~1000°C			$\pm(2.5\%+2)$	$\pm(2.5\%+20)$

- **Thermocouple:** It is suitable to use K type of thermocouple. This include point contact K-type thermocouple can only be used on less than 230-C temperature measurements.

9. Diode Test

Range	Resolution		Remarks
	UT801	UT802	Open circuit voltage is around 3 V, Silicon junction drops between 0.5~0.8V as the normal value.
	1mV	0.1mV	

10. Continuity Test

Range	Resolution		Remarks
•)))	UT801	UT802	Open circuit voltage is approximate 3V
	1Ω*	0.1Ω*	

- When circuit is disconnected with resistance value >1000, the buzzer does not beep. When circuit is in good connection with resistance value ≤100, buzzer beeps continuously.

11. Transistor hFE

Range	Resolution	Remarks
hFE	UT801 IUT802	IbO is about 10μA, Vee is about 2.5V
	W OW	

Replacing the battery(see Diagram 4)

Specifications and other information shown on this instruction manual are subject to change without notice:

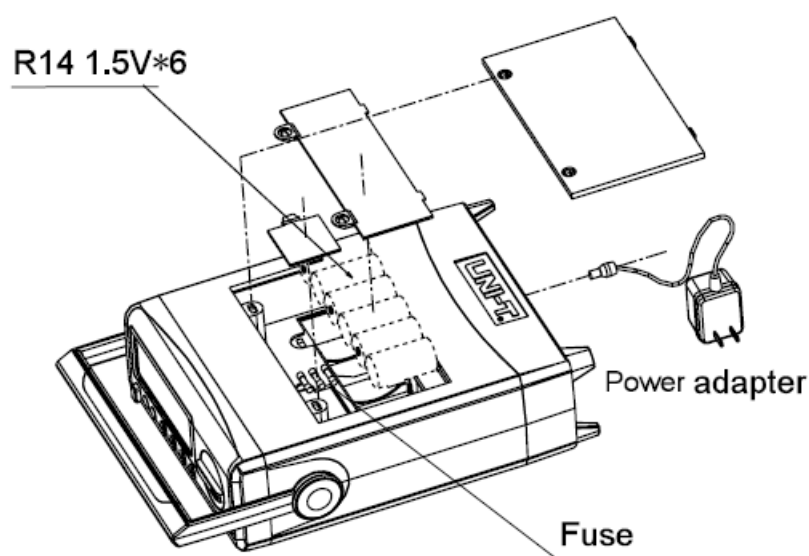


Diagram 4


UNI-TREND TECHNOLOGY (CHINA) GO., LTD.

No6, Gong Ye Bei 1st Road,
Songshan Lake National High-Tech Industrial
Development Zone, Dongguan City,
Guangdong Province, China

Tel: (86-769) 8572 3888

<http://www.uni-trend.com>

Documents / Resources

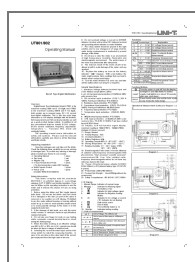

[UNI-T UT801 Bench Type Digital Multimeters](#) [pdf] User Manual

UT801, UT802, UT801 Bench Type Digital Multimeters, Bench Type Digital Multimeters, Digital Multimeters, Multimeters

