



UNI ELD Software User Manual


[Home](#) » [uni](#) » UNI ELD Software User Manual 

Contents

- [1 UNI ELD Software](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Getting Started](#)
- [6 Main Features](#)
- [7 Inspection](#)
- [8 Troubleshooting](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



UNI ELD Software

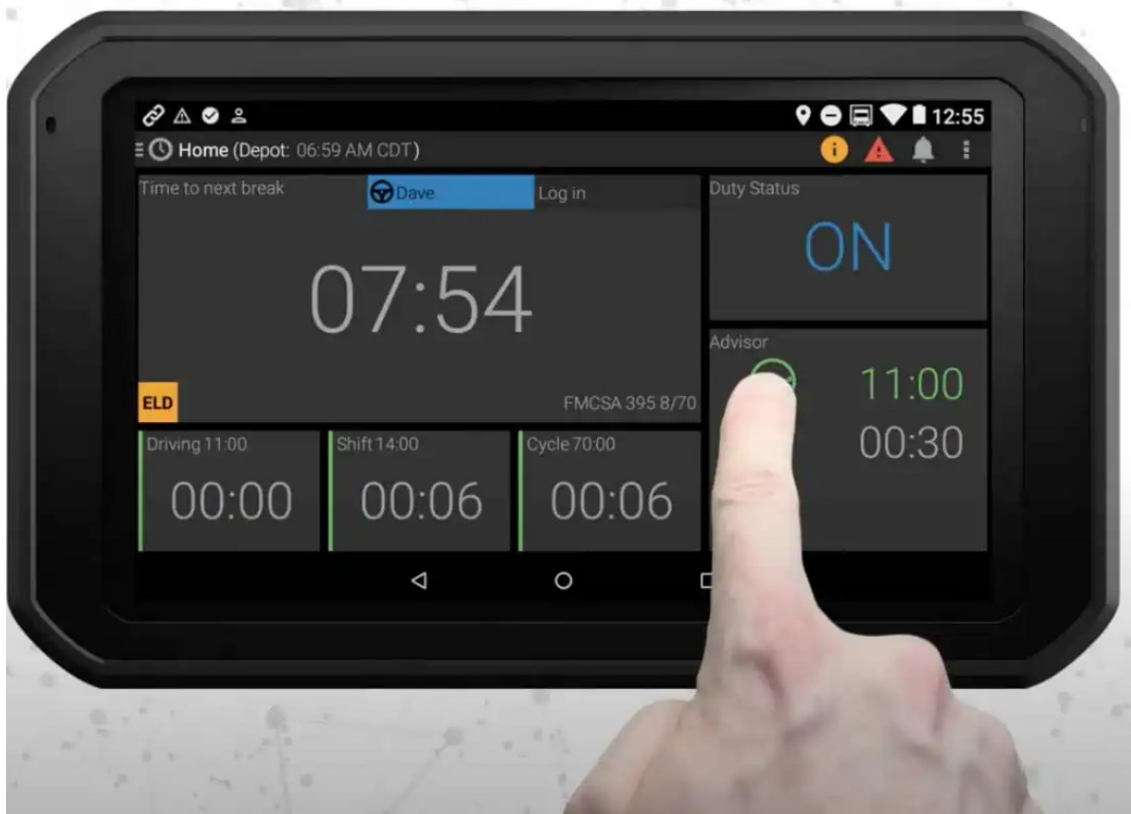

Product Information

Specifications:

- Product Name: UNI ELD Software
- Functionality: Logging hours, managing driver and vehicle information, generating reports
- Compliance: ELD mandate and regulations

Product Usage Instructions

ELD Hardware Installation

Identify your vehicle's ECM Port to connect the ELD hardware.

UNI ELD Application

1. Login to the application using provided credentials.
2. Choose your vehicle's unit number from the list managed by back-office personnel.
3. Upon successful login, you will be taken to the main screen.

HOS Logging

1. Begin your shift by selecting the On Duty status on the dashboard.
2. Change your status throughout the day as needed.
3. Driving time is automatically recorded when the vehicle's speed reaches 5 MPH.
4. Edit logs by clicking the pencil icon for annotations or corrections.
5. Certify your logs at the end of each day or duty cycle.

Troubleshooting:

1. Check ELD device connectivity.
2. Ensure device and software are up to date.
3. Restart device or software if needed.
4. Contact support team for further assistance.

Frequently Asked Questions (FAQ)

- **Q: How often do I need to certify my logs?**

A: You must certify your logs at the end of each day or at the end of your duty cycle.

- **Q: Can I edit my logs after I have certified them?**

A: Yes, but any edits must be annotated and explained.

- **Q: How long do I need to keep my ELD records?**

A: You must keep your ELD records for six months.

We hope this ELD software manual has been helpful. For further assistance, contact us at support@uniELD.com or phone [708-968-3333](tel:708-968-3333).

Introduction

Welcome to our ELD software manual. This manual is designed to help you understand and use UNI ELD software to comply with the ELD mandate and regulations. This manual will cover how to use the software to log your hours, manage driver and vehicle information, generate reports, and troubleshoot common issues.

Getting Started

1. Install the ELD software on your device.
2. Connect the device to the vehicle's diagnostic port.
3. Turn on the engine of the vehicle
4. Download UNI GO mobile application from google play store or apple app store
5. Log in to the application to start recording your HOS data.

Main Features

1. **HOS Recording:** The software automatically records the status of the driver and vehicle based on the engine and GPS data. The recorded data includes driving time, on-duty time, and off-duty time.
2. **HOS Management:** The software provides a user-friendly interface to manage and review your HOS data. You can view a summary of your daily HOS data and a detailed log of your activities.
3. **Compliance Monitoring:** The software constantly monitors your HOS data and alerts you when you reach the maximum driving time limit. It also provides a report of your HOS data to help you comply with the FMCSA regulations.
4. **Data Transfer:** The software allows you to transfer your HOS data to authorized safety officials upon request using telematic data transfer method.

ELD Hardware installation

1. Identify your vehicles ECM Port. Location of your vehicles ECM port may be different depending on vehicles manufacturer but most commonly ECM Port is located under the steering wheel of your vehicle. UNI ELD supports 9 pin, OBDII and 6 Pin connections
2. Connect your ELD Hardware. UNI ELD hardware by default comes as 9 pin connector. If your vehicle has OBDII or 6pin connector adapter cable is required which can be purchased separately from UNI ELD
3. Make sure ELD hardware is operational. After successfully installing ELD hardware. Turn on your vehicle's ignition. If ELD Hardware is installed correctly red LED will light up and after approximately 10 second red LED will change to blinking green indicating hardware is properly installed and is ready to be used.
4. Download Application. UNI ELD Supports both ios and android operating systems. Depending on your mobile device search for "UNI ELD" either at apple app store or at google play store. Make sure application you are downloading is provided by UNI ELD, Inc.)

UNI ELD Application

1. Login to application. Driver login credentials shall be provided to driver by back-office personnel
2. Choose your vehicles unit number from the list (List is managed by back-office personnel)
3. Main Screen. After successfully logging in to application user will be taken to the main screen that displays main options as follows Current Status, Time remaining before next break, HOS, DVIR, Inspection, Settings
4. Current Status. This screen displays your current status. You may click on your current status to change it. Please note that Driving status will start automatically as soon as your vehicle speed is over 5MPH.
5. HOS. This screen displays your electronic logbook and allows you to view, edit, and certify your logs
6. DVIR. This screen allows you to generate and view DVIRs
7. Inspection. This screen allows you to send inspection reports to authorized safety officials by webservice or email.
8. Settings. This screen displays application and driver settings.

HOS Logging

To log your hours using UNI ELD software, follow these steps:

1. Begin your shift by selecting the "On Duty" status on the dashboard.
2. Change your status as needed throughout the day, such as from "On Duty" to "Off Duty."
3. Driving time will be recorded automatically as vehicles speed reaches 5 MPH
4. After stopping vehicle, the application will ask you if you wish to change status from driving to either "On duty", "Off Duty" or "SB"
5. Edit your logs as needed by clicking pencil icon next to status box, edits such as adding annotations or correcting errors are allowed and shall be completed as required by FMCSA regulations. (Driving time editing is not allowed by software)
6. Certify your logs at the end of each day or at the end of your duty cycle.

Inspection

- In the event of the roadside inspection navigate to "Inspection" page on the main application main screen.
- UNI ELD Supports Telematic Data transfer method including Webservice and email. UNI ELD Makes it easy to

transfer ELD data to authorized safety officials. To transfer the ELD Data from mobile device including phones, tablets etc. driver or authorized safety official have to follow these steps:

- 1. On main application screen navigate to Inspection section
- On the following screen choose a desired transfer method either Webservice or Email
- After choosing webservice option following screen will appear where driver or safety official will be able to input transfer code
- After choosing Email option following screen will appear where driver or safety official will be able to input desired email address
- After information is filled click “Submit” and ELD file will be transferred
- Depending on location and mobile data coverage at the area it may take up to 60 seconds for file to be transferred.

Troubleshooting

If you experience issues with our ELD software, follow these troubleshooting tips:

1. Check your ELD device to make sure it is connected and functioning properly.
2. Ensure that your device and software are up to date.
3. Restart your device or software if necessary.
4. Contact our support team if you need further assistance.

FAQ

- **Q: How often do I need to certify my logs?**

A: You must certify your logs at the end of each day or at the end of your duty cycle.

- **Q: Can I edit my logs after I have certified them?**


A: Yes, but any edits must be annotated and explained.

- **Q: How long do I need to keep my ELD records?**

A: You must keep your ELD records for six months.

We hope this ELD software manual has been helpful in understanding and using our software. If you have any further questions or issues, please don't hesitate contact us by email support@uniELD.com or phone [708-968-3333](tel:708-968-3333)

Documents / Resources

	UNI ELD Software [pdf] User Manual ELD Software, Software
---	--

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.