




VERASYS VEC100 Generic RTU Controller User Guide

[Home](#) » [VERASYS](#) » VERASYS VEC100 Generic RTU Controller User Guide 



VEC100 Generic RTU Controller, Modulated Heating and Staged Cooling Quick Start Guide

LIT-12013360

2021-07-14

Contents

- [1 About this guide](#)
- [2 Mounting the controller](#)
- [3 Wiring the controller](#)
- [4 Setting the VEC address using the local display](#)
- [5 Configuring sensors](#)
- [6 Updating the VEC](#)
- [7 COBP wiring diagram](#)
- [8 VAV wiring diagram](#)
- [9 Commissioning the system](#)
- [10 Product warranty](#)
- [11 Software terms](#)
- [12 Single point of contact](#)
- [13 Contact information](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)

About this guide

This quick start guide provides the basic information you need to configure and install the Verasys® Equipment Controller (VEC), LC-VEC100-0, using the Verasys generic rooftop unit (RTU) modulated heating and staged cooling controller application. The application controls a third-party changeover bypass (COBP) system or a third-party variable air volume (VAV) unit.

For further information, refer to the Versys Equipment Controller (VEC) Installation Guide (24-10143-1272) and

Options available	Possible values
Number of Cooling Stages Installed	0 to 4
Heating Valve	<ul style="list-style-type: none"> • State 0: not installed • State 1: water coil
Economizer Installed	<ul style="list-style-type: none"> • State 0: the economizer is not available. • State 1: the economizer is available.
Air Proving Switch Setup	<ul style="list-style-type: none"> • State 0: fan status device • State 1: duct static pressure sensor • State 2: none
Rooftop Controller Type	<ul style="list-style-type: none"> • State 0: changeover bypass • State 1: VAV
Cancel ASCD Timers	<ul style="list-style-type: none"> • State 0: false • State 1: true
Demand Ventilation Feature	<ul style="list-style-type: none"> • State 0: demand ventilation is off. • State 1: demand ventilation is on.

Mounting the controller


To mount the controller, complete the following steps:

1. Mount a 20 cm (8 in.) section of 35 mm (1.3 in.) DIN rail horizontally.

Note: Mount the controller in the horizontal position.


2. On the back of the controller, extend the two mounting clips.

Figure 1: Pull down lower mounting clips

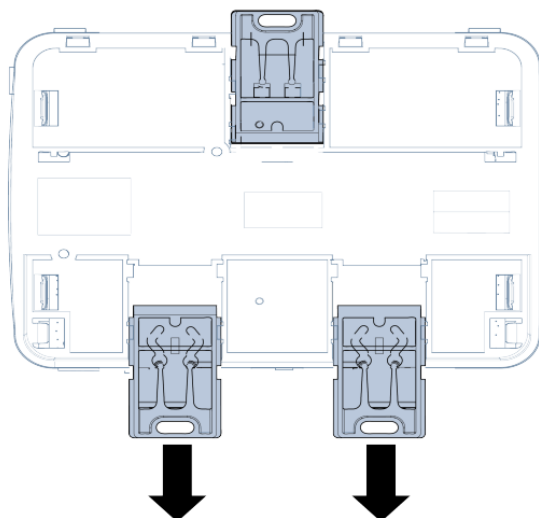

3. Place the controller on the DIN rail.
4. Push the bottom mounting clips inward (up) to secure the controller on the DIN rail.

Figure 2: Push up lower mounting clips

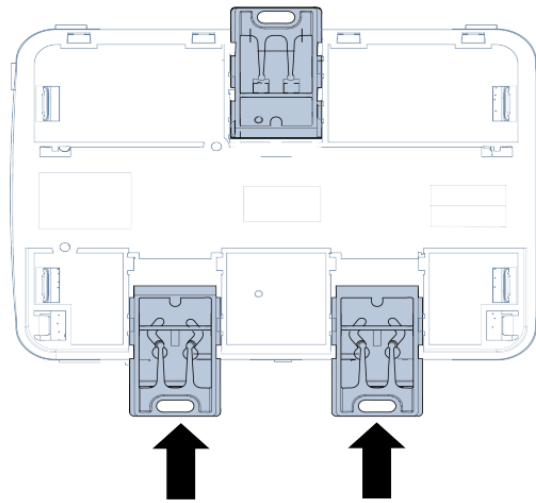

Wiring the controller

Zone bus terminal block

The zone bus terminal block is a grey, removable, 4terminal plug that fits into a board-mounted jack. Wire the removable zone bus terminal block plugs on the controller on the top row of the stacked connector, and other field controllers in a daisy-chain configuration using a 3-wire twisted, shielded cable as shown in the following figure.

Figure 3: Zone bus terminal block wiring

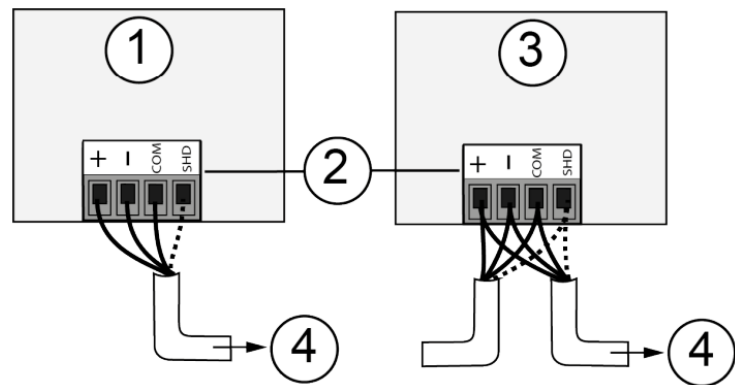


Table 2: Zone bus daisy-chaining configuration


1	Terminating device on the zone bus
2	Zone bus terminal block plugs
3	Daisy-chained devise on a zone bus segment
4	Connects to the next device on the zone bus.

Note: The zone bus shield (SHD) terminal is isolated and can be used to connect (daisy chain) the shields for zone bus wiring.

Sensor bus terminal blocks

The sensor bus terminal block is a brown, removable, 4terminal plug that fits into a board-mounted jack. Wire the removable sensor bus terminal block plugs on the lower part of the dual-stacked connector to the controller, and other sensor bus devices in a daisy-chain configuration using a 4-wire twisted, shielded cable as shown in the following figure.

Figure 4: Sensor bus terminal block wiring

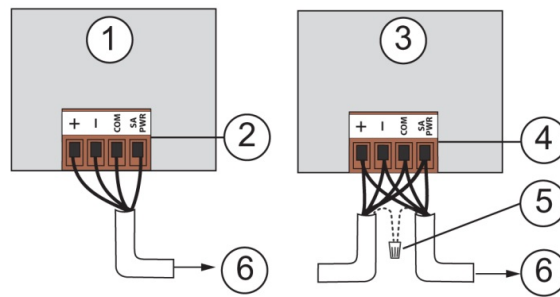**Table 3: Sensor bus daisy-chaining configuration**

1	Terminating device on the sensor bus
2	Sensor bus terminal block plug on the terminating device
3	Daisy-chained device on a sensor bus segment
4	Sensor bus terminal block plug on the daisy-chained device
5	Cable shield connection
6	Connects to the next device on the sensor bus.


Note: The PWR terminal supplies 15 VDC. The PWR terminal can be used to connect (daisy chain) the 15 VDC power leads on the sensor bus.

Supply power terminal block

The 24 VAC supply power terminal block is a gray, removable, 3-terminal plug that fits into a board-mounted jack on the top right of the controller.

Wire the 24 VAC supply power wires from the transformer to the HOT and COM terminals on the terminal plug, as shown in the following figure. The middle terminal on the supply power terminal block is not used.

Figure 5: 24 VAC Supply Power Terminal Block

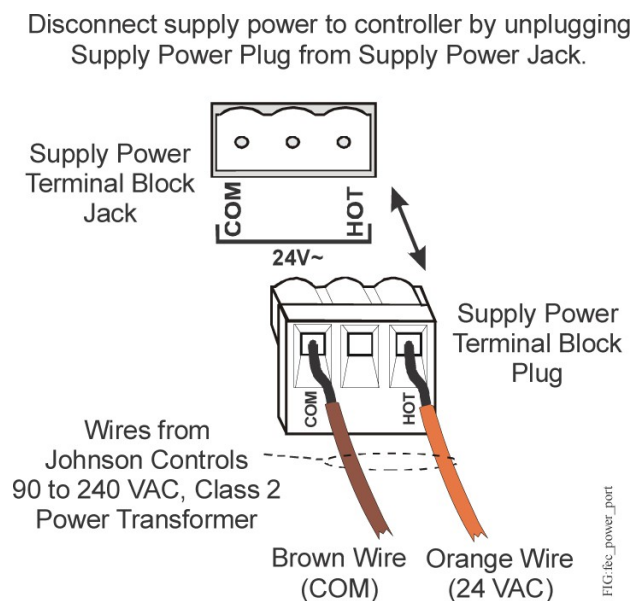

Note: The supply power wire colors may be different on transformers from other manufacturers. Refer to the transformer manufacturer's instructions and the project installation drawings for wiring details.

Setting the VEC address using the local display

To set the VEC address using the local display, complete the following steps:

1. To access the menu, press the **ENT (Enter)** button.
2. Navigate to the **Controller** menu with the up and down arrows, and press the **ENT** button.
3. In the **Controller** menu, navigate to Network and press the **ENT** button.
4. In the **Network Parameters** section, navigate to Address and press the **ENT** button.
The display shows the default address value.
5. Press the **ENT** button.
The address blinks.
6. Use the up or down arrow to increase or decrease the address to the value you want. Press the **ENT** button.
The address stops blinking and the display shows the old address.
7. Press either the up or down arrow. The screen refreshes to the new address.
8. Press ESC (Escape) repeatedly, until you return to the main screen. Ensure that the main screen shows that the system is operational.

Configuring sensors

To configure the installed sensors, complete the following steps:

1. Navigate to the **Details** menu.
2. Navigate to the **Service** menu and select the **Inputs** section.
3. Select the installed sensors using the drop-down menus for each parameter.

Updating the VEC

To update the VEC with the modulated heating and staged cooling application, complete the following steps:

1. Go to verasyscontrols.com, and log in with your credentials.
2. Navigate to **Product Information & Support >Device Updates**.
3. Download the package file for the application to the root folder of a USB 2.0 drive. The package file name is the following: VEC100-ModHTGStgCLG_xxxx.pkg
i Note: Ensure that the USB drive is formatted as FAT or FAT32.
4. Insert the USB drive into the USB port on the VEC.
5. If the download does not start immediately, then in the controller's local display, select the Update and Load Firmware option, then choose the package file on the USB drive, and press Enter.
6. When the application update finishes, use the Verasys Smart Building Hub (SBH) or the local display to configure the controller.

COBP wiring diagram

Figure 6: Changeover bypass wiring diagram – VEC100

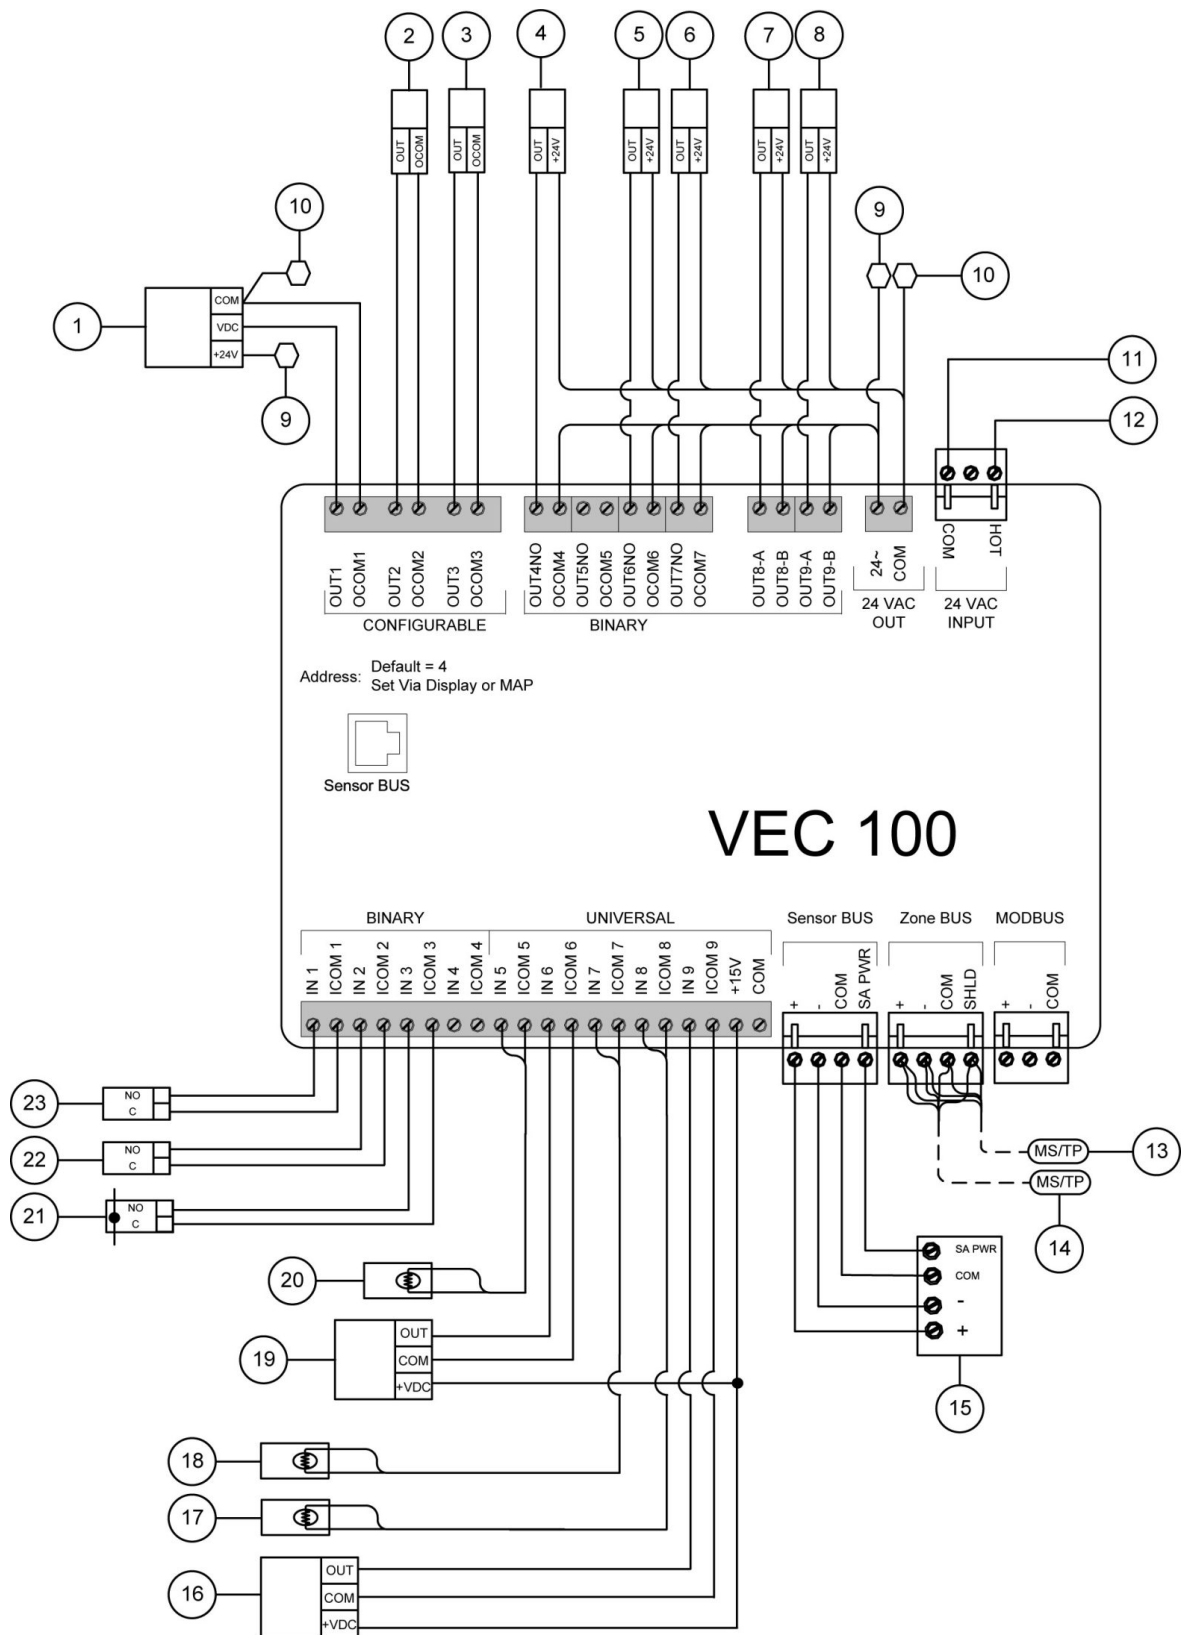


Figure 7: Changeover bypass wiring diagram – IOM3711

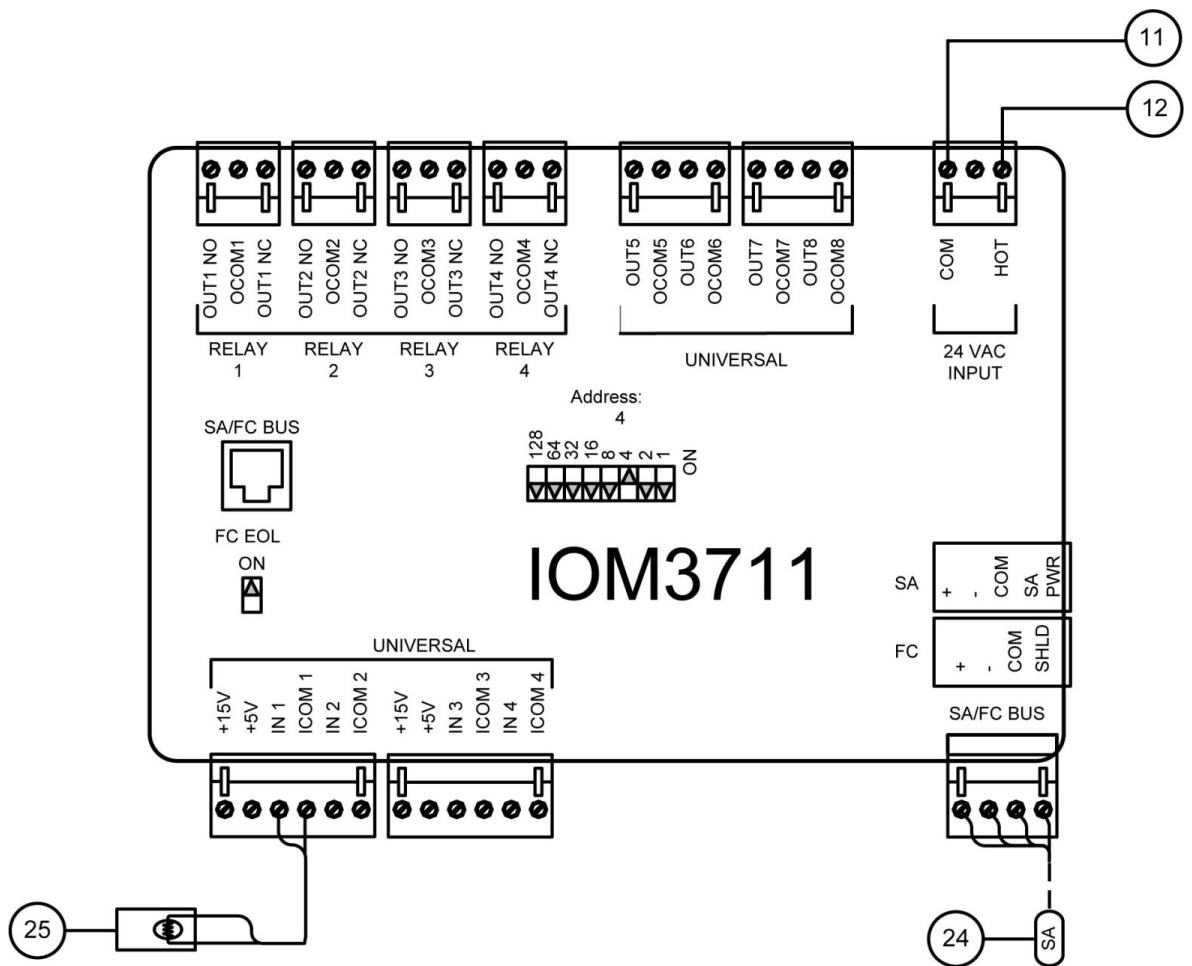


Table 4: Changeover bypass wiring diagram

Number	Description	Object name (if given)
1	Economizer Damper Output (optional)	MAD-O
2	Supply fan output (to fan VFD)	SF-O
3	Heating valve output	HTG-O
4	Supply fan command (to fan VFD)	SF-C
5	Cooling stage 1 command	CLG1-C
6	Cooling stage 2 command	CLG2-C
7	Cooling stage 3 command	CLG3-C
8	Cooling stage 4 command	CLG4-C
9	24 V HOT to damper motor	n/a
10	24 V COM to damper motor	n/a
11	24 V COM	n/a
12	24 V HOT	n/a
13	From the last device	n/a
14	To next device	n/a
15	Zone humidity sensor – monitor only (optional)	ZN-H
16	Return air CO2 Range: 0 ppm to 2,000 ppm, 0 VDC to 10 VDC	RA-CO2
17	Return air temperature sensor	RA-T

Table 4: Changeover bypass wiring diagram

Number	Description	Object name (if given)
18	Outside air temperature sensor Note: This is a required sensor if the VEC100 controls the economizer. Position the sensor in a shaded area on the north side of the building.	OA-T
19	Discharge air static pressure sensor Range: 0 in. W.C. to 5 in. W.C., 0 VDC to 5 VDC	DA-P
20	Discharge air temperature sensor	DA-T
21	Supply fan status (air proving switch, optional)	SF-S
22	Purge input (optional)	PURGE-S
23	Filter status (optional)	FILTER-S
24	From the last SA device	n/a
25	Mixed air temperature sensor Note: You must have a mixed air sensor if the VEC100 controls the economizer for low limit control.	MA-T

VAV wiring diagram

Figure 8: VAV wiring diagram – VEC100

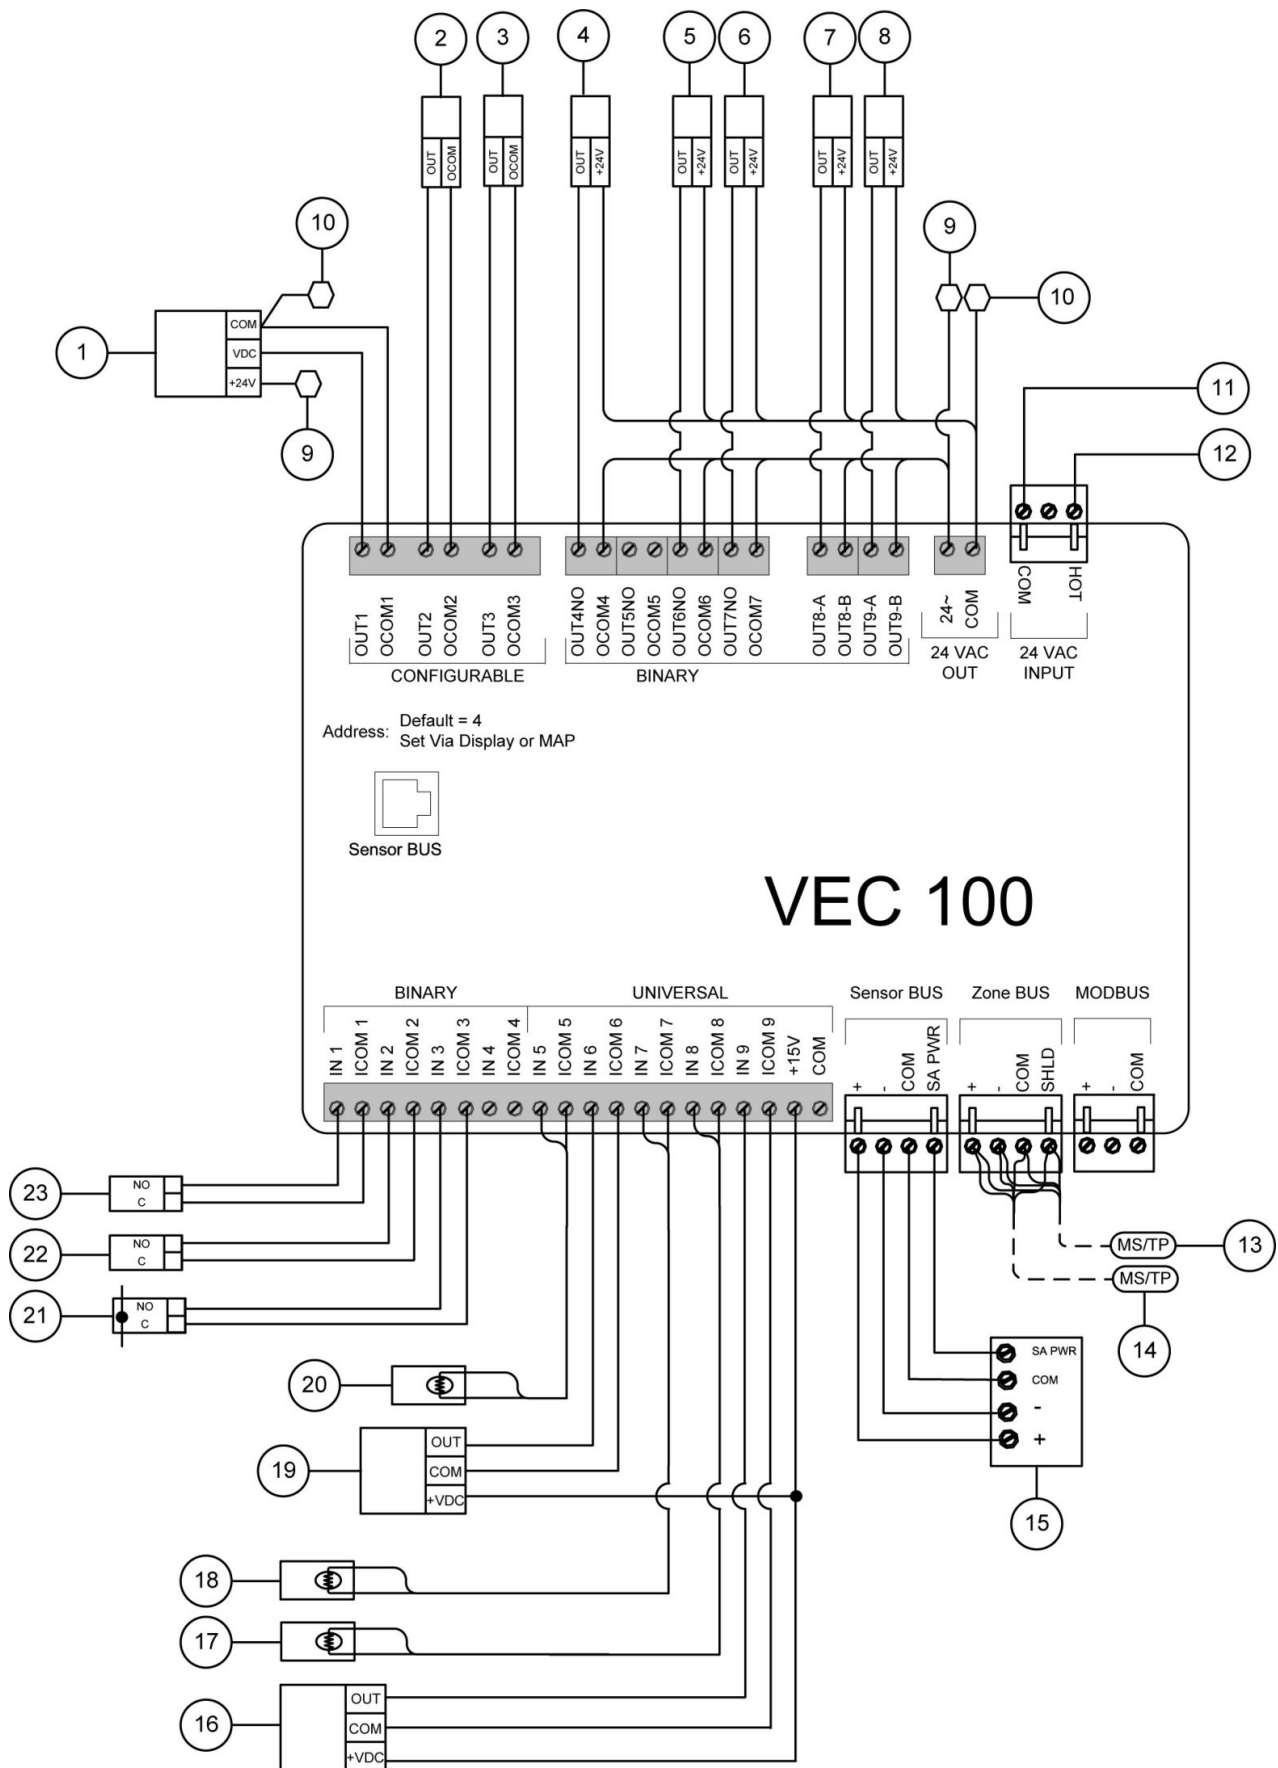


Figure 9: VAV wiring diagram – IOM3711

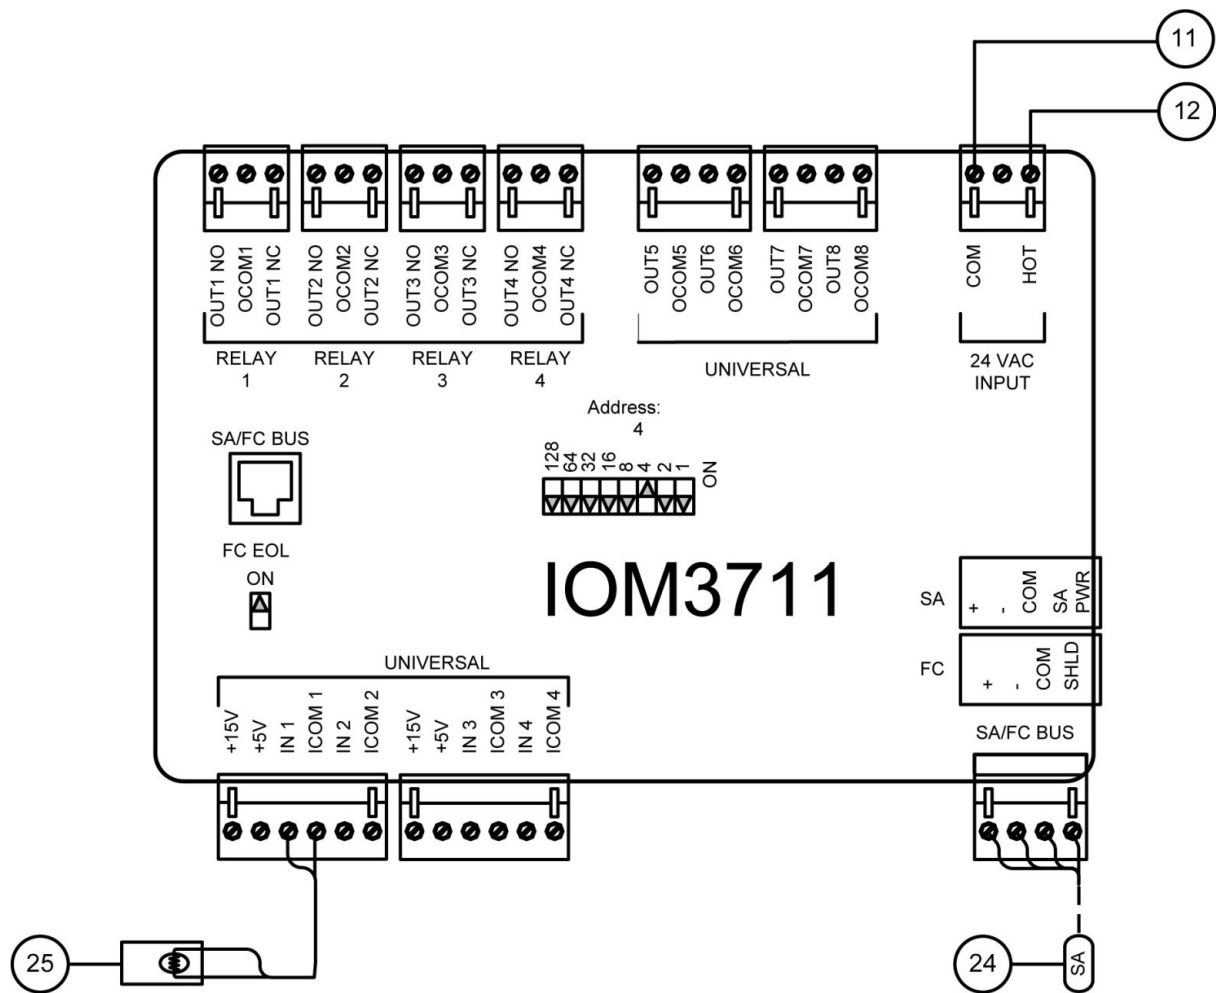


Table 5: VAV wiring diagram

Number	Description	Object name (if given)
1	Economizer Damper Output (optional)	MAD-O
2	Supply fan output (to fan VFD)	SF-O
3	Heating valve output	HTG-O
4	Supply fan command (to fan VFD)	SF-C
5	Cooling stage 1 command	CLG1-C
6	Cooling stage 2 command	CLG2-C
7	Cooling stage 3 command	CLG3-C
8	Cooling stage 4 command	CLG4-C
9	24 V HOT to damper motor	n/a
10	24 V COM to damper motor	n/a
11	24 V COM	n/a
12	24 V HOT	n/a
13	From the last device	n/a
14	To next device	n/a
15	Zone humidity sensor – monitor only (optional)	ZN-H
16	Return air CO2 Range: 0 ppm to 2,000 ppm, 0 VDC to 10 VDC	RA-CO2
17	Return air temperature sensor	RA-T

Table 5: VAV wiring diagram

Number	Description	Object name (if given)
18	Outside air temperature sensor <i>Note:</i> This is a required sensor if the VEC100 controls the economizer. Position the sensor in a shaded area on the north side of the building.	OA-T
19	Discharge air static pressure sensor Range: 0 in. W.C. to 5 in. W.C., 0 VDC to 5 VDC	DA-P
20	Discharge air temperature sensor	DA-T
21	Supply fan status (air proving switch, optional)	SF-S
22	Purge input (optional)	PURGE-S
23	Filter status (optional)	FILTER-S
24	From the last SA device	n/a
25	Mixed air temperature sensor <i>Note:</i> You must have a mixed air sensor if the VEC100 controls the economizer for low limit control.	MA-T

Commissioning the system

To activate the outputs and verify system operation, navigate to the **Commissioning** menu, change **Start Commissioning** to **Trigger**, and adjust outputs individually.

The following table describes the **Details > Service > Factory** menu options.

Table 6: Details: Service: Factory

Object or parameter	Description	Adjustable	Defaults	Enum set or range
Number of Cooling Stages Installed	Sets the number of cooling stages installed.	Adjustable	2	0 to 4
Heating Valve	Sets the installation of the heating valve.	Adjustable	Not Installed	0 = Not Installed 1 = Water Coil
Economizer Installed	Sets whether the economizer is installed.	Adjustable	No	0 = No 1 = Yes
Air Proving Switch Setup	Selects the type of setup for airflow proof.	Adjustable	None	0 = Fan Status Device 1 = Duct Static Pressure Sensor 2 = None
Equalize Cooling Stages Runtime	Enables the compressors to run in lead/lag mode based on runtime.	Adjustable	No	0 = No 1 = Yes
OAT Cooling Lockout Temperature	Sets the temperature at which outside cooling lockout occurs.	Adjustable	50°F (10°C)	0°F to 100°F (-18°C to 38°C)
OAT Heating Lockout Temperature	Sets the temperature at which outside heating lockout occurs.	Adjustable	55°F (12.77°C)	0°F to 100°F (-18°C to 38°C)
Economizer Minimum Position Setpoint	Sets the minimum outside air damper position.	Adjustable	20%	0% to 100%
Rooftop Controller Type	Sets the controller type to changeover bypass or VAV.	Adjustable	Changeover Bypass	0 = Changeover Bypass 1 = VAV
Variable Speed Drive	Sets whether the VEC100 controls a VFD fan instead of a bypass damper when the rooftop controller type is set to changeover bypass.	Adjustable	False	0 = False 1 = True
Supply Air Temperature Alarm Offset	If SAT is not in this value range, the SAT alarm delay starts. Examples: If the supply air setpoint is 55°F and this is set to 5°F, then the supply air must be under 60°F, or the delay timer starts. If the supply air setpoint is 110°F and this is set to 5°F then the supply air must be above 105°F, or the delay timer starts.	Adjustable	5 delta °F (2.78 delta °C)	0 delta °F to 25 delta °F (0 delta °C to 14 delta °C)
Supply Air Temperature Alarm Delay	Sets the amount of time that must pass before the SAT alarm occurs.	Adjustable	20 min	0 min to 120 min
Cancel ASCD Timers	Resets the minimum on and off timers.	Adjustable	False	0 = False 1 = True
Demand Ventilation Feature	Enables or disables the demand ventilation feature.	Adjustable	Off	0 = Off 1 = On

Product warranty

This product is covered by a limited warranty, details of which can be found at www.johnsoncontrols.com/buildingswarranty.

Software terms

Use of the software that is in (or constitutes) this product, or access to the cloud, or hosted services applicable to this product, if any, is subject to applicable end-user license, open-source software information, and other terms set forth at www.johnsoncontrols.com/techterms. Your use of this product constitutes an agreement to such terms.

Single point of contact

APAC	Europe	NA/SA
JOHNSON CONTROLS C/O CONTROLS PRODUCT MANAGEMENT NO. 32 CHANGJIJANG RD NEW DISTRICT WUXI JIANGSU PROVINCE 214028 CHINA	JOHNSON CONTROLS WESTENDORF 3 45143 ESSEN GERMANY	JOHNSON CONTROLS 507 E MICHIGAN ST MILWAUKEE WI 53202 USA

Contact information


Contact your local branch office: www.johnsoncontrols.com/locations

Contact Johnson Controls: www.johnsoncontrols.com/contact-us

© 2021 Johnson Controls. All rights reserved. All specifications and other information are shown were current as of document revision and are subject to change without notice.

www.johnsoncontrols.com

Documents / Resources

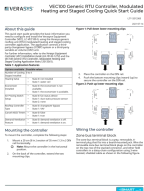	VERASYS VEC100 Generic RTU Controller [pdf] User Guide LIT-12013360, VEC100 Generic RTU Controller, VEC100, Generic RTU Controller
---	---