



# Vilros SC1148+VILP279 Raspberry Pi Active Cooler User Manual


[Home](#) » [Vilros](#) » Vilros SC1148+VILP279 Raspberry Pi Active Cooler User Manual 

## Contents

- [1 Vilros SC1148+VILP279 Raspberry Pi Active Cooler](#)
- [2 Overview](#)
- [3 Specification](#)
- [4 Assembly instructions](#)
- [5 Physical specification](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**Vilros SC1148+VILP279 Raspberry Pi Active Cooler**

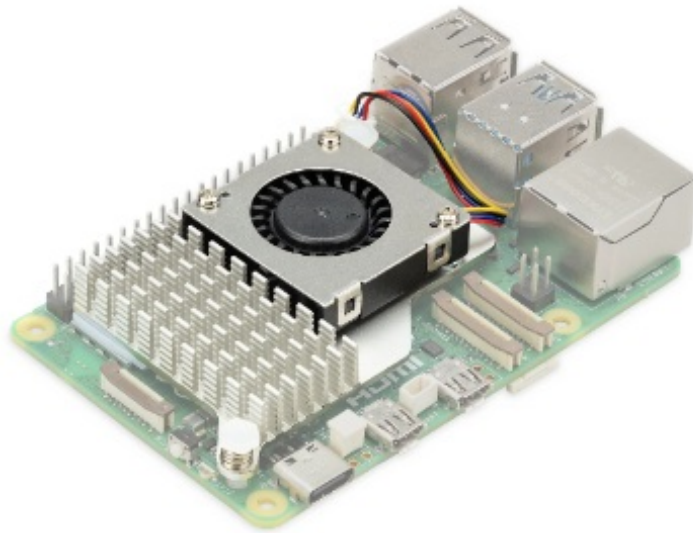

## Specifications

- Input voltage: 5V DC supplied via four-pin fan header on Raspberry Pi 5
- Fan speed control: Pulse width modulation control with tachometer
- Maximum airflow: 1.09 CFM
- Maximum fan speed: 8000 RPM +/- 15%
- Product material: Anodised aluminium
- Production lifetime: The Raspberry Pi Active Cooler for Raspberry Pi 5 will remain in production until at least January 2035
- Compliance: For a full list of local and regional product approvals, please visit [pip.raspberrypi.com](https://pip.raspberrypi.com)

## Assembly instructions

1. Unpack the preassembled Active Cooler from its box.
2. Remove the backing paper from the thermal pads on the underside of the product.
3. Make sure your Raspberry Pi 5 is powered off. Position the Active Cooler carefully in the correct space on Raspberry Pi 5, making sure not to hit any of the connectors. Please refer to the diagram on the front of the box which shows the correct position and orientation of the product.
4. Align the two white push pins with the two dedicated heatsink holes.
5. When correctly positioned, press evenly on the tops of the two push pins simultaneously until they click, indicating that they are clipped onto the board.
6. Once the Active Cooler is mounted, connect its fan cable to the connector labelled 'FAN' on Raspberry Pi 5. Take care to ensure the cable's connector is the correct way round when inserting it. If you feel any resistance, stop immediately, remove the fan cable connector, and make sure that both it and the connector on Raspberry Pi 5 are undamaged before proceeding. Make sure that the connector on the cable is pushed down fully onto the connector on Raspberry Pi 5.
7. We recommend that the Active Cooler is not removed once it is fitted to Raspberry Pi 5. Removal of the Active Cooler will cause the push pins and thermal pads to degrade and is likely to lead to product damage.
8. Ensure the push pins are undamaged and can clip on to the Raspberry Pi board securely before use. Discontinue use of the Active Cooler and replace the push pins if they are damaged or deformed, or if they do not clip securely.

## WARNINGS

Raspberry Pi is a trademark of Raspberry Pi Ltd.

## FAQ

### 1. Can I use the Active Cooler with other Raspberry Pi models?

No, the Active Cooler is specifically designed for Raspberry Pi 5 and may not be compatible with other models.

### 2. How do I know if the Active Cooler is properly mounted?

You should hear a click sound when pressing down on the push pins, indicating that they are securely clipped onto the board. Additionally, ensure that the fan cable is connected correctly and pushed down fully onto the connector on Raspberry Pi 5.

### 3. Can I remove the Active Cooler once it is mounted?

We recommend not removing the Active Cooler once it is fitted to Raspberry Pi 5. Removal may cause damage to the push pins and thermal pads.

### 4. What should I do if the push pins are damaged?

If the push pins are damaged or deformed, or if they do not clip securely onto the Raspberry Pi board, discontinue use of the Active Cooler and replace the push pins.

## Overview



The Raspberry Pi Active Cooler for Raspberry Pi 5 is a dedicated, permanent clip-on cooling solution for Raspberry Pi 5. It combines an aluminium heatsink with a temperature-controlled blower fan to keep your Raspberry Pi 5 at a comfortable operating temperature even under heavy loads.

- Single-piece anodised aluminium heatsink
- Heatsink-mounted, temperature-controlled blower fan attached by three screws
- Spring-loaded push pins for mounting onto Raspberry Pi 5
- Pre-applied thermal pads for heat transfer

## Specification

- **Input voltage:** 5V DC supplied via four-pin fan header on Raspberry Pi 5
- **Fan speed control:** Pulse width modulation control with tachometer
- **Maximum airflow:** 1.09 CFM
- **Maximum fan speed:** 8000 RPM +/- 15%


- **Product material:** Anodised aluminium
- **Production lifetime:** The Raspberry Pi Active Cooler for Raspberry Pi 5 will remain in production until at least January 2035
- **Compliance:** For a full list of local and regional product approvals,

Please visit [pip.raspberrypi.com](https://pip.raspberrypi.com) Raspberry

## Assembly instructions

1. Unpack the preassembled Active Cooler from its box.
2. Remove the backing paper from the thermal pads on the underside of the product.
3. Make sure your Raspberry Pi 5 is powered off. Position the Active Cooler carefully in the correct space on Raspberry Pi 5, making sure not to hit any of the connectors. Please refer to the diagram on the front of the box which shows the correct position and orientation of the product.
4. Align the two white push pins with the two dedicated heatsink holes.
5. When correctly positioned, press evenly on the tops of the two push pins simultaneously until they click, indicating that they are clipped onto the board.
6. Once the Active Cooler is mounted, connect its fan cable to the connector labelled 'FAN' on Raspberry Pi 5. Take care to ensure the cable's connector is the correct way round when inserting it. If you feel any resistance, stop immediately, remove the fan cable connector, and make sure that both it and the connector on Raspberry Pi 5 are undamaged before proceeding. Make sure that the connector on the cable is pushed down fully onto the connector on Raspberry Pi 5.
7. We recommend that the Active Cooler is not removed once it is fitted to Raspberry Pi 5. Removal of the Active Cooler will cause the push pins and thermal pads to degrade and is likely to lead to product damage.
8. Ensure the push pins are undamaged and can clip on to the Raspberry Pi board securely before use. Discontinue use of the Active Cooler and replace the push pins if they are damaged or deformed, or if they do not clip securely.

## Physical specification

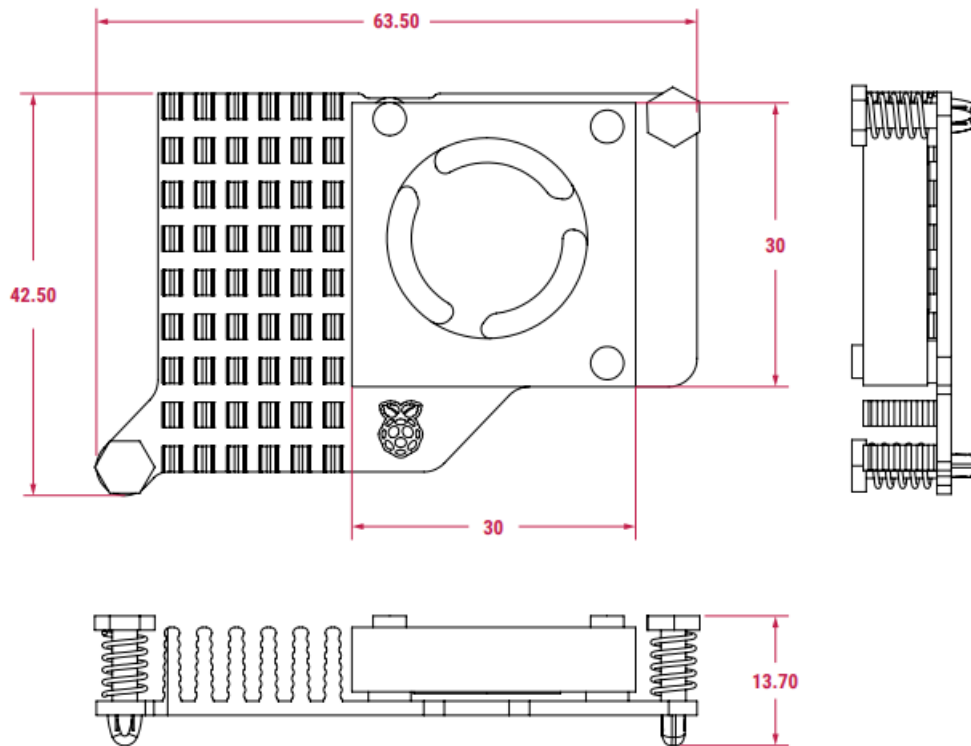

#### Note:

- All dimensions in mm
- All dimensions are approximate and for reference purposes only. The dimensions shown should not be used for producing production data
- The dimensions are subject to part and manufacturing tolerances
- Dimensions may be subject to change

#### WARNINGS

- This product should only be used with Raspberry Pi 5.
- This product should only be operated in a well-ventilated environment, and if used with a case, the case should not be covered.
- Make sure the metal heatsink does not touch any electronic components on Raspberry Pi 5 or any accessories, to avoid the risk of unwanted electrical contact and shorting.
- Ensure the thermal pads are present and undamaged before use. If the pads are missing or damaged, you will need to replace them before using the Active Cooler.
- Ensure the push pins are undamaged and can clip onto the Raspberry Pi board securely before use. Discontinue use of the Active Cooler and replace the push pins if they are damaged or deformed, or if they do not clip securely.
- Take care when using the Active Cooler, as the metal parts of the product may become hot during operation.
- Avoid removing the Active Cooler once it is fitted to Raspberry Pi 5, as this product is not designed for repeated removal and replacement.

#### SAFETY INSTRUCTIONS


To avoid malfunction or damage to this product, please observe the following:

- Do not expose to water or moisture, or place on a conductive surface while in operation.
- Do not expose to heat from any external source; the Raspberry Pi Active Cooler for Raspberry Pi 5 is designed for reliable operation at normal ambient temperatures.
- Take care while handling to avoid mechanical or electrical damage to the fan and connectors.
- Avoid touching or handling the fan while it is powered.

Raspberry Pi Active Cooler for Raspberry Pi 5 – Raspberry Pi Ltd

---

## Documents / Resources

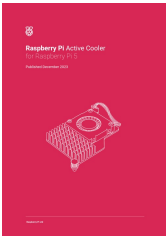	<p><a href="#">Vilros SC1148+VILP279 Raspberry Pi Active Cooler</a> [pdf] User Manual</p> <p>Raspberry Pi 5, SC1148 VILP279 Raspberry Pi Active Cooler, SC1148 VILP279, Raspberry Pi Active Cooler, Pi Active Cooler, Active Cooler, Cooler</p>
---	---

## References

-  [Documents - Product Information Portal - Raspberry Pi](#)
- [User Manual](#)