

Voluas®
VLR001
Automatic
Cat Feeders



Voluas VLR001 Automatic Cat Feeders User Guide

[Home](#) » [VOLUAS](#) » Voluas VLR001 Automatic Cat Feeders User Guide 

Contents

- [1 Voluas VLR001 Automatic Cat Feeders](#)
- [2 Components](#)
- [3 WHAT'S IN THE BOX](#)
- [4 Features, Controls and Indicators](#)
- [5 Feeding Schedule Setup](#)
 - [5.1 Specifications](#)
 - [5.2 Key Definitions](#)
 - [5.3 Quick Programming Guide](#)
 - [5.4 Prepare and Assemble Feeder](#)
 - [5.5 Troubleshooting](#)
 - [5.6 Replacement Parts and Accessories](#)
 - [5.6.1 Cleaning & Care](#)
 - [5.7 Warranty](#)
 - [5.8 Important Safety Information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Voluas®

Voluas VLR001 Automatic Cat Feeders



Components

Note: The bowl and bowl holder are shipped inside feeder.



Note: Power Supply method:

1. DC 5.0V Power adapter & USB cable.
2. 3 D-cell alkaline batteries Required. Batteries NOT Included.

WHAT'S IN THE BOX


1. Automatic Pet Feeder
2. Power Adapter
3. USB Power Cable
4. Desiccant Bag
5. Stainless Steel Bowl
6. Bowl Holder
7. User Manual

Features, Controls and Indicators

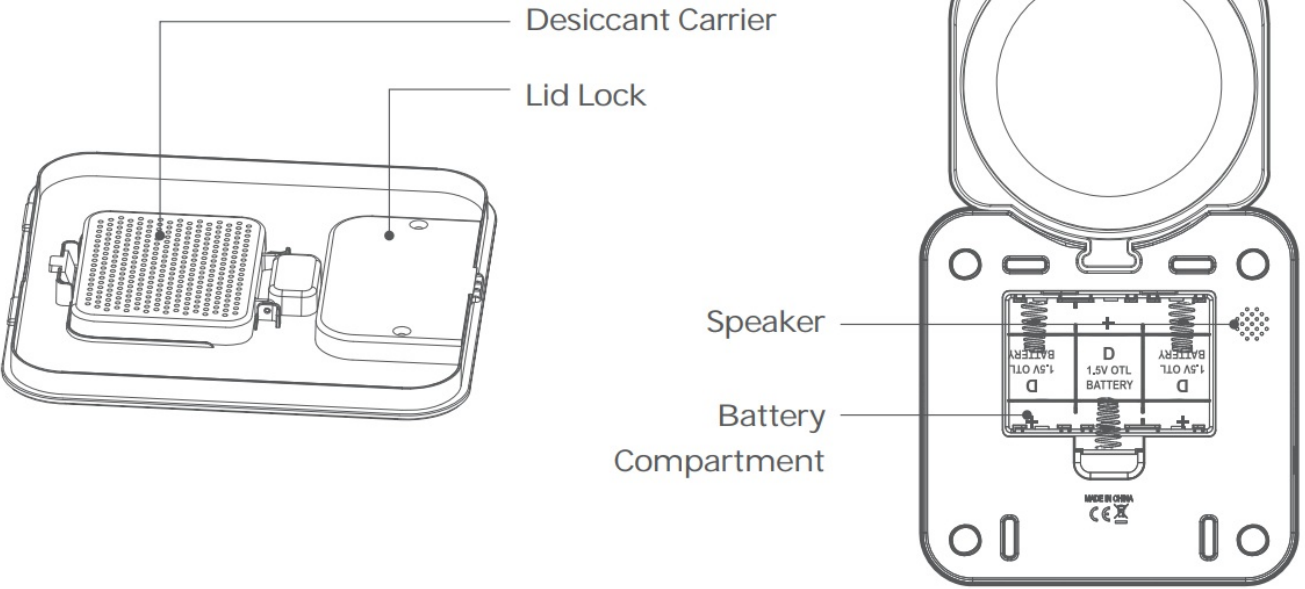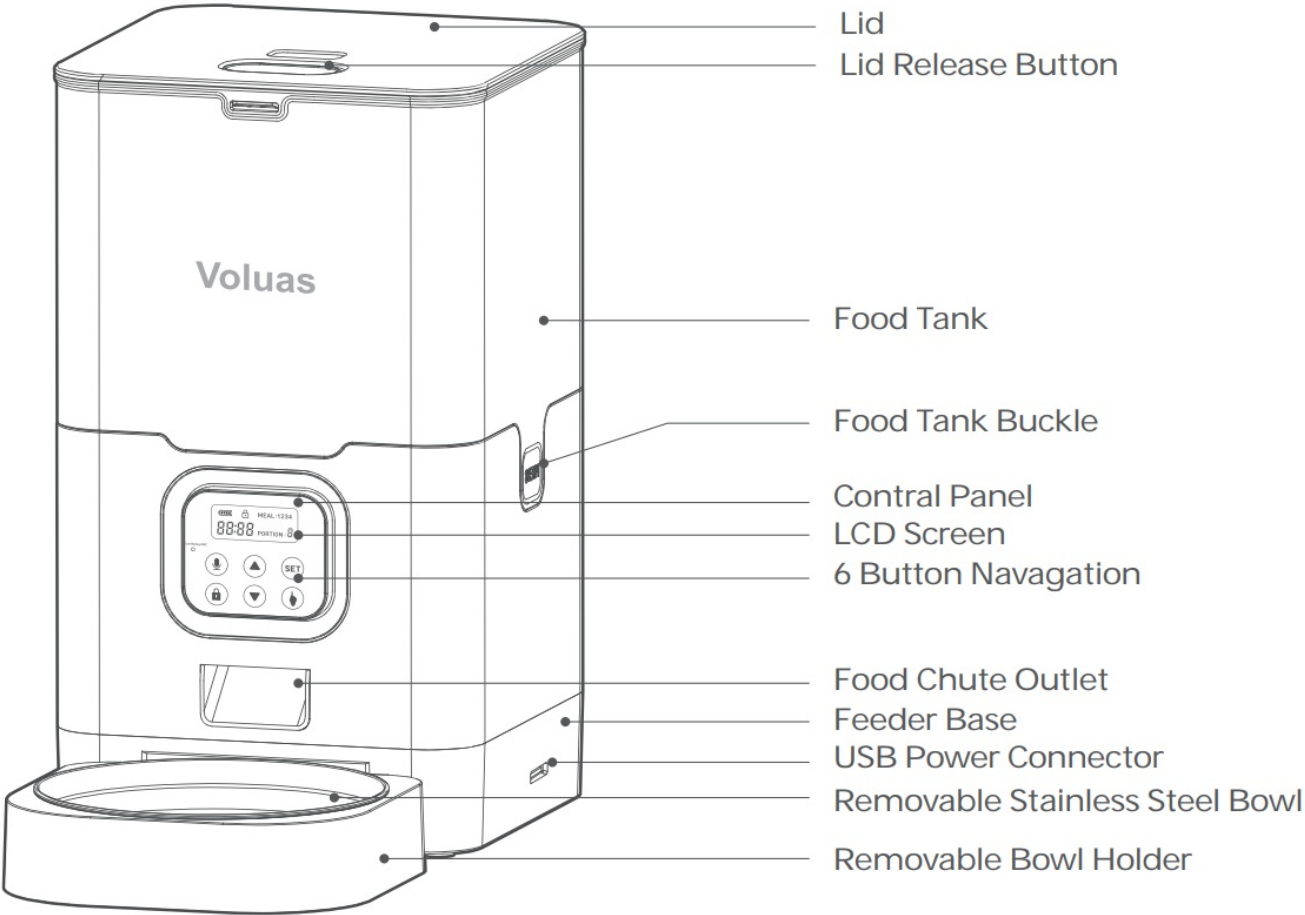

Feeding Schedule Setup

Panel Instruction

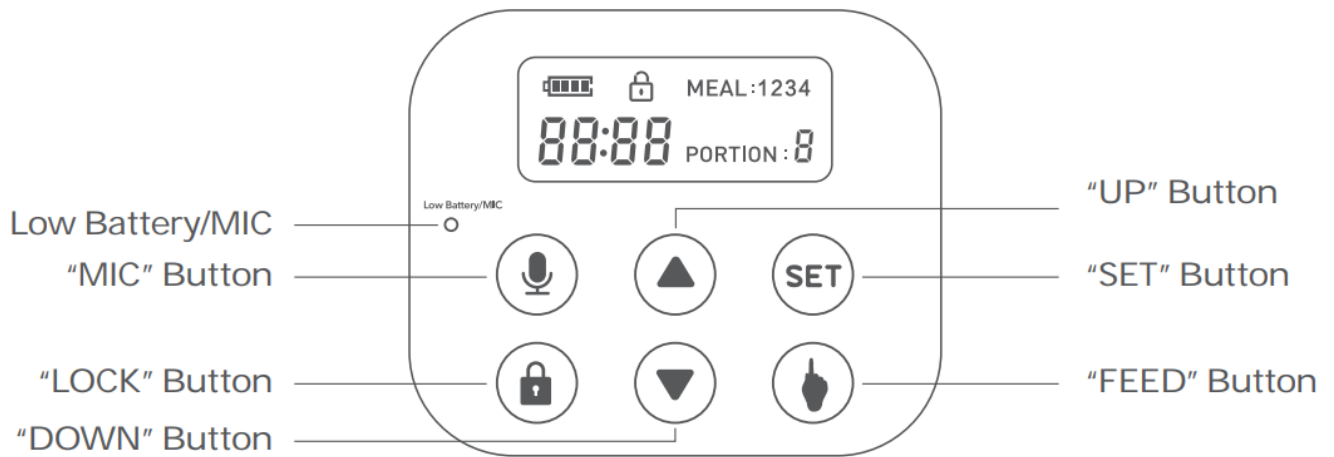

Specifications







| | |
|-----------------------|--|
| Power | DC 5V power adapter; 3 x alkaline D batteries |
| Power Adapter | AC100-240V Input, DC 5V output |
| Working Current | Avg. 80 m A |
| Operating Temperature | -20 °C- 85 °C / -4 ° F – 185 ° F |
| External Socket | 53 mm power socket |

Key Definitions

| | |
|-----------------------|--|
| 6 Button Navigation | 6 button control panel with up arrow, down arrow, mic button, lock button, set button and feed button on the Navigation LCD screen are used to program feeder. |
| Battery Component | Located on bottom of feeder base. Holds 3 D-cell alkaline batteries. |
| Battery Cover | Covers and protects the battery component. |
| Battery Indicator | Shows a visual readout of battery level. |
| Button Lock | The 6-Button Navigation panel automatically locks after 20 secs of inactivity and the lock icon appears on LCD screen. |
| Button Lock Indicator | Shows a visual indication of lock status. |
| Control Panel | Contains LCD screen and 6 Button Navigation Panel. |
| Desiccant Carrier | Load desiccant. |
| Feeder Base | Holds food tank and bowl. Main part of feeder with the control panel. |

| | |
|--------------------------------|--|
| Food Chute Outlet | Opening in feeder base and conveyor where dispenses into stainless steel bowl. |
| Food Tank | Container for dry pet food. |
| Food Tank Buckle | Secures food tank can allowed to detach ment for cleaning. |
| LCD Screen | Liquid crystal display screen to visually display text and images to easily program the pet feeder. Located on the control panel on the hopper base. |
| Lid | Serves as the closure or seal of the food tank. |
| Lid Release Button | Allows lid to be removed for adding pet food. |
| Low Battery/Mic Indicator | Visually displays battery level and Mic status. |
| Meal Nu m ber | Indicates which meal is being programmed. Up to 40 Portion can be scheduled . |
| Meal Size | Indicates portion size of meal being programmed or portion for next scheduled meal . |
| MIC Button | Allows for voice recording. |
| Removable Bowl Holder | Removable plastic piece which attaches to feeder hopper base and secures steel bowl. |
| Removable Stainless Steel Bowl | Catches dry pet food when dispensed from feeder food chute. |
| Speaker | Plays voice recordings. |
| Time Indicator | Displays the current time or time of next scheduled meal. |
| USB Power Connector | For connecting the pet feeder to the power adapter (Included). |

6-BUTTON NAVIGATION QUICK GUIDE

| BUTTON | DESCRIPTION | SETUP MODE FUNCTION |
|---|-------------|---|
|  | MIC | Record Voice Message |
|  | LOCK | Displays when 6-Button Navigation is Disabled. Buttons Auto matically Lock When Not in Use. |
|  | UP | Increases Selection |
|  | DOWN | Decreases Selection |
|  | SET | Parameter Modification |
|  | FEED | Manual Feeding Mode |


Quick Programming Guide

Note: Please ensure the feeder machine is powered on with DC 5.0V power adapter and USB power cable or 3 D-cell alkaline batteries.

Note: Please ensure the control panel is unlocked.


Note: INDOOR HOUSEHOLD USE ONLY.



LOCK button

Press “” button to unlock the control panel, the icon will indicate the unlock standby state. The 6-Button Navigation automatically locks after 20secs of inactivity and the lock icon appears on LCD screen.



MIC Button




When enter the unlocked state and standby, pressing and holding this key “” for 2 seconds then the “Low Battery/Mic” Led will turn red and speaker ring once, which prompts to start recording. When you release the “

” button, the recording ends. At the same time, your recording will be replayed. (Please keep pressing the key “” during the whole recording process.)






SYSTEM TIME SETTING

A. Hour Setting.




In the unlocked state, press the “” button to set the “hour” of the system, the number of “hour” will flash. At this time, press the “” key or the “” key to adjust the “hour”. Press and hold to quickly increase or decrease to desired hour.






B.Minute Setting.

Press the “” button again to set the “minute” of the system, the number of “minute” will flash. At this time, press the “” key or the “” key to adjust the “minute”. Press and hold to quickly increase or decrease to desired minute.(Displays the current system time or time of scheduled meal.




MEAL TIME SETTING

- A. Press the “” button to set the “hour” of feeding time of the 1st meal, the number of “Meal 1” and “hour” will flash. At this time, press the “” key or “”key to adjust the “hour” of the first meal feeding time. Press and hold to quickly increase or decrease to desired hour.



- B.Press the “” button to set the “minute” of feeding time of the 1st meal, the number of “Meal 1” and “minute” will flash. At this time, press the “” key or “” key to adjust the “minute” of the first meal feeding time. Press and hold to quickly increase or decrease to desired hour.




- C. Press the “” button to set the “Portion” for the 1st meal, the number of “Meal 1” and “Portion” will flash. At this time, press the “” key or “” key to adjust the “Portion” of the first meal. Press and hold to quickly increase or decrease to desired Portion.



- D. Cancel the Meals. Set the portion to 0, the meal will be canceled. And the canceled meal sign will be blank when it back to standby state.




- E. Repeat process for additional meals.
- F. Press and hold the “” button until it return to the unlocked standby state.


Tips: In the above steps 1-14, if you press and hold the button for a long time, it will directly return to the unlock standby state.

UP & DOWN BUTTON

A. UP Button. (“”)

Short press the “” key once, the set number will increase by 1. Long press to quickly increase selection.

DOWN Button. (“”)

Short press the “” key once, the set number will decrease by 1. Long press to quickly increase selection.

FEED BUTTON

A. FEED Button. (“”)

In the unlocked state, short press once to manually feed a meal manually feed a meal.

Note:

1. There is a Low Battery indicator on the left side of the control panel. When you go out for extended period, check if the voltage indicator light is on. If there is a light or flashing light, please replace the battery to prevent your pet from starvation.
2. DO NOT put your fingers into the machine at any time.
3. This product uses 3 x D alkaline batteries.
4. Please dispose of old batteries in accordance with national regulations (pay attention to environmental protection). When the feeder is not in use for extended periods, please remove the battery to prevent leaking battery fluid.

Do not add semi-dry or wet pet food, this product can only use dry pet food. If you have any questions, please contact us at support@voluas.com


Prepare and Assemble Feeder

Assembling Bowl Holder& the Bowl

Pull the bowl holder out from the feeder food tank and install the bowl into holder. Connect the holder and bowl to the machine.

Note:

For a better antioxidant effect, tear off the sealing film outside the small package only when you use it.

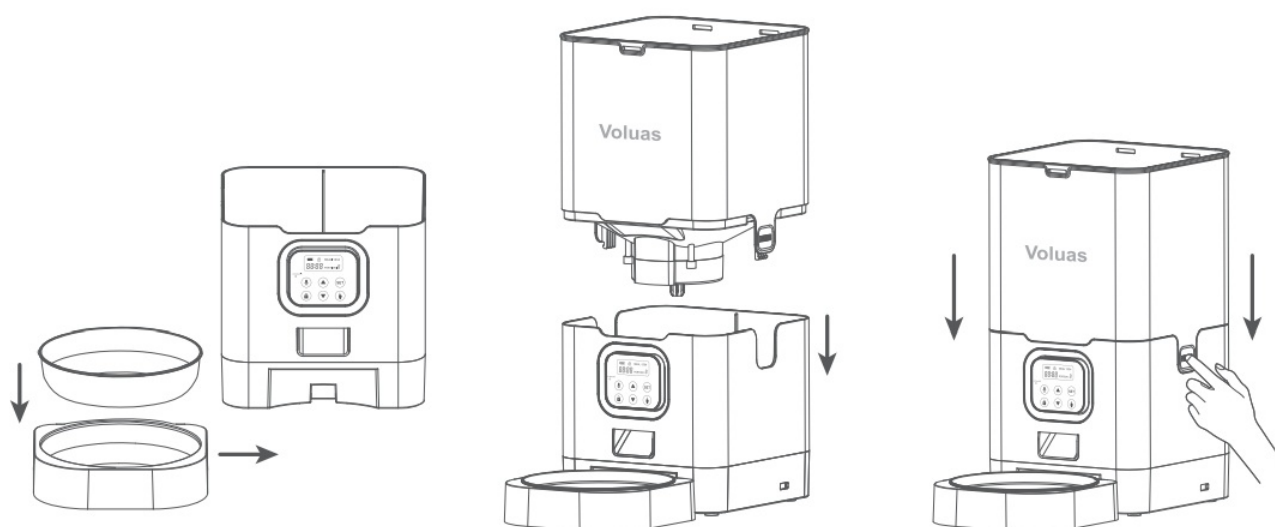


Placing Desiccant Bag

The VOLUAS desiccant bag can remove the moisture or odor inside the tank, protect the pet food from oxidation damage, and preserve freshness.

Note:

- It's recommended to change desiccant bag every 15 days to prevent mold.
- Please remove the desiccant bag before cleaning the lid.
- For a better antioxidant effect, tear off the sealing film outside the small package and use immediately.

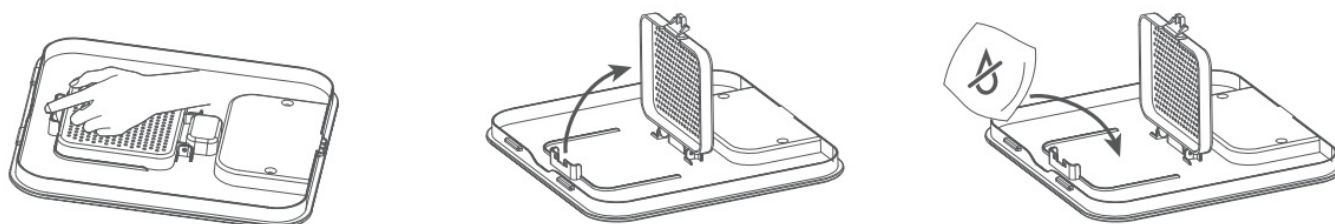

Connecting Power

- Insert the 5V power adapter into a wall socket, Plug in the power socket of the feeder.
- Open the battery compartment at the bottom of the unit, and install 3 alkaline D batteries (not included) in case

of outage.


- The LCD display will light up automatically indicating the feeder is on.

Note:

Battery NOT included.

Before connecting to power, make sure all parts are clean and completely dry.

The battery should power with an output of 4-5V; the battery level icon on the display blinks on a low battery level(<4V).

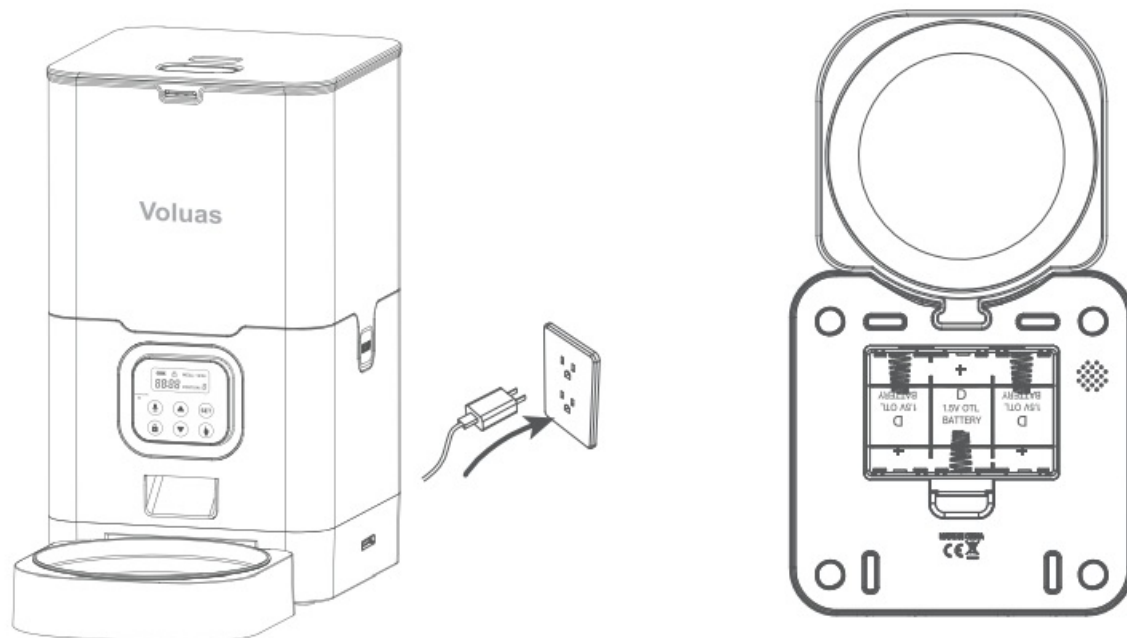


Feeding Schedule Setup

(Refers to No.4.3 steps)

- Fill food tank with dry pet food. Close the lid and it will snap into place due to gravity;
- Set the portion to 0, the meal will be canceled.


Note: Do NOT use canned, wet or moist pet food. Recommend kibble size ranging from 2-10mm/ 0.07-0.4in in diameter.

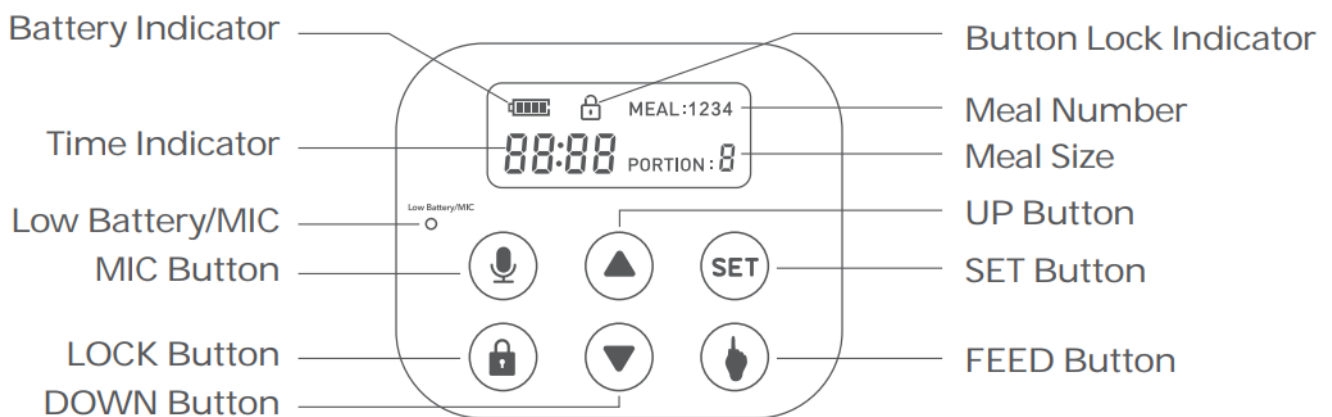


Filling Food Tank

Fill food tank with dry pet food. Close the lid and it will snap into place due to gravity.

Note: Do NOT use canned, wet or moist pet food. Recommend kibble size ranging from 2-10mm/ 0.07-0.4in in diameter.

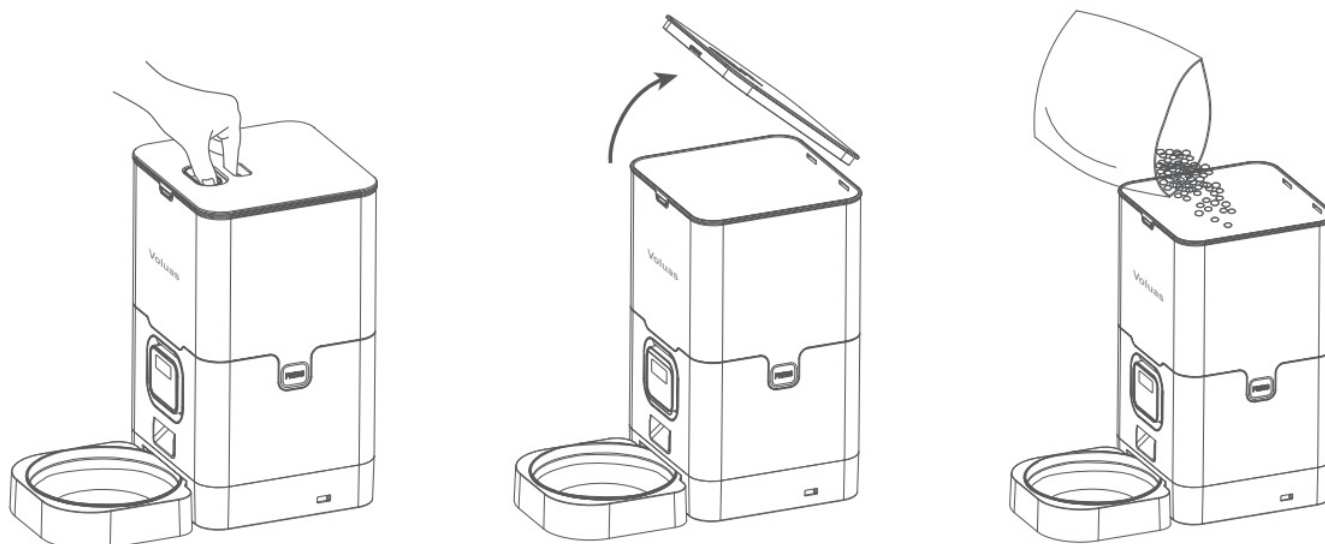

Recording A Meal Call

- Press and hold the “” button, start recording after beep.
- Release the button when finished, 2 beeps indicate it's successfully saved. 10 second maximum recording length.

Manually Feeding Your Pet

Press the “” button and one portion (1tsp/12.5ml) will be fed each time.

Note:

The normal schedule and portion will not be affected.

Troubleshooting

The answers to these questions should help you solve most problems you may have with the pet feeder. If they do not, please contact our Customer Care Center at support@voluas.com.

| PROBLEM | SOLUTION |
|--|---|
| 6-Button Navigation is locked/ buttons do not work. | Buttons automatically lock after 2 minutes of inactivity. To unlock 6-Button Navigation Panel, press “LOCK” Button. |
| The food won't come out. | Please be sure to fill ONLY with dry food; kibble size should range from 2-10 mm/0.07-0.4in in diameter. Check for foreign objects inside disassemble the food tank and check the chute and food outlet for blockage. Check for low battery level/power adapter is connected properly. |
| Why is the amount of food from my feeder inaccurate, the number on the display is not clear, or the function is not working properly? | This is likely due to a low battery. Replace 3 D-cell alkaline batteries. |
| How to clean the feeder? | This product cannot be placed outdoors or exposed to rain. When cleaning, use a damp cloth to clean exterior while preventing water from going inside the machine. If you need to disassemble the food storage bucket, please follow the instructions from “ Product Assembly and Use ” . The storage tank, bucket lid, and feeding basin can be hand- cleaned with water. |

Replacement Parts and Accessories

Replacement

Replacement parts or accessories for your pet feeder can be purchased by visiting www.voluas.com or by contacting our Customer Care Center at support@voluas.com.

| Part Description | Replacement Part Number |
|----------------------|-------------------------|
| 5.0V Power Adapter | VLR001 |
| Usb Power Cable | VLR002 |
| Stainless Steel Bowl | VLR003 |
| Desiccant | VLR004 |



Cleaning & Care

Cleaning parts

It's recommended to clean the feeder regularly for the continued good health of your pet. The washable parts of the VOLUAS auto pet feeder are as follows:

1. Food tank.
2. Food tray.
3. Lid (without desiccant bag);

They can be submerged in water. Clean ONLY by hand-washing using cool or warm soapy water.

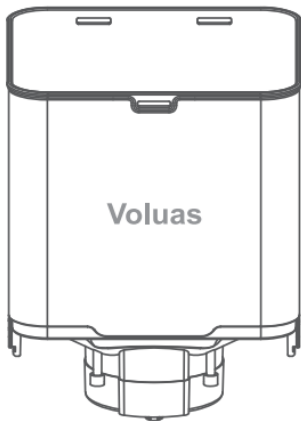

Washable




Not washable


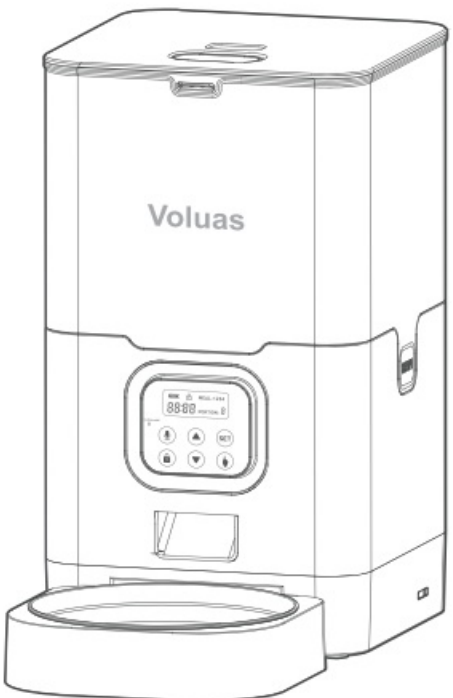


Washable

Disassembling the food tank

If you have food inside the tank or chute outlet, press the Unlocked button on both sides of the machine and the press Feed button a few times to empty firstly. Press the food tank buckles with your thumbs and push the tank upward to disassemble.

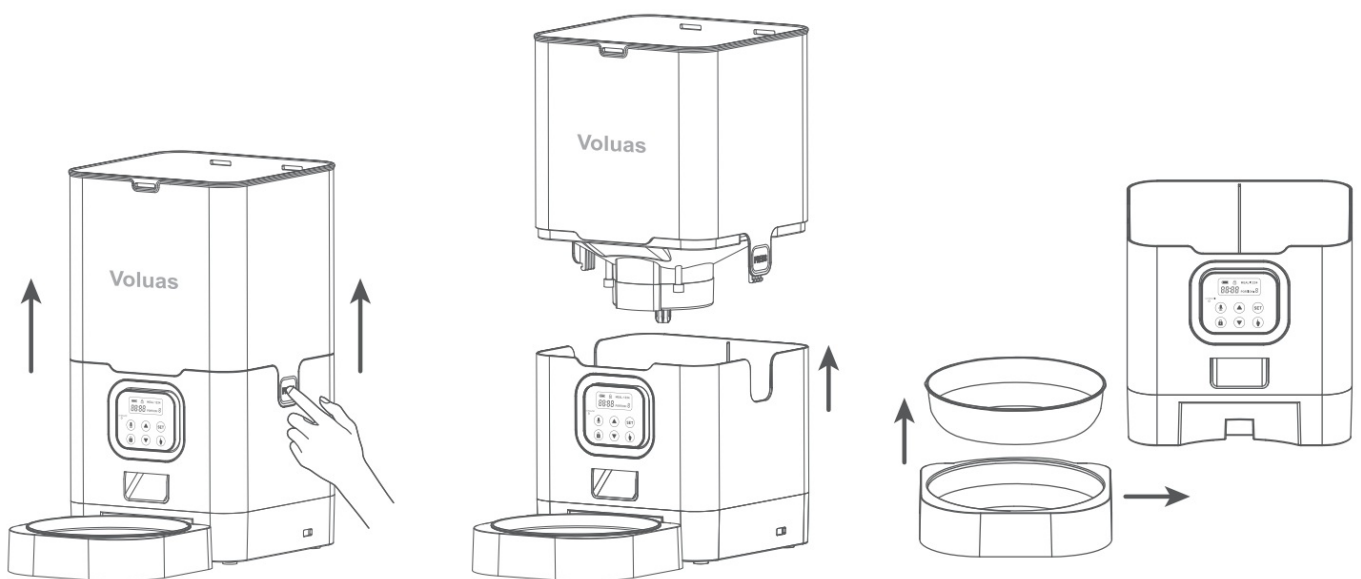

| | | | | |
|----------------|---|-------------------|--|-------------------|
| Product |  | |  | |
| | | | | |
| No. | A | B | C | D |
| Model No. | VL001 | VL003 | VL002 | VL004 |
| Style | Opaque | Translucent | Opaque | Translucent |
| Capacity | 4L | 4L | 6L | 6L |
| Programmable | Key | Key | Key | Key |
| Material | ABS | ABS | ABS | ABS |
| Dimensions | 7.48×7.48×11.41in | 7.48×7.48×11.41in | 7.48×7.48×13.77in | 7.48×7.48×13.77in |
| Net Weight | 1.435kg(3.16lb) | 1.435kg(3.16lb) | 1.55kg(3.42lb) | 1.55kg(3.42lb) |
| Manufacturer | Dongguan DiRui Electronic Technology Co.,Ltd | | | |
| Address | 5th Floor, Building G, Tailian Science and Technology Park, Xiaobian Community, Chang'an Town, Dongguan City | | | |

Warranty

This Product has a 1 year limited manufacturer's warranty. Complete details of this product's warranty and full terms can be found at www.voluas.com. For any questions please contact us at support@voluas.com. We will reply as soon as possible.



Important Safety Information

The Following are Safety Alert Messages. Please pay close attention to any safety alert message and follow the proper protocol to avoid possible injury or death.

WARNING: This message indicates a hazardous situation. Ignoring this message can result in serious injury or death. Please follow proper safety procedures.

CAUTION: This message indicates a possibly dangerous situation. Stop use and assess the problem to avoid any harm to your pet.

NOTICE: This message pertains to safe use practices and is NOT related to any personal or pet injury.

WARNING

- DO NOT submerge or immerse any part of the control panel or base unit in water to avoid damaging electronics.
- DO NOT place any items on top of the feeder, keep clear at all times to avoid damaging the automatic mechanisms.
- Dispose of all packaging materials properly and keep out of reach of children or pets. Plastic and other packing materials may cause suffocation or injury to children and pets.
- DO NOT allow small children to play with or around pet feeder.
- To reduce the risk of injury or damage, supervise device when used in proximity to children.
- Intended for use with dogs or cats ONLY.
- DO NOT use this pet feeder with puppies, kittens, dogs, cats, or physically disabled animals that cannot reach the food tray.
- DO NOT use outdoors. FOR INDOOR HOUSEHOLD USE ONLY. Check operation frequently to be sure the pet feeder is dispensing properly.
- For dry food use ONLY.
- DO NOT use wet, canned, or moist food.
- Pet feeder should be placed on a level surface to avoid malfunction.
- Before leaving for an extended time, always replace batteries with new batteries.
- DO NOT place any foreign objects in the pet feeder.
- DO NOT disassemble the pet feeder other than components as instructed in this operating guide.
- DO NOT get power cord or plug wet. Avoid any liquid to protect from serious injury or death.
- ONLY use original manufacturer attachments or those approved by manufacturer.
- DO NOT unplug by pulling on power cord. To unplug, always grasp the plug, not the power cord.
- DO NOT operate any appliance if it has a damaged power cord or plug, Call Customer Care Center immediately for further instruction.
- DO NOT operate any malfunctioning or damages devices. Call Customer Care Center immediately for further instruction.
- DO NOT place appliance in proximity where it can fall into a tub, sink, or any other wet areas. Failure to do so may result in serious injury or death from electrocution.
- ALWAYS unplug any appliance when not in use.
- ALWAYS unplug before putting on or removing parts or before cleaning.
- DO NOT use appliance for anything other than its manufacturer intended use.

- If the plug of this device gets wet, do not attempt to unplug. Turn off the electricity to that wall outlet before proceeding.
- Examine thoroughly after installation. Do not plug in if there is water on the Power Cord or plug.
- To avoid tripping, always position power cord safely out of the way of foot traffic.

CAUTION:

DO NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) at any hardware store to protect the power cord.

Thank you for choosing the VOLUAS brand. You and your pet deserve a companionship that includes memorable moments and a shared understanding together. Our products and training tools promote a lifestyle of protection, teaching, and love – essentials that influence memories for a lifetime. If you have any questions about our products or training your pet, please visit our website at www.voluas.com or contact our Customer Care support at support@voluas.com.

PRODUCT WARRANTY

To get the most protection out of your warranty, please register your product within 30 days at www.voluas.com. By registering and keeping your receipt, you will enjoy the product’s full warranty coverage and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, VOLUAS® will never give or sell your valuable information to anyone. Complete warranty information is available online at www.voluas.com.

Documents / Resources

| | |
|--|--|
| <div><div>Voluas®</div><div>Automatic Pet Feeder</div><div>User Guide (Generic)</div><div></div></div> | <div>Voluas VLR001 Automatic Cat Feeders [pdf] User Guide</div> <div>VLR001 Automatic Cat Feeders, VLR001, Automatic Cat Feeders, Cat Feeders, Feeders</div> |
|--|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.