



vtech 6132A HDMI Game Stick Instruction Manual

[Home](#) » [vtech](#) » vtech 6132A HDMI Game Stick Instruction Manual 

vtech



LeapLand Adventures™



Instruction Manual


This guide contains important information. Please keep it for future reference. 91-003970-005 US

Contents

- 1 INTRODUCTION
- 2 INCLUDED IN THE PACKAGE
- 3 GETTING STARTED
 - 3.1 INITIAL SETUP
- 4 BATTERY REMOVAL AND INSTALLATION
- 5 RECHARGEABLE BATTERIES
- 6 PRODUCT FEATURES
- 7 CARE & MAINTENANCE
- 8 TROUBLESHOOTING
- 9 FCC Compliance Statement
- 10 IMPORTANT NOTE:
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

INTRODUCTION

Thank you for purchasing the LeapLand Adventures™ learning video game! Hunt for the four missing keys to unlock Clever Castle and learn about letters, shapes, numbers and colors along the way.

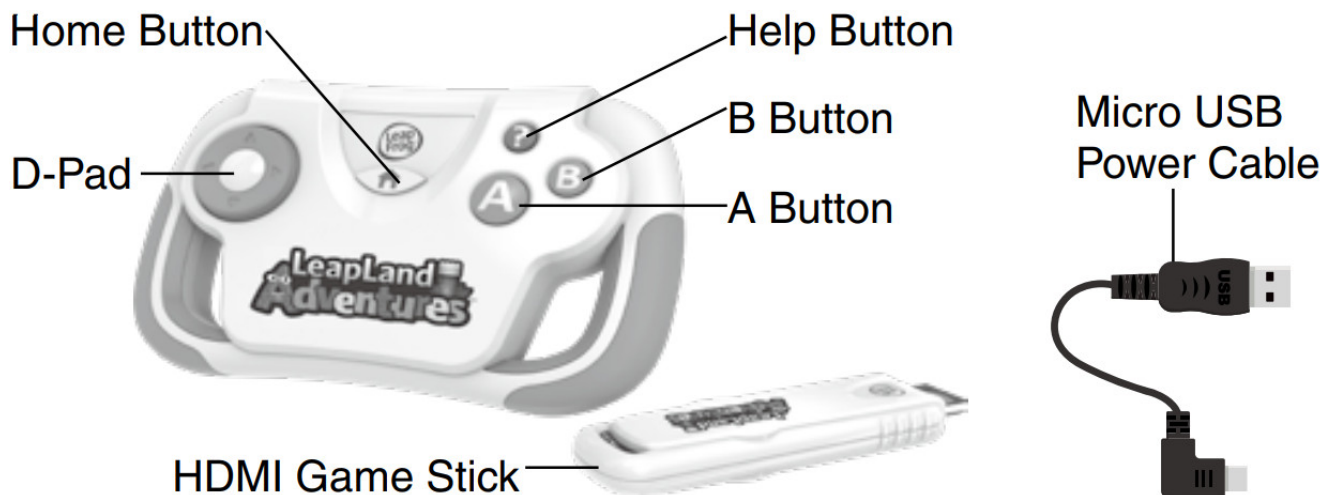

INCLUDED IN THE PACKAGE

- 1 wireless controller
- 1 HDMI game stick
- 1 micro USB power cable
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE

Please save this Instruction Manual as it contains important information.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.


Unlock the Packaging Locks

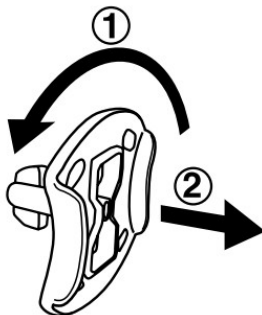


1. Rotate the packaging locks 90 degrees counterclockwise.
2. Pull out the packaging locks and discard.

GETTING STARTED


INITIAL SETUP

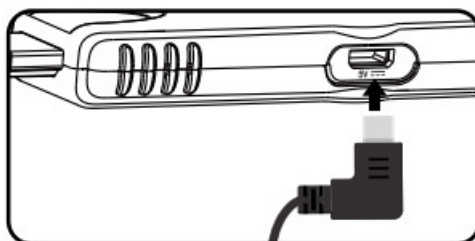

1. Plug the USB B Connector end of the Micro USB Power Cable into the USB B port on the HDMI Game Stick.

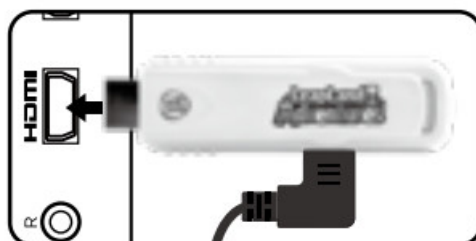


2. Plug the HDMI Game Stick into an HDMI port on your television.

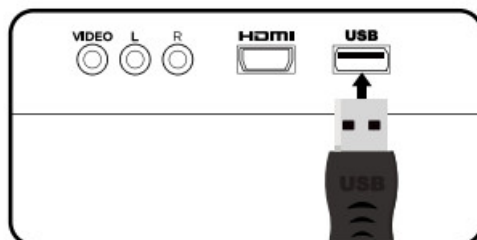

3. Plug the USB A Connector end of the Micro USB Power Cable into a USB port on your television or other qualified DC 5V adapter with output no less than 500mA.

BATTERY REMOVAL AND INSTALLATION

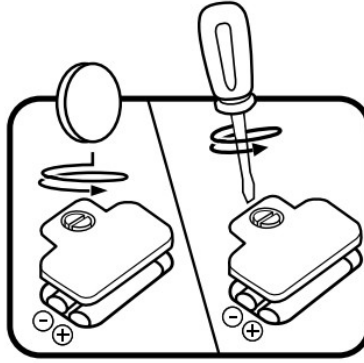

1. Find the battery cover located on the back of the Wireless Controller, use a coin or screwdriver to loosen the screw and then open the battery cover.
2. Remove old batteries by pulling up on one end of each battery.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

NOTE

If the Wireless Controller powers down or if the light fades out during play, please install a new set of batteries.

PRODUCT FEATURES

1. D-Pad

Press the D-Pad on the Wireless Controller to select an item on the Menu screen. While playing the game, press the D-Pad left and right to move the character around the screen. Press down on the D-Pad to make the character crouch and press left or right on the D-Pad to make the character walk while crouching.

2. Home Button

Press the Home Button on the Wireless Controller to quit a level, quit the game, or return to the previous Menu screen.

3. Help Button

Press the Help Button on the Wireless Controller to hear hints and tips on how to play the game or navigate the Menu screen.

4. A Button

- Press the A Button on the Wireless Controller to select the highlighted objects on the Menu screen.
- Press the A Button to make the character jump.
- Press the A Button a second time while the character is in the air to make the character double-jump.
- Press the A Button repeatedly to get the character out of a bubble trap.
- When two treasure chests appear on the screen, press the A Button to select the treasure chest on the left.

5. B Button

- Press the B Button on the Wireless Controller to return to the previous Menu screen, or to change the playable character while on the Map Menu screen.
- If a B Button icon appears above a Curricular Character's head, press the B Button to interact with that character.
- When two treasure chests appear on the screen, press the B Button to select the treasure chest on the right.

6. Menu Screens

The following Menu screens appear in the game.

Save Selection Screen




- Create or delete a saved profile on the Save Selection screen.
- To recover a saved file that has been accidentally deleted, highlight a New save slot and press the following buttons on the Wireless **Controller**: Home + Home + Help + Help + B + B + Help + Home + B. This will recover the deleted file.
- To unlock all the castle rewards in the game, highlight an existing saved profile and press the following buttons on the Wireless Controller: Home + Home + Help + Help + B + B + Help + Home + B.

Map Menu Screen



- Access the different areas of the game from the Map Menu screen.
- The player will need to find at least one key before the castle area can be accessed.
- To change the playable character, press the B Button.
- To exit the game, press the Home Button.
- View castle rewards on the Map Menu screen after every Gem Festival.

Learning Center

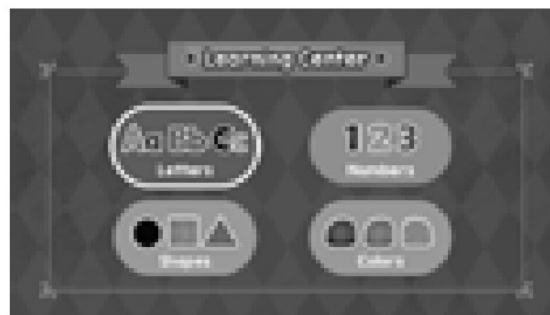

- Access the learning curriculum content from the Learning Center.

Level Select Screen



- Use the arrow buttons on the D-Pad to highlight an unlocked level.
- Press the A Button to select a highlighted level.
- Levels can only be unlocked once a previous level has been successfully completed.

7. In-Game Items

The following in-game items appear throughout the game.

Gems

- Players can collect Gems in every level.
- Players can also find Gems in treasure chests.









- When all of the levels in an area are completed, stars are rewarded to the player for the total number of Gems that they have collected.
- The game can be completed multiple times using a saved profile.
- Each completion will present the player with different Gems to collect.


Cleverberries

- Players can collect Cleverberries in every level.
- Players can also find Cleverberries in treasure chests.
- Cleverberries give the playable character one heart of health.

8. In-Game Obstacles

The following are some of the in-game obstacles that players will encounter. These in-game obstacles remove one heart of health if the playable character touches them.


Thorns	
Flytrap	
Spiked Flower	
Cactus	
Spiked Cactus	
Electric Box	
Large Floating Bubble	
Wooden Log	
	
	
	
	

Garbage Can	  
Thorned Tumbleweed	
Fire Plant Projectiles	

9. In-Game Characters

The following are some of the in-game characters that players will interact with.

Curricular Characters

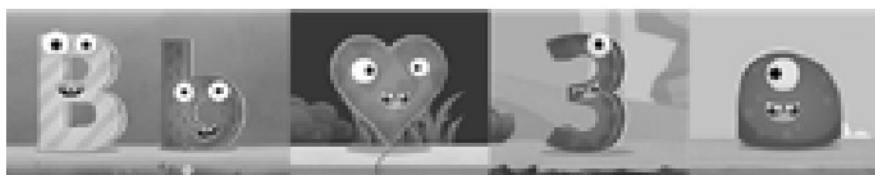

- The Curricular Characters teach fun facts about themselves.
- The Letter Curricular Characters can be found in the Letterland area of the Map Menu screen, or in the Learning Center.
- The Number Curricular Characters can be found in the Numberville area of the Map Menu screen, or in the Learning Center.
- The Shape Curricular Characters can be found in the Shapetown area of the Map Menu screen, or in the Learning Center.
- The Color Curricular Characters can be found in the Color Springs area of the Map Menu screen, or in the Learning Center.

Pixies



- The Pixies are silly and mischievous, and they do their best to prevent the player from finding the keys to Clever Castle.
- Some of the Pixies will remove one heart of health if the playable character touches them.
- The Pixies appear in many different shapes and colors; some fly, some swim, and some pop up from underground.

10. Automatic Shut-Off

To preserve battery life, the Wireless Controller will automatically go into sleep mode after approximately 1 minute without input. The unit can be turned on again by pressing the D-Pad, Home Button, A Button or B Button.

11. Screen Saver Mode

LeapLand Adventures™ will automatically save and quit the current game, then go into Screen Saver mode after


approximately 20 minutes without input. To exit Screen Saver mode, press the D-Pad, Home Button, A Button or B Button on the Wireless Controller.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Always keep the Wireless Controller and HDMI Game Stick away from water.
6. Examine the Micro USB Power Cable regularly, checking for damage to the cable, plug and other parts. Do not use the Micro USB Power Cable if there is any damage.

TROUBLESHOOTING

If you are unable to insert the HDMI Game Stick directly into the HDMI port on your television due to clearance issues, a third party HDMI extension cable may be a good solution. A short HDMI extension cable as shown below can be purchased from major electronics retailers.

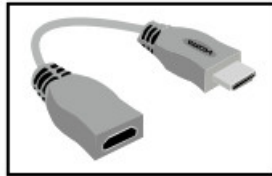

If for some reason the unit stops working or malfunctions, please follow these steps:

HDMI Game Stick

1. Interrupt the power supply by unplugging the USB A Connector end of the Micro USB Power Cable from the USB port on your television or other qualified DC 5V adapter with output no less than 500mA.
2. Unplug the HDMI Game Stick from the HDMI port on your television.
3. Wait for 10 Seconds, then plug the HDMI Game Stick into the HDMI port on your television.
4. Plug the USB A Connector end of the Micro USB Power Cable into the USB port on your television or other qualified DC 5V adapter with output no less than 500mA. The unit will now be ready to play again.

Wireless Controller

1. Interrupt the power supply by removing the batteries.
2. Let the unit stand for 10 seconds, then replace the batteries.
3. The unit will now be ready to play again.
4. If the unit still does not work, replace with an entire set of new batteries.

OTHER NOTES

Static electricity may cause the HDMI Game Stick to malfunction. In cases where the HDMI Game Stick is malfunctioning due to static electricity, disconnect the Micro USB Power Cable, wait for 10 seconds, then reconnect the Micro USB Power Cable to reboot the HDMI Game Stick.

FCC Compliance Statement

After completing the steps in the Initial Setup section, power on the television. FCC e-labeling will be shown on the television for the U.S. version of LeapLand Adventures™. This screen confirms that this product complies with FCC regulations.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-701-5327 in the U.S. and Canada, or email support@leapfrog.com. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Supplier’s Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6132
Product Name:	LeapLand Adventures™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell Street, Suite 500, Emeryville, California 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B)



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Visit our website for more information about our products, downloads, resources and more.

leapfrog.com

leapfrog.ca

Read our complete warranty and legal policies online at leapfrog.com/legal

LeapFrog Enterprises, Inc., a subsidiary of VTech Holdings Limited.


TM & © 2021 LeapFrog Enterprises, Inc.

All rights reserved.




Printed in China.

91-003970-005 US

Documents / Resources

	<p>vtech 6132A HDMI Game Stick [pdf] Instruction Manual</p> <p>6132, G2R-6132, G2R6132, 6132A, G2R-6132A, G2R6132A, 6132A HDMI Game Stick, 6132A , HDMI Game Stick</p>
---	--

References

-  [Kids Learning Games | Educational Toys & Kids Tablets | LeapFrog](#)
-  [Kids Learning Games | Educational Toys & Kids Tablets | LeapFrog](#)
-  [Legal | LeapFrog](#)