



Weintek MT8051iE Series HMI Touch Screen Instruction Manual

[Home](#) » [WEINTEK](#) » Weintek MT8051iE Series HMI Touch Screen Instruction Manual 

Contents

- [1 Weintek MT8051iE Series HMI Touch Screen](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation and Startup Guide](#)
- [5 Unpacking the Unit](#)
- [6 Installation Instructions](#)
- [7 Power Connections](#)
- [8 System Settings](#)
- [9 EasyBuilder Pro Software Settings](#)
- [10 Communication Connections](#)
- [11 Calibration Mode](#)
- [12 Limited Warranty](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



Weintek MT8051iE Series HMI Touch Screen



Product Information

- The MT8051iE Series HMI is an operator panel designed for indoor use only with a NEMA 4 rating. It has been tested to conform to European CE requirements, meaning the circuitry is designed to resist electrical noise. However, proper wire routing and grounding are necessary to ensure proper operation.
- The package comes with installation instructions, a human-machine interface, a power connector, and brackets and screws.
- The HMI requires a control box that provides enough stiffness and has a cutout dimension of 119 mm x 93 mm. All fastening holes and provided brackets and screws must be used to secure the operator panel in position, with a screw torque of 2.6 ~ 3.9 lbs.in to reach a waterproof effect and prevent panel deformation.
- The positive DC line must be connected to the '+' terminal, and DC ground to the '-' terminal. When downloading a project using a USB cable, do not connect HMI with PLC and PC simultaneously, as the electric potential difference may result in damage to HMI or PC.
- When powered up and displaying an image, the system setting button must be clicked to access the security tab, where the default password is 111111. Users can set their own passwords by clicking the buttons. In the MISC2 tab, enabling the 'Reset HMI to default' button in calibration mode will allow users to restore factory default by following the onscreen guide.
- The EasyBuilder Pro software must be launched to select the project file, press the F7 to shortcut key to open the download dialog box, select the Ethernet > IP tab, enter the HMI IP, and click Download to download the project file to HMI. Using a screensaver and backlight saver is recommended to avoid image persistence caused by displaying the same image on HMI for a long time.
- COM1 and COM3 [RS485] 2W support MPI 187.5K, and only one should be used at a time. Calibration mode can be accessed by pressing and holding anywhere on the screen when HMI starts, and if the 'Reset HMI to default' button in calibration mode is enabled, the 'RESET HMI TO DEFAULT' and 'SYSTEM SETTINGS'

buttons can be found in calibration mode.

Product Usage Instructions

1. Ensure that the installation environment meets NEMA rating electrical environment and environmental considerations, and cleaning considerations IP rating.
2. Unpack and check the delivery. Place the operator panel on a stable surface during installation to prevent damage.
3. Use a control box that provides enough stiffness and secure the operator panel in position using all fastening holes and provided brackets and screws.
4. Connect the positive DC line to the '+' terminal and DC ground to the '-' terminal. Do not connect HMI with PLC and PC simultaneously when downloading project using a USB cable.
5. Click the system setting button when HMI is powered up and displaying an image. Set passwords and enable the 'Reset HMI to default' button in calibration mode if needed.
6. Launch EasyBuilder Pro software, select the project file, enter HMI IP, and click Download to download the project file to HMI. Use a screensaver and backlight saver to avoid image persistence caused by displaying the same image on HMI for a long time.
7. Use only one of COM1 and COM3 [RS485] 2W at a time. Access calibration mode by pressing and holding anywhere on the screen when HMI starts, and restore factory default if needed by following the onscreen guide.

Installation and Startup Guide

This document covers the installation of MT8051iE Series HMI, for the detailed specifications and operation, please refer to Datasheet, Brochure and EasyBuilder Pro User Manual. Please read all warnings, precautions, and instructions on the device carefully before use.

Install Environment:

NEMA Rating	The HMI product is NEMA 4 rated, indoor use only.
Electrical Environment	The HMI product has been tested to conform to European CE requirements. This means that the circuitry is designed to resist the effects of electrical noise. This does not guarantee noise immunity in severe cases. Proper wire routing and grounding will insure proper operation.
Environmental Considerations	<p>(1) Make sure that the displays are installed correctly and that the operating limits are followed. Avoid installing units in environments where severe mechanical vibration or shocks are present.</p> <p>(2) Do not operate the unit in areas subject to explosion hazards due to flammable gases, vapors or dusts.</p> <p>(3) Do not install the unit where acid gas, such as SO₂ exists.</p> <p>(4) This device should be mounted in the vertical position and for use on the flat surface enclosure.</p> <p>(5) For use in Pollution Degree 2 Environment and dry location.</p> <p>(6) Relative Humidity: 10% ~ 90% (non-condensing)</p>
Cleaning Considerations	Clean the device using dry cloths. Do not use liquid or spray detergents for cleaning.
IP rating	IP 65
Warning	Protection impairment if used in a manner not specified by the manufacturer. Déficit de protection si utilisé d'une manière non spécifiée par le fabricant.

Unpacking the Unit

Unpack and check the delivery. If damage is found, notify the supplier.


NOTE: Place the operator panel on a stable surface during installation. Dropping it or letting it fall may cause damage.

1. Installation Instruction, 2-sided A4 *1
2. Human Machine Interface *1
3. Power Connector *1
4. Brackets & Screws *1 pack

Installation Instructions

Use a control box that provides enough stiffness. Cutout Dimension: 119 mm x 93 mm. Secure the operator panel in position, using all the fastening holes and the provided brackets and screws. Screw

Torque: 2.6 ~ 3.9 lbf.in. (For reaching waterproof effect and preventing the panel from being deformed.)

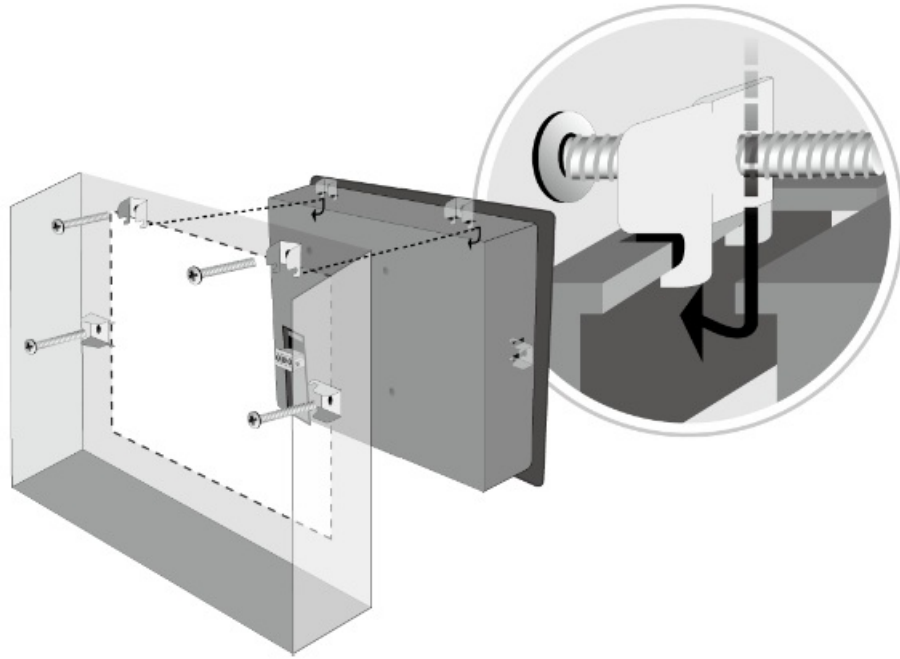

Plan for adequate space around the unit and inside the enclosure, for ventilation and cables. Consider the heat from other devices inside the enclosure. The ambient temperature around the unit must be 0 ~ 45°C*.

Minimum required clearances (along the overlay): Top 15 mm / Bottom 50 mm / Sides 15 mm

Maximum panel thickness: 4.5 mm


Operating temperature is 0°~50°C (32°~122°F) for use in installation without UL requirement

Power Connections

Power Connector Specifications:

- **Wire AWG:** 24~12
- **Wiring Conductor Minimum Temperature:** 75°C
- **Screw Torque:** 4.5 lbf-in (max.)
- Copper conduct only.


NOTE:

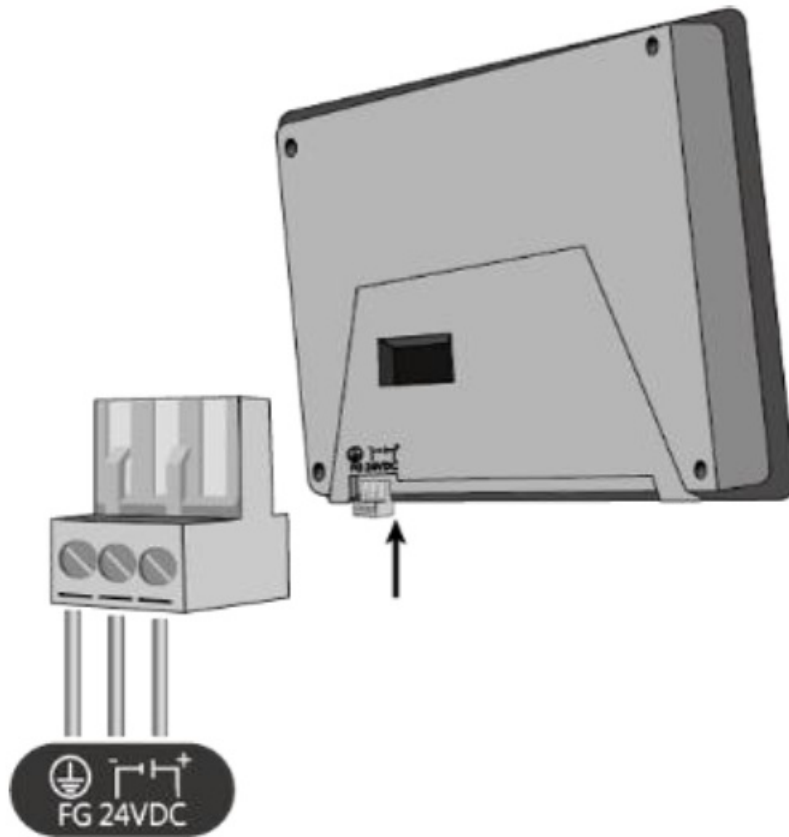

1. Connect positive DC line to the '+' terminal and the DC ground to the '-' terminal.
2. When downloading project using a USB cable, do not connect HMI with PLC and PC simultaneously, for electric potential difference may result in damage to HMI or PC.

System Settings

- When HMI is powered up and displays image, click the system setting button. (Default System Password: 111111)
- Go to Security tab, the default password is 111111, click the buttons to set your own passwords.
- In MISC2 tab, if “Enable [Reset HMI to default] button in calibration mode” is selected, the [RESET HMI TO DEFAULT] button can be found in calibration mode, as shown in Part 8.

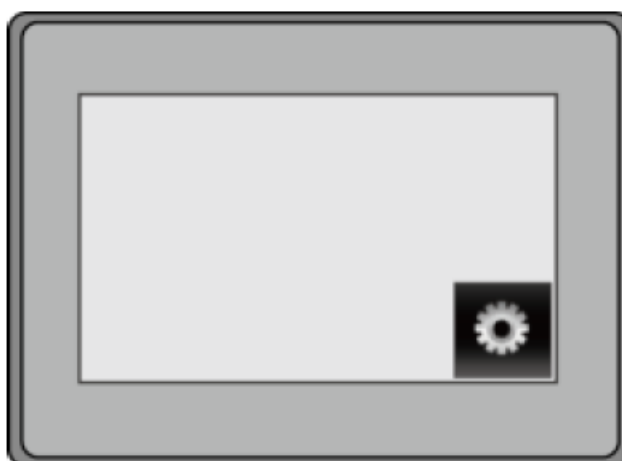




EasyBuilder Pro Software Settings

- Launch EasyBuilder Pro software, select your project file, press F7 shortcut key to open the download dialog box: Select Ethernet > IP tab > Enter your HMI IP > Click Download to download this project file to HMI.
- Using screensaver and backlight saver is recommended in order to avoid image persistence caused by displaying the same image on HMI for a long time. (Please refer to EasyBuilder Pro User Manual for software operation details)

Communication Connections

NOTE: COM1 and COM3 [RS485] 2W support MPI 187.5K, please use one at a time

- 9 Pin, Male, D-sub
- COM1 [RS232]
- COM1 [RS485]
- COM3 [RS485]

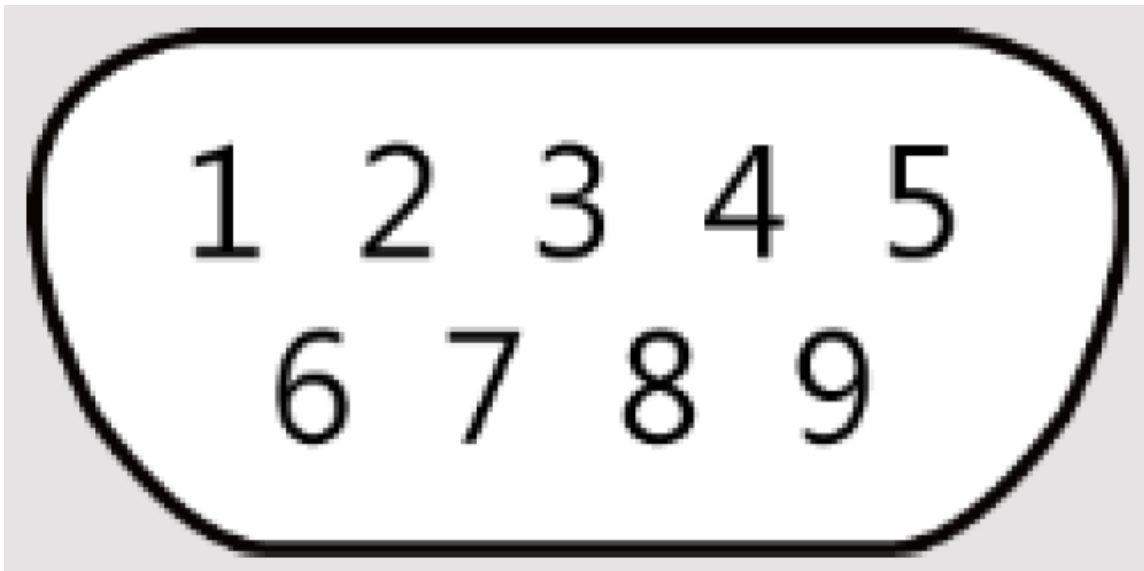

PIN#	COM1 [RS485]		COM1 [RS232] 2W	COM3 [RS485] 2W
	4W	2W		
1	Rx-	Data-		
2	Rx+	Data+		
3	Tx-			
4	TX+			
5	GND			
6			TxD	
7				Data-
8				Data+
9			RxD	

Calibration Mode



Press and hold anywhere on the screen when HMI starts until it enters touchscreen calibration mode. If “Enable [Reset HMI to default] button in calibration mode” is selected as described in Part 5 System Settings, then [RESET HMI TO DEFAULT] and [SYSTEM SETTINGS] buttons can be found in calibration mode. Follow the onscreen guide and press [yes] to restore factory default, and please note that the projects and data stored in the unit will all be cleared after this.

Battery Replacement

Battery replacement shall be performed by qualified personnel only and care must be taken when handling lithium batteries. For more information on battery replacement and disposal considerations, please refer to the following link:

http://www.weintek.com/download/MT8000/eng/FAQ/FAQ_103_Replace_Battery_en.pdf

CAUTION

NOTE: Make sure that all local and national electrical standards are met when installing the unit. Contact your local authorities to determine which codes apply

Power

The unit can be powered by DC power only, voltage range: 22~28VDC, compatible with most controller DC systems. The power conditioning circuitry inside the unit is accomplished by a switching power supply. The peak starting current can be as high as 2A.

Fusing Requirements

If the display does not come on within 5 seconds of powering up, remove power. An internal fuse will prevent damage if the polarity of the DC power is incorrect. Check wiring for proper connections and try to power up again.

High Voltage

An Internal fuse will prevent damage for overcurrent conditions however it isn't guaranteed. DC voltage sources should provide proper isolation from main AC power and similar hazards.

Emergency Stop

A Hard-wired EMERGENCY STOP should be fitted in any system using HMI to comply with ICS Safety Recommendations.

Supply Voltage Condition

Do not power the unit and inductive DC loads, or input circuitry to the controller, with the same power supply.

Note: The 24 VDC output from some controllers may not have enough current to power the unit.

Wire Routing

1. Power wire length should be minimized (Max: 500m shielded, 300m unshielded).
2. Please use twisted pair cables for power wire and signal wire and conform to the impedance matching.
3. If wiring is to be exposed to lightning or surges, use appropriate surge suppression devices.
4. Keep AC, high energy, and rapidly switching DC power wiring separated from signal wires.
5. Add a resistor and capacitor in the parallel connection between the ungrounded DC power supply and the frame ground. This provides a path for static and high frequency dissipation.

Typical values to use are 1M Ohm and 4700pF.

Hardware Considerations

The system designer should be aware that devices in Controller systems could fail and thereby create an unsafe condition. Furthermore, electrical interference in an operator interface can lead to equipment start-up, which could result in property damage and/or physical injury to the operator. If you use any programmable control systems that require an operator, be aware that this potential safety hazard exists and take appropriate precautions. Although the specific design steps depend on your particular application, the following precautions generally apply to installation of solid-state programmable control devices, and conform to the guidelines for installation of Controllers recommended in NEMA ICS 3-304 Control Standards

Programming Considerations


To conform with ICS Safety Recommendations, checks should be placed in the controller to ensure that all writable registers that control critical parts of plant or machinery have limit checks built into the program, with an out-of-limit safe shut down procedure to ensure safety of personnel. GME851E00_MT8051iE_Installation_220104

Limited Warranty

This product is limited and warranted against defects in design and manufacture. The proven defective product will either be repaired or replaced, at Weintek's discretion. This warranty shall not cover any product which is

- Out-of-warranty period which is 12 months from the manufacturing month of the HMI products.
- Damage caused by Force Majeure, accident, negligence, improper installation or misuse.
- Product has been repaired or taken apart by unauthorized technicians.
- Products whose identification markings have been removed or damaged

Documents / Resources

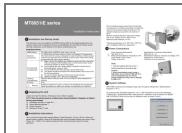

[Weintek MT8051iE Series HMI Touch Screen](#) [pdf] Instruction Manual
MT8051iE Series HMI Touch Screen, MT8051iE Series, HMI Touch Screen, Touch Screen, Screen

References

- [🌐 Ibf – Learn by fun](#)