



Z-Wave TZ08 Roller Shutter Controller User Manual

[Home](#) » [Z-Wave](#) » Z-Wave TZ08 Roller Shutter Controller User Manual 



Contents

- [1 TZ08 Roller Shutter Controller](#)
- [2 Installation and operation](#)
- [3 Programming](#)
- [4 Troubleshooting](#)
- [5 Specification](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

TZ08 Roller Shutter Controller

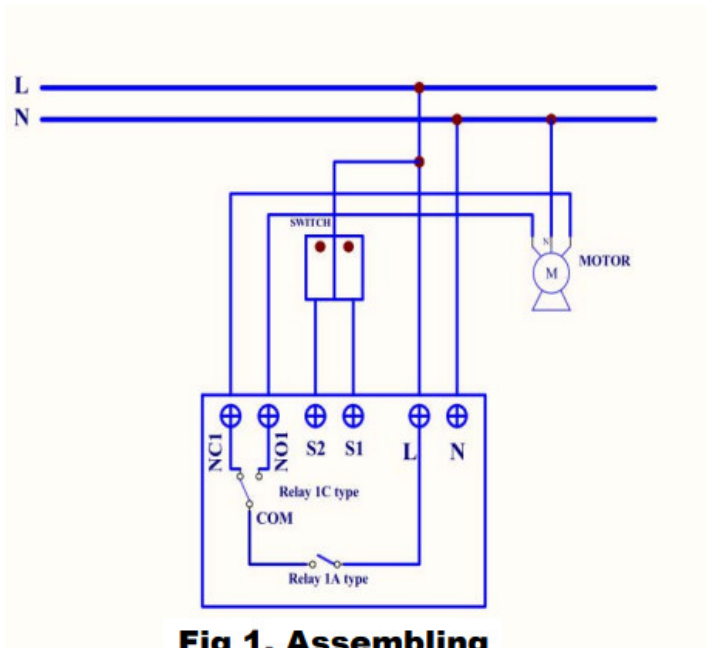
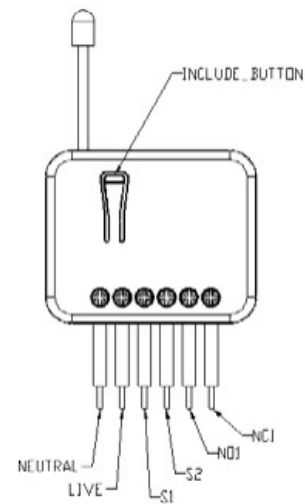


Fig 1. Assembling

The in-wall Roller Shutter Controller is designed to switch rise/lower roller shutter connected to its terminals using radio waves, controllers and a push button directly connected to this Roller Controller.

This in-wall Roller Shutter Controller is a transceiver which is a Z-Wave™ enabled device and is fully compatible with any Z-Wave™ enabled network. Slim design let the Controller can easily hide itself into the wall box and that will be good for the house decoration.

The new smart relay calibration technology can reduce the inrush current caused by the load and let the module work perfectly with many kind of Roller Shutter.

This in-wall Roller Shutter Controller is able to detect position of the Shutter by using the patterned power measuring method, so it can be remote controlled not only fully up or down , but also can be adjusted to ex. 30% or 50%. And when manual controlled by push button, the controller also can memorize the position and send the new shutter position to its controller (ex. IP-Gateway).

Adding to Z-Wave™ Network

In the front casing, there is an include button with LED indicator below which is used to carry out inclusion, exclusion, reset or association. When first power is applied, its LED flashes on and off alternately and repeatedly at 2-second intervals. It implies that it has not been assigned a node ID and cannot work with Z-Wave enabled devices.

Auto Inclusion

The function of auto inclusion will be executed as long as the TZ08 does not have Node ID and just connect the TZ08 to main power.

Note: Auto inclusion timeout is 4 minute during which the node information of explorer frame will be emitted once every 5 seconds. Unlike “inclusion” function as shown in the table below, the execution of auto inclusion is free from pressing the Include button on the TZ08.

The table below lists an operation summary of basic Z-Wave functions. Please refer to the instructions for your Z-Wave™ Certificated Primary Controller to access the Setup function, and to include/exclude/associate devices

Function	Description	LED Indication
No node ID	The Z-Wave Controller does not allocate a node ID to the TZ08.	2-second on, 2-second off
Inclusion	1. Have Z-Wave Controller entered inclusion mode. 2. Pressing Include button three times within 1.5 seconds will enter inclusion mode.	One press one flash
Exclusion	1. Have Z-Wave Controller entered exclusion mode.	One press one flash
	2. Pressing Include button three times within 1.5 seconds will enter exclusion mode.	
	Node ID has been excluded.	2-second on, 2-second off
Reset	1. Pressing Include button three times within 1.5 seconds will enter inclusion mode.	One press one flash
	2. Within 1 second, press Include button again for 5 seconds until LED is off.	
	3. IDs are excluded.	2-second on, 2-second off
Association	1. Have Z-Wave Controller entered association mode. Or Pressing Include button three times within 1.5 seconds will enter association mode	One press one flash
	2. There are 1 group (Group 1) for the TZ08	

❖ Including a node ID allocated by Z-Wave Controller means inclusion. Excluding a node ID allocated by Z-Wave Controller means exclusion.

❖ Failed or success in including/excluding the node ID can be viewed from the Z-Wave Controller.

LED Indication

To distinguish what mode the TZ08 is in, view from the LED for identification.


State Type	LED Indication
Motor activate	No matter up or down, close or open, Led will flash every second while Motor activate.
No node ID	Under normal operation, when the TZ08 has not been allocated a node ID, the LED flashes on and off alternately at 2-second intervals. By pressing S1 S2 or Include button, it will stop flashing temporarily. However, after disconnect and reconnect the TZ08, the LED will flash on and off alternately at 2-second intervals.
Overload	When overload state occurs, the TZ08 is disabled of which LED flashes on and off alternately at 0.5 second intervals. Overload state can be cleared by disconnect and reconnect the TZ08 to the main power

Choosing a Suitable Location

1. Do not locate the TZ08 facing direct sunlight, humid or dusty place.

2. The suitable ambient temperature for the TZ08 is 0°C~40°C.
3. Do not locate the TZ08 where exists combustible substances or any source of heat, e.g. fires, radiators, boiler etc.
4. After putting it into use, the body of TZ08 will become a little bit hot of which phenomenon is normal.

Installation and operation

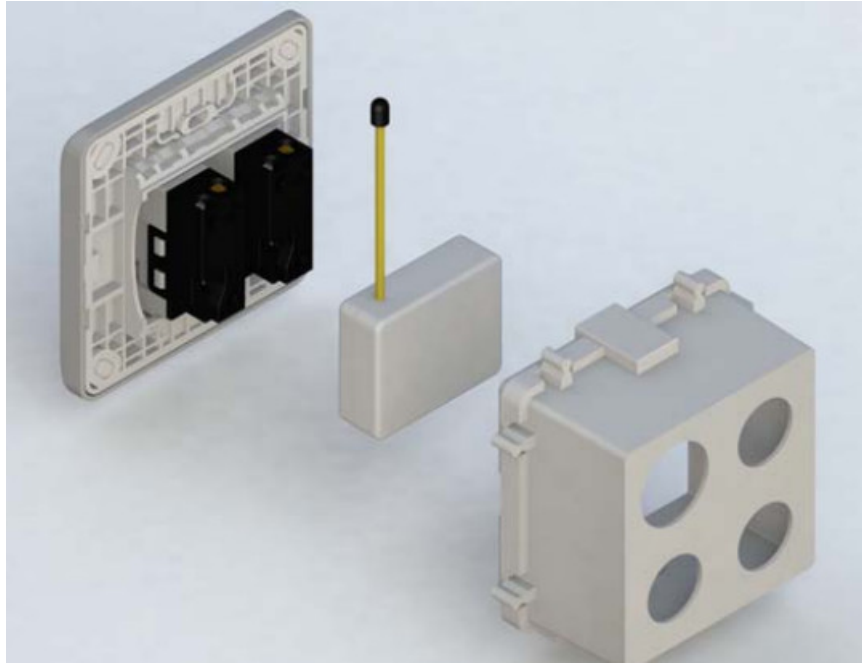

1. put the in wall TZ08 into a wall box and connect the AC power wire L,N to TZ08 connector L, N.
2. Connect the wall switch to the TZ08 as Fig1.
3. It is important to carry out a shutter calibration process before you control the shutter to move. Press inclusion button over 3 seconds and release before the 6th second, the roller shutter controller will start the shutter calibration process. The process is composed of three continue stages. The shutter move to the TOP in first stage, and move to the BOTTOM in second stage, and move to the TOP again in third stage. Then TZ08 will know the total range of UP and DOWN. During the shutter calibration process, any emergencies happen you can press and release the include button to stop the process
4. If user found the direction is reverse, this may because the wrong connection of NC and NO to the motor, please change NC and NO connection and execute calibration process again.
5. To manually switch up and down of the shutter, simply press S1 or S2.
6. TZ08 built in meter function and can read the Watt , KWh, V(Voltage), I(Current), PF(Power Factor) of the load by using Z-Wave command class, user can set a threshold watt to get the warning caused by abnormal operation
7. TZ08 have overload protection function, and can help to prevent short circuit caused by load.

Programming

1. Basic Command Class

The TZ08 will respond to BASIC and BINARY commands that are part of the Z-Wave system.

1.1 BASIC_GET

When TZ08 receive Basic Set Command it will send Basic Report Command to report the position of the

curtain When the report value is 0x00, that mean the Shutter is bottom down, if the report value is 0xFF or 0x63 that mean the Shutter is at the top, any other value between 0x01~0x62 imply Shutter at 1%~99% position But if report value is 0xFE means the position is unknown.

Basic Get Command: [Command Class Basic, Basic Get]

Basic Report Command

[Command Class Basic, Basic Report, Value = 0x00 (BOTTOM)]

[Command Class Basic, Basic Report, Value = 0x01~0x62 (Between BOTTOM and TOP)]

[Command Class Basic, Basic Report, Value = 0xFE (UNKNOWN)]

[Command Class Basic, Basic Report, Value = 0x63/0xFF (TOP)]

1-2 BASIC_SET

TZ08 can only accept Basic Set Command which value is either (0x00)Bottom or Top (0x63/0xFF) other value is not acceptable

[Command Class Basic, Basic Set, Value = 0x63 0xFF] control the shutter to the top (0xFF)

[Command Class Basic, Basic Set, Value = 0x00(0)] control the shutter to the bottom(0x00)

2. Binary Switch Command Class

2-1 BINARY_SWITCH_GET,

When TZ08 receive Binary Switch Get Command, it will send Binary Switch Report

Command to report the position of the curtain. When the report value is 0x00, that mean the Shutter is bottom down, if the report value is 0xFF that mean the Shutter is at the top. But if report value is 0xFE means the position is unknown.

Binary Switch Get Command

[Command Class Binary Switch, Binary Switch Get]

Binary Switch Report Command

[Command Class Binary Switch, Binary Switch Report, Value = 0x00(BOTTOM)]

[Command Class Binary Switch, Binary Switch Report, Value = 0xFE(UNKNOWN)]

[Command Class Binary Switch, Binary Switch Report, Value = 0xFF(TOP)]

2-2 BINARY_SWITCH_SET

TZ08 can only accept Binary Switch Set Command which value is either (0x00)

Bottom or T op (0xFF) other value is not acceptable

[Command Class Binary Switch, Binary Switch Set, Value = 0xFF(255)] control the shutter to the top (0xFF) But if the shutter is on the way down, this command will stop the shutter

[Command Class Binary Switch, Binary Switch Set, Value = 0x00(0)] control the shutter to the bottom(0x00)

But if the shutter is on the way up, this command will stop the shutter

3. Multilevel Switch Command Class (Version 3)

3-1 MULTILEVEL SWITCH SET:

TZ08 can only accept Multilevel Switch Set Command which value is either (0x00)Bottom or T op (0x63 or 0xFF) other value is not acceptable

[Command Class Multilevel Switch, Multilevel Switch Set, Value = 0x63 or 0xFF(255)] control the shutter to the top (0xFF)

[Command Class Multilevel Switch, Multilevel Switch Set, Value = 0x00(0)] control the shutter to the bottom(0x00)

3-2 MULTILEVEL SWITCH GET:

When TZ08 receive Multilevel Switch Get Command, it will send Multilevel Switch Report Command to report

the position of the shutter. When the report value is 0x00, that mean the shutter is bottom down, if the report value is 0xFF or 0x63 that mean the shutter is at the top, any other value between 0x01~0x62 imply shutter at 1%~99% position But if report value is 0xFE means the position is unknown.

Switch Multilevel Get Command [Command Class Multilevel Switch, Multilevel Switch Get]

Multilevel Switch Report Command [Command Class Multilevel Switch, Multilevel Switch Report, Value = 0x00(BOTTOM)]

[Command Class Multilevel Switch, Multilevel Switch Report, Value = 0x01~0x62(Between BOTTOM and TOP)]

[Command Class Multilevel Switch, Multilevel Switch Report, Value = 0xFE(UNKNOWN)]

[Command Class Multilevel Switch, Multilevel Switch Report, Value = 0x63/0xFF(TOP)]

3-3 MULTILEVEL SWITCH START LEVEL CHANGE:

This is the command which user can move the shutter to the particular position ex. 60% of total range

[Command Class Multilevel Switch, Multilevel Switch Start Level Change, Up/Down Value , Inc/Dec Value, Step Size Value]

3-3.1 Up/Down Bit :

If Up/Down Bit=0x00 Shutter move up

If Up/Down Bit=0x01 Shutter move down

If Up/Down Bit=0x03 no move

3-3.2 Inc/Dec Bit

If Inc/Dec Bit=0x00 means $\text{New Step_Size} = \text{Now Step_Size} + \text{Step_Size}$

If Inc/Dec Bit=0x01 means $\text{New Step_Size} = \text{Now Step_Size} - \text{Step_Size}$

If Inc/Dec Bit=0x03 means $\text{New Step_Size} = \text{Now Step_Size}$

3-3.3 Step_Size

Range from 0x00~0x63 or 0xFF , default value=50, and the meaning of 0x63 and 0xFF is 100% of total range.

If the $\text{Now Step_Size} + \text{Step_Size} > 100$, the new Step_Size will stay at 100 , if the $\text{Now Step_Size} - \text{Step_Size} < 0$, the New Step_Size will stay at 0

Example 1: If user want shutter move up , and the distance is 60% of total range (assume the now Step_Size= 50)

Command Class Multilevel Switch	(UP = 0x00) (Increment = 0x00 Step_Size = 50+10 = 60) This value represent how many the new step_size want to increase or decrease
Multilevel Switch Start Level Change	
Up/Down = 0x00	
Inc/Dec = 0x00	
Step_Size = 10	

Example 2 If user want shutter move down , and the distance is 50% of total range (assume the now Step_Size= 50)

Command Class Multilevel Switch	(Down = 0x01) (No Inc/Dec = 0x03 not change Step_Size value Step_Size = 50) This value represent how many the new step_size want to increase or decrease, when Inc/Dec = 0x03 please set this value to 0)
Multilevel Switch Start Level Change	
Up/Down = 0x01	
Inc/Dec = 0x03	
Step_Size = 0	

Example 3 If User not go to change shutter position but only change Step_Size to 40%(assume the now Step_Size= 50)

Command Class Multilevel Switch	(No Up/Down motion = 0x03) (Decrement = 0x01 Step_Size = 50-10 = 40) This value represent how many the new step_size want to increase or decrease
Multilevel Switch Start Level Change	
Up/Down = 0x03	
Inc/Dec = 0x01	
Step_Size = 10	

ATT. 1. Ignore_Start_Level Start_Level Dimming_Duration can not be used

2. TZ08 can not control the speed of motor

3-3.4 MULTILEVEL SWITCH STOP LEVEL CHANGE:

When receive Multilevel Switch Stop Level change Command TZ08 will stop the motor.

4. Z-wave's Groups introduction (Association Command Class Version 1)

There is only one group called Group1, there is only one node for Group1 which support MULTILEVEL_SWITCH_REPORTMETER_REPORT_COMMAND_V3' ALARM_REPORT

4-1 Report the shutter position:

Every time when user press S1 or S2 and let shutter to move, TZ08 will report the position status to controller, and at the moving process when change over 10% TZ08 will send Multilevel Switch Report to Group 1 also.

Multilevel Switch Report: Ex. Report position at 30%

[Command Class Multilevel Switch Multilevel Switch Report Value = 30(%)]

4-2 Meter Command Class:

The Switch will report its (1) instant Power Consumption (Watt) or (2) accumulated power consumption(KWH) or (3) AC load Voltage (V) or (4) AC load current (I) (5) load power factor (PF) to Z-Wave Controller after receive the Meter Get Command from Z-Wave Controller.

When the power consumption of load vary over 5%, it will send Meter report to the nodes of Group as well

4-2.1 Instant Power Consumption (Watt) of Switch

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale =0x02(W)]

Meter Report Command: [Command Class Meter, Meter Report, scale(bit 2)+Rate Type +Meter Type, Precision + Scale(bit 1,0)+ Size, Meter Value 1, Meter Value 2, Meter Value 3 Meter Value 4]

Rate Type = 0x01

Meter Type = 0x01

Precision = 1

Scale = 0x02(W)

Size = 4 Bytes (Meter Value)

Meter Value 1 = (W) MSB

Meter Value 2 = (W)

Meter Value 3 = (W)

Meter Value 4 = (W)LSB

Example:

Meter Value 1 = 0x00 (W)

Meter Value 2 = 0x00 (W)

Meter Value 3 = 0x03 (W)

Meter Value 4 = 0xEA (W)

Meter(W) = Meter Value 3 *256 + Meter Value 4 = 100.2W

4-2.2 Accumulated Power Consumption (KW/h)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale = 0x00 KW/h]

Meter Report Command: [Command Class Meter, Meter Report, scale(bit 2)+Rate Type +Meter Type, Precision + Scale(bit 1,0)+ Size, Meter Value 1, Meter Value 2, Meter Value 3 Meter Value 4]

Rate Type = 0x01

Meter Type = 0x01

Precision = 2

Scale = 0x00 (KWh)

Size = 4 bytes (Meter Value)

Meter Value 1 = (KWh) MSB

Meter Value 2 = (KWh)

Meter Value 3 = (KWh)

Meter Value 4 = (KWh) LSB

Example:

Scale = 0x00 (KWh)

Precision = 2

Size = 4 Bytes (KW/h)

Meter Value 1 = 0x00(KWh)

Meter Value 2 = 0x01(KWh)

Meter Value 3 = 0x38(KWh)

Meter Value 4 = 0xA3(KWh)

Accumulated power consumption (KW/h) = (Meter Value 2*65536) + (Meter Value 3*256) + (Meter Value 4) = 800.35 (KW/h)

4-2.3 AC load Voltage (V)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale =0x04(V)]

Meter Report Command:

[Command Class Meter Meter Report scale(bit 2) +Rate Type +Meter Type Precision + Scale(bit 1,0)+ Size Meter Value 1 Meter Value 2]

Rate Type = 0x01

Meter Type = 0x01

Precision = 1

Scale = 0x04(V)

Size = 2 Bytes (Meter Value)

Meter Value 1 = High Byte (V)

Meter Value 2 = Low Byte (V)

Example:

Scale = 0x04 (V)

Precision = 1

Size = 2 (2 Bytes of V)

Meter Value 1 = 0x09(V)

Meter Value 2 = 0x01(V)

AC load Voltage = (Meter Value 1*256) +(Meter Value 2)= 230.5 (V)

4-2.4 AC load current (I)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale =0x05(I)]

Meter Report Command:

[Command Class Meter, Meter Report scale(bit 2) +Rate Type +Meter Type, Precision + Scale(bit 1,0)+ Size, Meter Value 1, Meter Value 2]

Rate Type = 0x01

Meter Type = 0x01

Precision = 2

Scale = 0x05(I)

Size = 2 Bytes (Meter Value)

Meter Value 1 = High Byte (I)

Meter Value 2 = Low Byte (I)

Example:

Scale = 0x05 (I)

Precision = 2

Size = 2 (2 Bytes of I)

Meter Value 1 = 0x01(I)

Meter Value 2 = 0x21(I)

AC load current = (Meter Value 1*256) +(Meter Value 2)= 2.89 (A)

4-2.5 load power factor (PF)

When receiving Meter Get Command, it will report Meter Report Command to the node asked.

Meter Get Command: [Command Class Meter, Meter Get, Scale =0x06(PF)]

Meter Report Command: [Command Class Meter, Meter Report, scale(bit 2) +Rate Type +Meter Type, Precision + Scale(bit 1,0)+ Size, Meter Value 1]

Rate Type = 0x01

Meter Type = 0x01

Precision = 2

Scale = 0x06(PF)

Size = 1 Bytes

Meter Value 1

Example:

Scale = 0x06 (PF)

Precision = 2

Size = 1 (1 Byte of PF)

Meter Value 1 = 0x63(PF)

Load power factor (PF) = Meter Value 1 = 0.99

4-2.6 reset Accumulated Power Consumption (KWh)

This command is to reset the Accumulated Power Consumption (KWh) to 0 Meter Reset Command

[Command Class Meter, Meter Reset]

4-3 Alarm Report Command:

When TZ08 detect Overload it will send Alarm_Report to Group1 Alarm

Level=0xFF When receive Alarm_Get command and the TZ08 not in overload status , it will send Alarm_Report Alarm Level=0x00

4-3.1 Alarm Report:

[Command_Class_Alarm, Alarm_Report, Alarm Type = 0x08, Alarm Level = 0xFF (Overload)]

[Command_Class_Alarm, Alarm_Report, Alarm Type = 0x08, Alarm Level = 0x00 (Normal)]

5. Z-Wave's Configuration

Configuration Parameter	Function	Size (Byte)	Value	Unit	Default	Description
1	Watt Meter Report Period	2	0x01- 0x7FFF	5s	720	5*720s=3600s=1 hour
2	KWH Meter Report Period	2	0x01- 0x7FFF	10min	6	6*10min= 1 hour
3	Threshold of Watt for Load Caution	2	10-1100	1watt	1100	
4	Threshold of KWH for Load Caution	2	1-10000	1KWh	10000	

5-1 Watt Meter Report Period:

If the setting is configured for 1hour (set value =720), the TZ08 will report its instant power consumption every 1 hour to the node of correspond Group. The maximum interval to report its instant power consumption is 45 hours (5s*32767/3600=45hr). Default value is 1 hour

5-2 KWH Meter Report Period:

If the setting is configured for 1hour (set value =6), the TZ08 will report its Accumulated Power Consumption (KW/h) every 1 hour to the node of correspond Group. The maximum interval to report its Accumulated Power Consumption (KW/h) is 227.55 days ($10\text{min} \times 32767 / 1440 = 227.55$ days). Default value=1 hour

5-3 Threshold of Watt for Load Caution

This is a warning when the wattage of load over the preset threshold value, If the setting value is 1100, when the load wattage over this value, TZ08 will send Watt Meter Report command to the node of correspond Group. Default value=1100W

5-4 Threshold of KWh for Load Caution

This is a warning when the KWh of load over the preset threshold value, If the setting value is 10000, when the Accumulated Power Consumption of Relay1 or Relay2 over this value, TZ08 will send KWh Meter Report command to the node of correspond Group, minimum value is 1KWh and default value is 10000 kWh

6. Command Classes

The Switch supports Command Classes including...

- *COMMAND_CLASS_SWITCH_BINARY
- *COMMAND_CLASS_BASIC
- *COMMAND_CLASS_MANUFACTURER_SPECIFIC_V2
- *COMMAND_CLASS_VERSION
- *COMMAND_CLASS_ASSOCIATION
- *COMMAND_CLASS_METER_V3
- *COMMAND_CLASS_CONFIGURATION
- *COMMAND_CLASS_SWITCH_MULTILEVEL_V3
- *COMMAND_CLASS_ALARM

Troubleshooting

Symptom	Cause of Failure	Recommendation
The TZ08 not working and LED off	1. The TZ08 is not connect to the Main power 2. The TZ08 break down	1. Check power connections 2. Don't open up the TZ08 and send it for repair.
The shutter move direction is reverse	Wrong connection of NC and NO to the motor	Swap the NC NO connection
TZ08 LED light work fine But can not control	1. No association setting 2. Same frequency interference	1. Carry out association 2. Wait for a while to re-try

Specification

Operating Voltage	100 ~240V AC
Maximum Load	Resistive load 1100W/600W/550W(EU/US/TW) max
Range	Minimum 30 m in door 100m outdoor line of sight
Operating Temperature	0°C ~ 40°C
Frequency Range	TZ08 868.42 (EU) / TZ08 908.42(USA/Canada) / TZ08 922.5/923.9/926.3MHz (Taiwan/JP)MHz

** Specifications are subject to change and improvement without notice.



Documents / Resources

	<p>Z-Wave TZ08 Roller Shutter Controller [pdf] User Manual TZ08 Roller Shutter Controller, TZ08, Roller Shutter Controller, Shutter Controller</p>
--	--