



ZEBRA

TC53e- RFID Touch Computer



ZEBRA TC53e-RFID Touch Computer User Guide

[Home](#) » [ZEBRA](#) » ZEBRA TC53e-RFID Touch Computer User Guide 

Contents

- [1 ZEBRA TC53e-RFID Touch Computer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Features](#)
- [6 Installing a microSD Card](#)
- [7 Installing the Battery](#)
- [8 Charging the Device](#)
- [9 Scanning with Internal Imager](#)
- [10 RFID Scanning Considerations](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)



ZEBRA

ZEBRA TC53e-RFID Touch Computer



Product Information

Specifications

- **Model Number:** TC530R
- **Front Camera:** 8MP
- **Screen Size:** 6 inches LCD touch screen
- **RFID:** Integrated UHF RFID

Product Features

Front and Side Features

- **1. Front camera:** Takes photos and videos.
- **2. Scan LED:** Indicates data capture status.
- **3. Receiver:** Use for audio playback in Handset mode.
- **4. Proximity/light sensor:** Determines proximity and ambient light for controlling display backlight intensity.
- **5. Battery status LED:** Indicates battery charging status while charging and application-generated notifications.
- **6, 9. Scan button:** Initiates data capture (programmable).
- **7. Volume up/down button:** Increase and decrease audio volume (programmable).
- **8. 6 in. LCD touch screen:** Displays all information needed to operate the device.
- **10. PTT button:** Typically used for PTT communications.

Back and Top Features

- **1. Power button:** Turns the display on and off. Press and hold to power off, restart, or lock the device.
- **2, 6. Microphone:** Use for communications in Handset/Handsfree mode, audio recording, and noise cancellation.
- **3. Exit window:** Provides data capture using the imager.
- **4. UHF RFID:** Integrated RFID. Note: If an RFD40 or RFD90 sled is connected to the device, it overrides the integrated RFID.

Product Usage Instructions

Unpacking the Device

1. Carefully remove all protective material from the device and save the shipping container for later storage and shipping.
2. Verify that the following items were received:

Frequently Asked Questions

Q: How do I charge the device?

A: To charge the device, use the provided charging cable and connect it to a power source.

Q: How do I take photos with the front camera?

A: To take photos using the front camera, open the camera app on the device and press the capture button.

Copyright

2024/08/26

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2024 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements.

For further information regarding legal and proprietary statements, please go to:

SOFTWARE: zebra.com/informationpolicy.

COPYRIGHTS: zebra.com/copyright.

PATENTS: ip.zebra.com.

WARRANTY: zebra.com/warranty.

END USER LICENSE AGREEMENT: zebra.com/eula.

Terms of Use

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

TC53e-RFID Quick Start Guide

Model Number

This guide applies to the model number: TC530R.

Unpacking the Device

Unpacking the device from the box.

1. Carefully remove all protective material from the device and save the shipping container for later storage and shipping.
2. Verify that the following were received:
 - Touch computer
 - >17.7 Watt hours (min) / >4,680 mAh PowerPrecision+ Lithium-ion battery
 - Regulatory guide
3. Inspect the equipment for damage. If any equipment is missing or damaged, contact the Global Customer Support Center immediately.
4. Before using the device for the first time, remove the protective shipping film that covers the scan window, display, and camera window.

Features

This section lists the features of the TC53e-RFID touch computer.

The TC53e-RFID features a built-in encoder/reader, including:

- RFID tag read range of 1.5 – 2.0 m.
- RFID read speed of 20 tags per second.

- An omnidirectional antenna.

NOTE: When using the device for Voice over Internet Protocol (VoIP) calls near the head (for example, the user is holding the device to their ear), RFID power will be disabled. Hands-free or wireless VoIP calls (for example, with earphones or Bluetooth) will not disable RFID power.

Figure 1 Front and Side Views

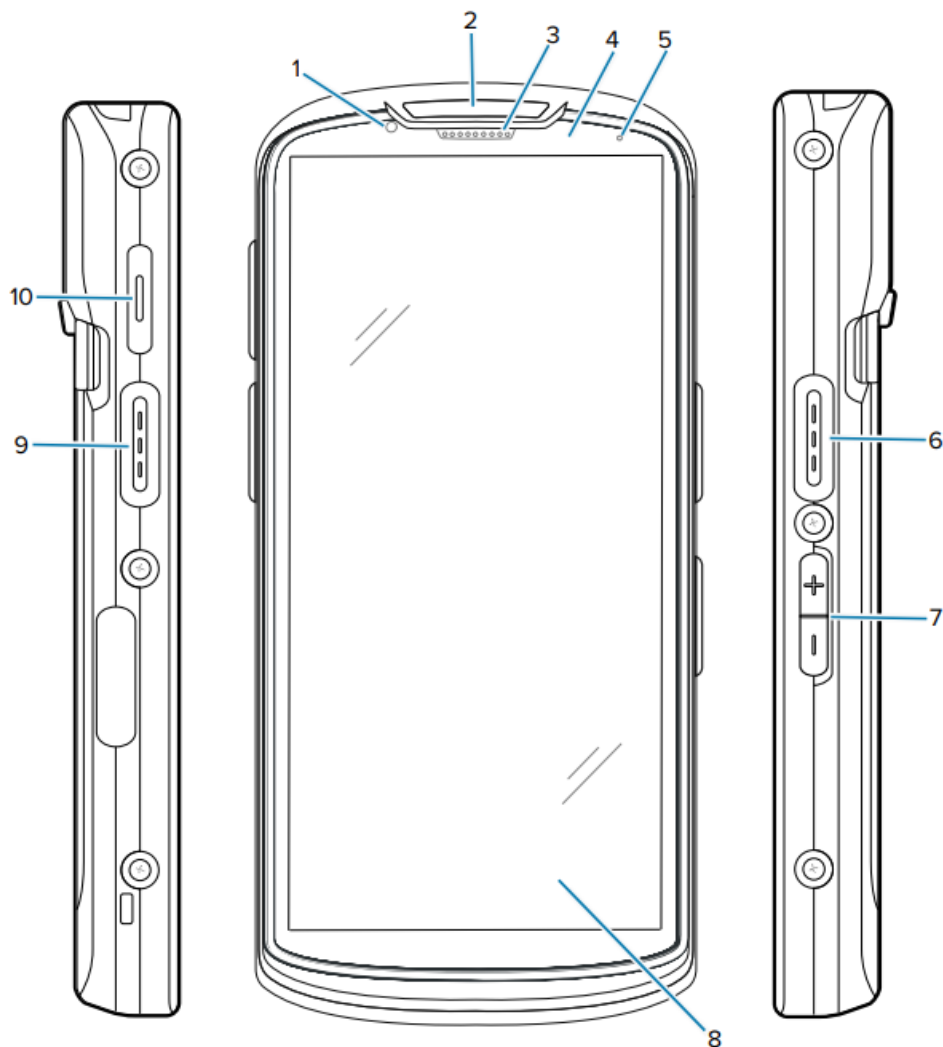


Table 1 TC53e-RFID Front and Side Features

Number	Item	Description
1	Front camera (8MP)	Takes photos and videos.
2	Scan LED	Indicates data capture status.
3	Receiver	Use for audio playback in Handset mode.
4	Proximity/light sensor	Determines proximity and ambient light for controlling display backlight intensity.
5	Battery status LED	Indicates battery charging status while charging and application-generated notifications.
6, 9	Scan button	Initiates data capture (programmable).

7	Volume up/down button	Increase and decrease audio volume (programmable).
8	6 in. LCD touch screen	Displays all information needed to operate the device.
10	PTT button	Typically used for PTT communications.

Figure 2 Back and Top Views

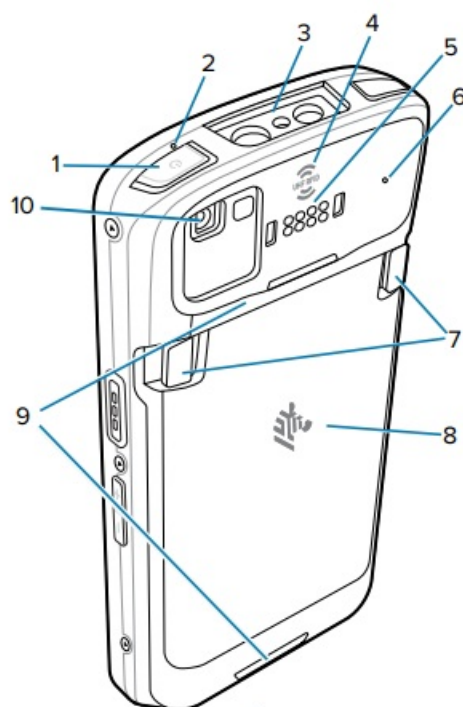


Table 2 Back and Top Features

Number	Item	Description
1	Power button	Turns the display on and off. Press and hold to power off, restart, or lock the device.
2, 6	Microphone	Use for communications in Handset/Handsfree mode, audio recording, and noise cancellation.
3	Exit window	Provides data capture using the imager.
4	UHF RFID	Integrated RFID. NOTE: If an RFD40 or RFD90 sled is connected to the device, it overrides the integrated RFID.

5	Back common I/O 8 pins	Provides host communications, audio, and device charging via cables and accessories.
7	Battery release latches	Pinch both latches in and lift up to remove the battery.
8	Battery	Provides power to the device.
9	Hand strap points	Attachment points for the hand strap.
10	Rear camera (16 MP) with flash	Takes photos and videos with flash to provide illumination for the camera.

Figure 3 Bottom Views

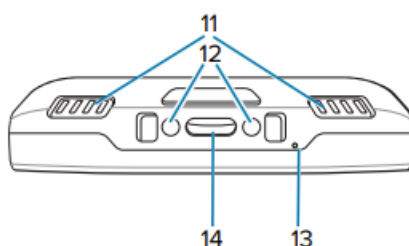


Table 3 Bottom Features

Number	Item	Description
11	Speaker	Provides audio output for video and music playback. Provides audio in speakerphone mode.
12	DC input pins	Power/ground for charging (5V through 9V).
13	Microphone	Use for communications in Handset/Handsfree mode, audio recording, and noise cancellation.
14	USB Type C and 2 charge pins	Provides power and communications to the device using an I/O USB-C interface with 2 charge pins.

123RFID App

123RFID app demonstrates the device's tag operation functionality.

This app is available on the [Google Play store](#). For more information on installing the 123RFID app, go to the [Zebra 123RFID Mobile Support](#) page.

Installing a microSD Card


The microSD card slot provides secondary non-volatile storage. The slot is located under the battery pack.

Refer to the documentation provided with the card for more information, and follow the manufacturer's recommendations for use.


CAUTION—ESD: Follow proper electrostatic discharge (ESD) precautions to avoid damaging the MicroSD card. Proper ESD precautions include, but are not limited to, working on an ESD mat and ensuring the operator is

properly grounded.


1. Lift the access door.

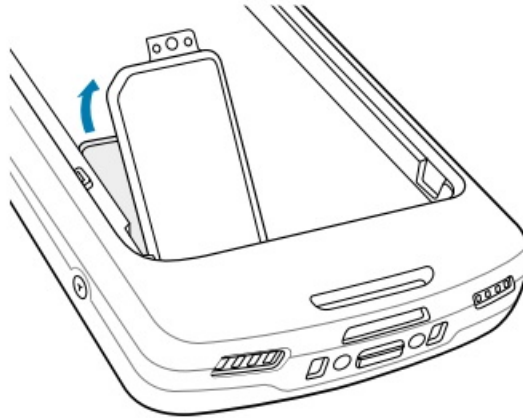


2. Slide the microSD card holder to the Open position.

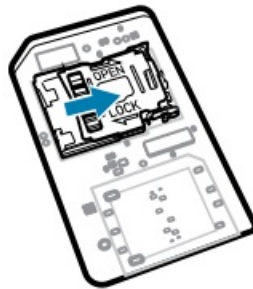


3. Lift the microSD card holder door.

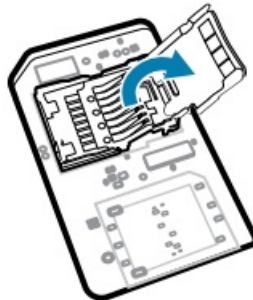


4. Insert the microSD card into the card holder, ensuring the card slides into the holding tabs on each side of the door.

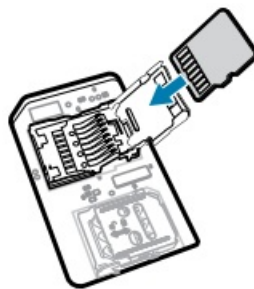

5. Close the microSD card holder.

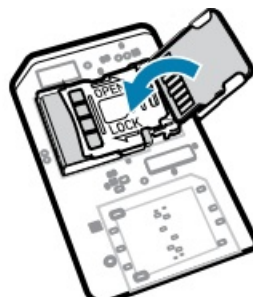


6. Slide the microSD card holder to the Lock position.

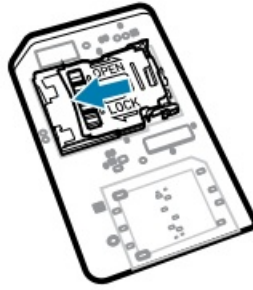

IMPORTANT: The access cover must be replaced and securely seated to ensure proper device sealing.

7. Reinstall the access door.

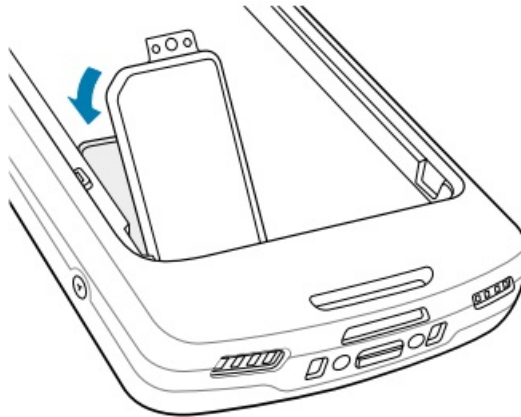


Installing the Battery

This section describes how to install a battery into the device.

NOTE: Do not put any labels, asset tags, engravings, stickers, or other objects in the battery well. Doing so may compromise the intended performance of the device or accessories. Performance levels, such as sealing [Ingress Protection (IP)], impact performance (drop and tumble), functionality, or temperature resistance, could be affected.

1. Insert the battery, bottom first, into the battery compartment in the back of the device.
2. Press the battery down until it snaps into place.

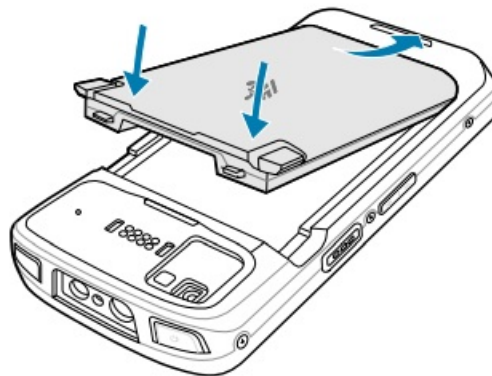

Using the Rechargeable Li-Ion Battery with BLE Beacon

This device utilizes a rechargeable Li-Ion battery to facilitate Bluetooth Low Energy (BLE) Beacon. When enabled, the battery transmits a BLE signal for up to seven days while the device is powered off due to battery depletion.

NOTE: The device transmits a Bluetooth beacon only when it is powered off or in airplane mode.

For additional information on configuring the Secondary BLE settings, see techdocs.zebra.com/emdk-for-android/13-0/mx/beaconmgr/.

Charging the Device

To achieve optimal charging results, use only Zebra charging accessories and batteries. Charge batteries at room temperature with the device in Sleep mode.
The device goes into Sleep mode when you press Power or after a period of inactivity.

A battery charges from fully depleted to 90% in approximately 2 hours. In many cases, a 90% charge provides enough charge for daily use. Depending on the usage profile, a full 100% charge may last for approximately 14 hours of use.

The device or accessory always performs battery charging in a safe and intelligent manner and indicates when charging is disabled due to abnormal temperatures via its LED, and a notification appears on the device display.

Temperature	Battery Charging Behavior
20 to 45°C (68 to 113°F)	Optimal charging range.
0 to 20°C (32 to 68°F) / 45 to 50°C (113 to 122°F)	Charging slows to optimize the JEITA requirements of the cell.
Below 0°C (32°F) / Above 50°C (122°F)	Charging stops.
Above 55°C (131°F)	The device shuts down.



To charge the main battery:






1. Connect the charging accessory to the appropriate power source.
2. Insert the device into a cradle or attach to a power cable (minimum 9 volts / 2 amps).
The device turns on and begins charging. The Charging/Notification LED blinks amber while charging, then turns solid green when fully charged.

Charging Indicators

The charging/notification LED indicates charging status.

Table 4 Charging/Notification LED Charging Indicators

State	LED Color	Indications
Off		The device is not charging. <ul style="list-style-type: none"> The device is not inserted correctly in the cradle or connected to a power source. The charger/cradle is not powered.
Slow Blinking Amber (1 blink every 4 seconds)		The device is charging.

Slow Blinking Red (1 blink every 4 seconds)		The device is charging, but the battery is at the end of its useful life.
Solid Green		Charging is complete.
Solid Red		Charging is complete, but the battery is at the end of its useful life.
Fast Blinking Amber (2 blinks/second)		Charging error. For example: <ul style="list-style-type: none"> Temperature is too low or too high. Charging has gone on too long without completion (typically 12 hours).
Fast Blinking Red (2 blinks/second)		Charging error, and the battery is at the end of its useful life. For example: <ul style="list-style-type: none"> The temperature is too low or too high. Charging has gone on too long without completion (typically 12 hours).

Charging the Spare Battery

This section provides information on charging a spare battery. To achieve optimal charging results, use only Zebra charging accessories and batteries.

1. Insert a spare battery into the spare battery slot.
2. Ensure the battery is seated properly.

The Spare Battery Charging LED blinks, indicating charging.

The battery charges from fully depleted to 90% in approximately 2.5 hours. In many cases, the 90% charge provides plenty of charge for daily use. Depending on the usage profile, a full 100% charge may last for approximately 14 hours of use.

Accessories for Charging

Use one of the following accessories to charge the device and/or spare battery.

Charging and Communication


Description	Part Number	Charging		Communication	
		Battery (In device)	Spare Battery	USB	Ethernet
1-Slot Charge Only Cradle	CRD-NGTC5-2SC1B	Yes	Yes	No	No
1-Slot USB/Ethernet Cradle	CRD-NGTC5-2SE1B	Yes	Yes	Yes	Yes

5-Slot Charge Only Cradle with Battery	CRD-NGTC5-5SC4B	Yes	Yes	No	No
5-Slot Charge Only Cradle	CRD-NGTC5-5SC5D	Yes	No	No	No
5-Slot Ethernet Cradle	CRD-NGTC5-5SE5D	Yes	No	No	Yes
Charge/USB Cable	CBL-TC5X- USBC2A-01	Yes	No	Yes	No

1-Slot Charge Only Cradle

This USB cradle provides power and host communications.

CAUTION: Ensure that you follow the guidelines for battery safety described in the Product Reference Guide.

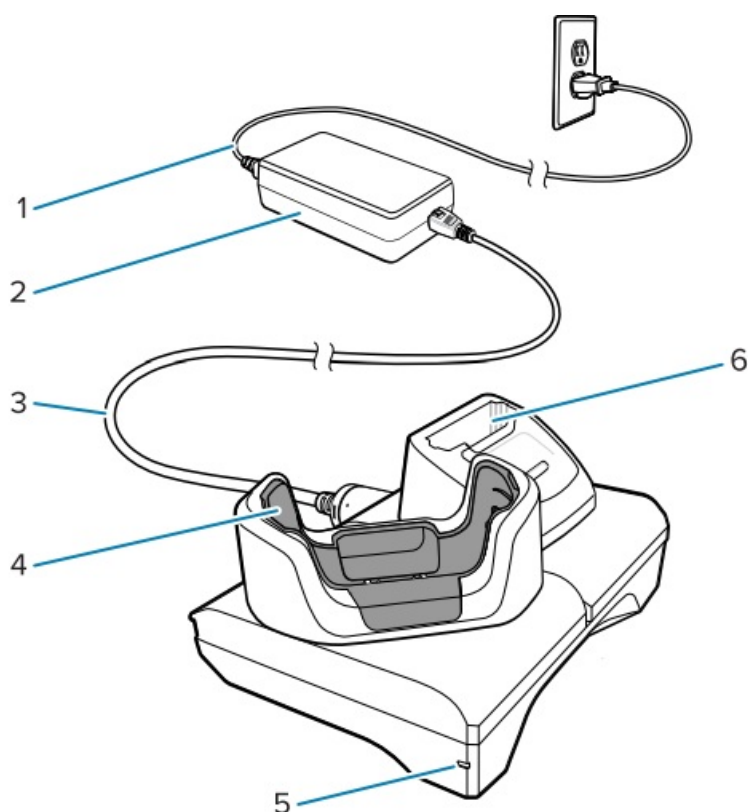


1	AC line cord
2	Power supply
3	DC line cord
4	Device charging slot
5	Power LED
6	Spare battery charging slot

1-Slot Ethernet USB Charge Cradle

This Ethernet cradle provides power and host communications.

CAUTION: Ensure that you follow the guidelines for battery safety described in the Product Reference Guide.

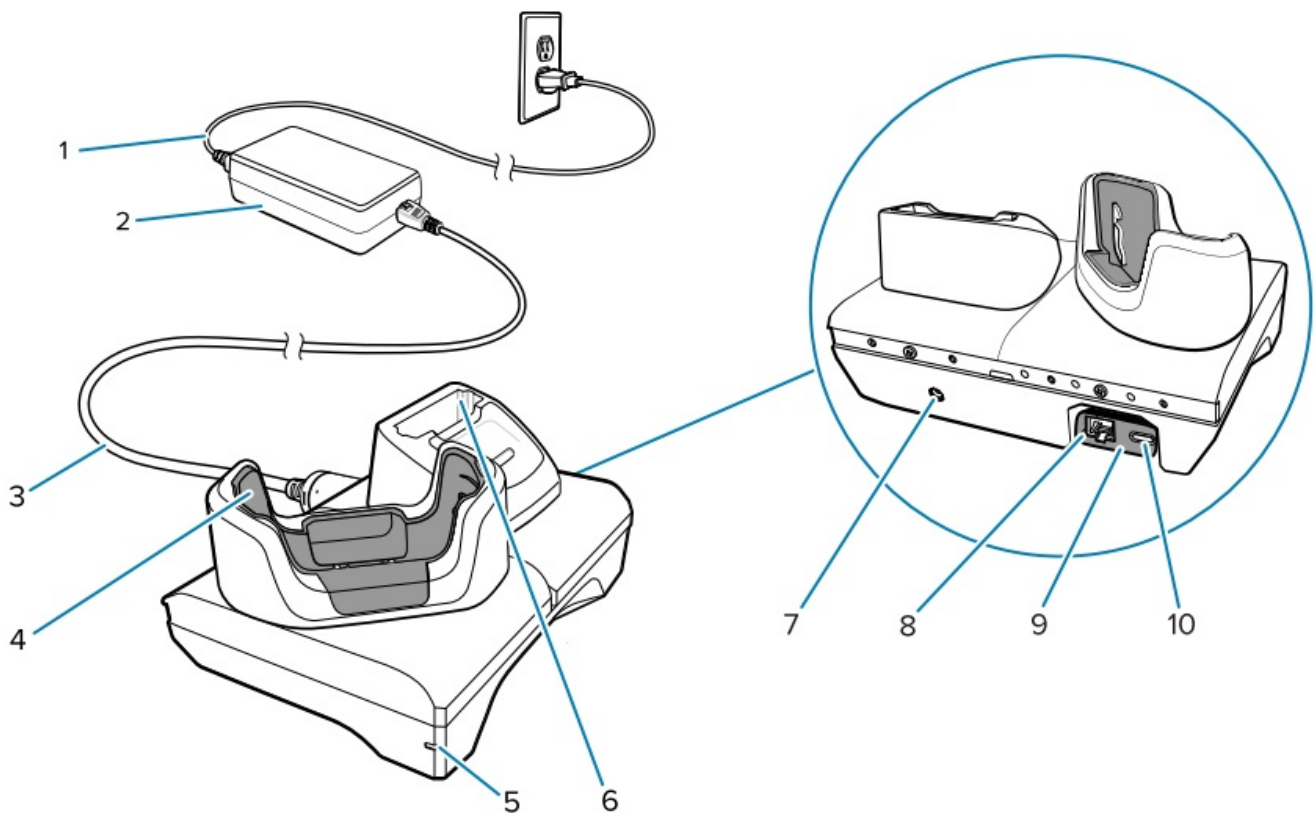

1	AC line cord
2	Power supply
3	DC line cord
4	Device charging slot
5	Power LED
6	Spare battery charging slot
7	DC line cord input
8	Ethernet port (on USB to Ethernet module kit)
9	USB to Ethernet module kit
10	USB port (on USB to Ethernet module kit)


NOTE: The USB to Ethernet module kit (KT-TC51-ETH1-01) connects via a single-slot USB charger.

5-Slot Charge Only Cradle

CAUTION: Ensure that you follow the guidelines for battery safety described in the Product Reference Guide.

The 5-Slot Charge Only Cradle:

- Provides 5.0 VDC power for operating the device.
- Simultaneously charges up to five devices or up to four devices and four batteries using the 4-slot battery charger adapter.
- Contains a cradle base and cups that can be configured for various charging requirements.

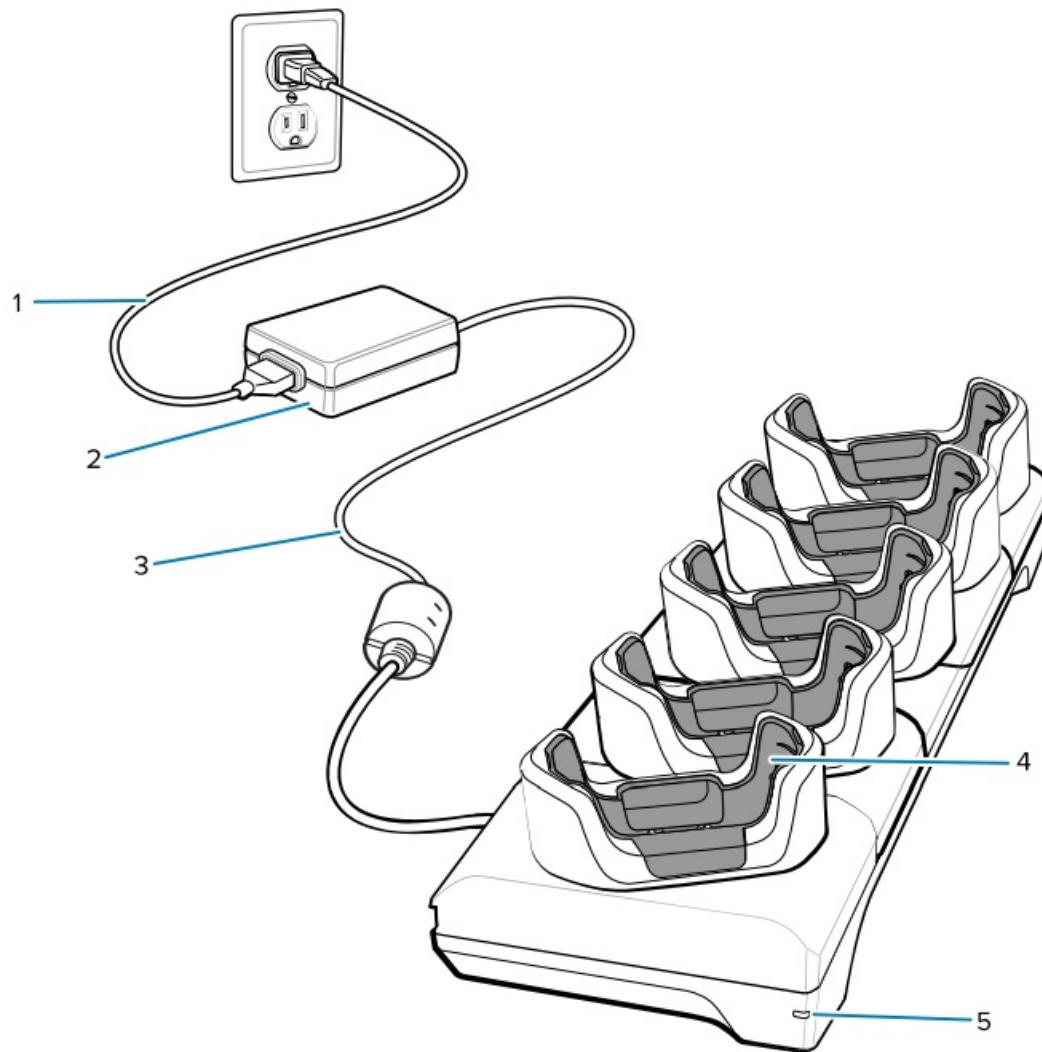


1	AC line cord
2	Power supply
3	DC line cord
4	Device charging slot with shim
5	Power LED

5-Slot Ethernet Cradle

CAUTION: Ensure that you follow the guidelines for battery safety described in the Product Reference Guide.

The 5-Slot Ethernet Cradle:

- Provides 5.0 VDC power for operating the device.
- Connects up to five devices to an Ethernet network.
- Simultaneously charges up to five devices or up to four devices and four batteries using the 4-slot battery charger adapter.

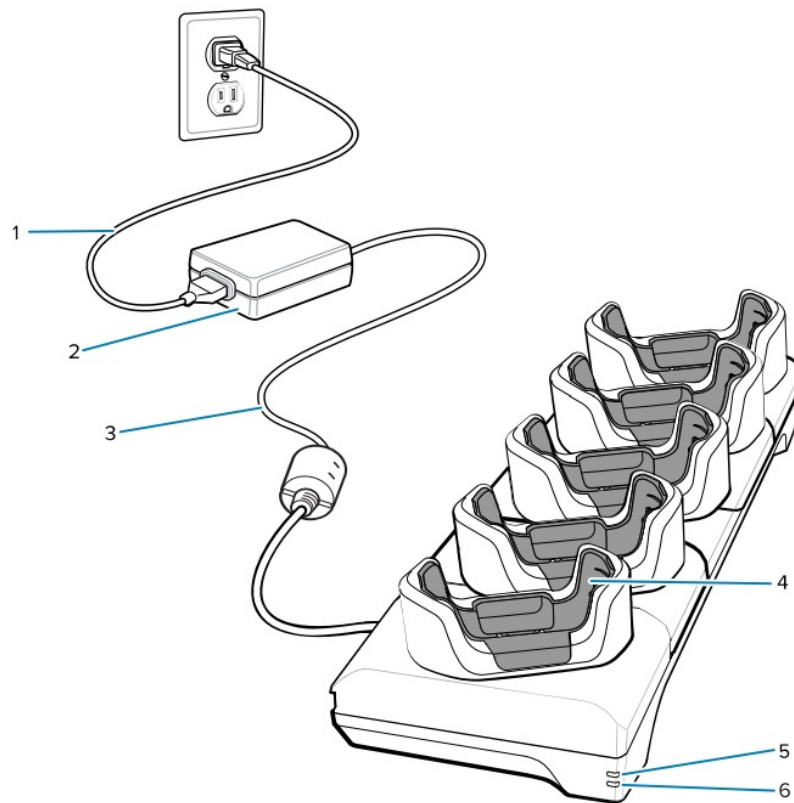


1	AC line cord
2	Power supply
3	DC line cord
4	Device charging slot
5	1000Base-T LED
6	10/100Base-T LED

5-Slot (4 Device/4 Spare Battery) Charge Only Cradle with Battery Charger

CAUTION: Ensure that you follow the guidelines for battery safety described in the Product Reference Guide.

The 5-Slot Charge Only Cradle:

- Provides 5.0 VDC power for operating the device.
- Simultaneously charges up to four devices and four spare batteries.

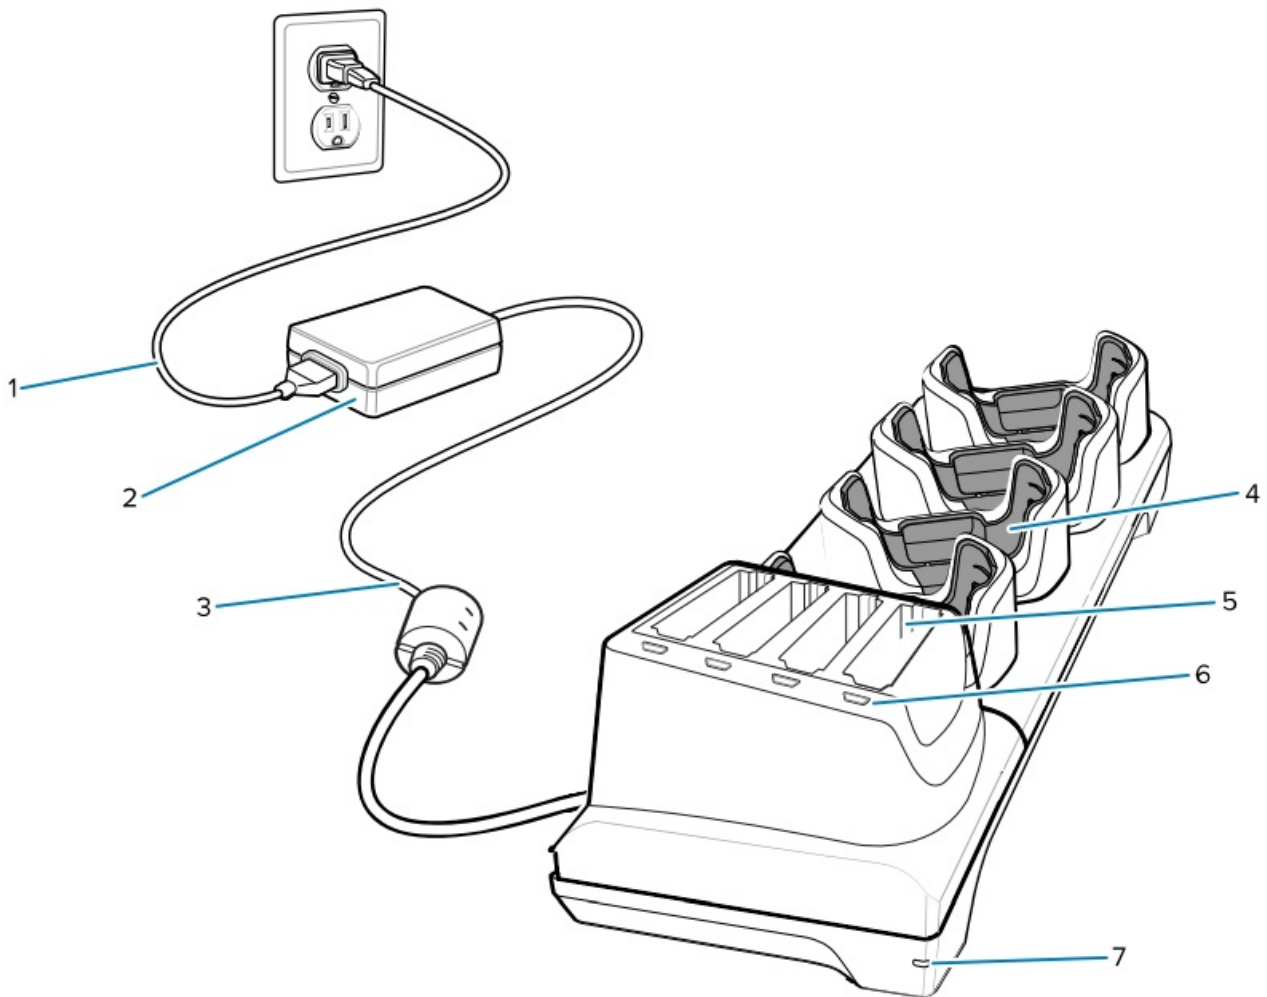


1	AC line cord
2	Power supply
3	DC line cord
4	Device charging slot with shim
5	Spare battery charging slot
6	Spare battery charging LED
7	Power LED

Charge/USB-C Cable

The USB-C Cable snaps onto the bottom of the device and removes easily when not in use.

NOTE: When attached to the device, it provides charging and allows the device to transfer data to a host computer.

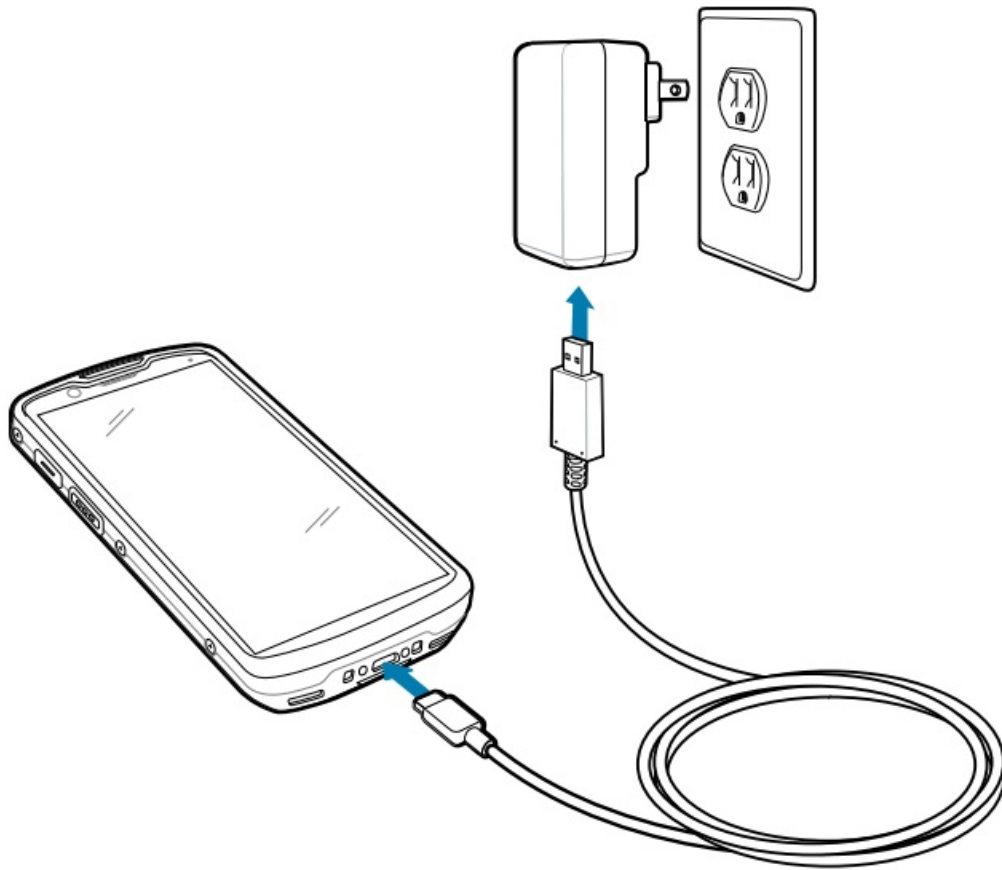


Scanning with Internal Imager

Use the internal imager to capture barcode data.

To read a barcode or QR code, a scan-enabled application is required. The device contains the DataWedge Demonstration (DWDemo) app, which allows you to enable the imager, decode the barcode/QR code data, and display barcode content.

NOTE: The SE4720 displays a red dot aimer.

1. Ensure that an application is open on the device and a text field is in focus (text cursor in text field).
2. Point the exit window on the top of the device at a barcode or QR code.

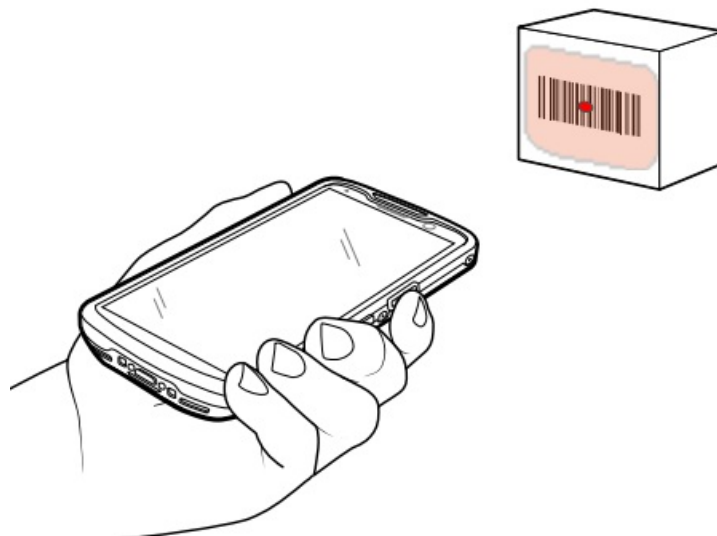

3. Press and hold the scan button.

The device projects the aiming pattern.

4. Ensure the barcode or QR code is within the area formed in the aiming pattern.

Figure 4 SE4720 Aiming Pattern


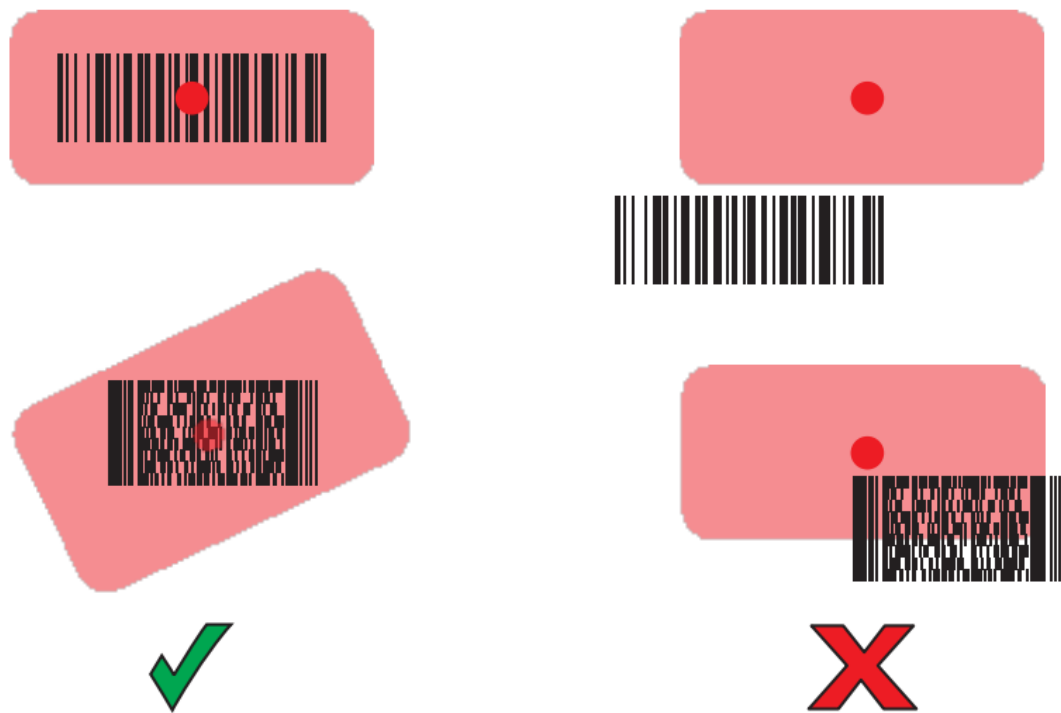


Figure 5 SE4720 Picklist Mode Aiming Patterns with Multiple Barcodes

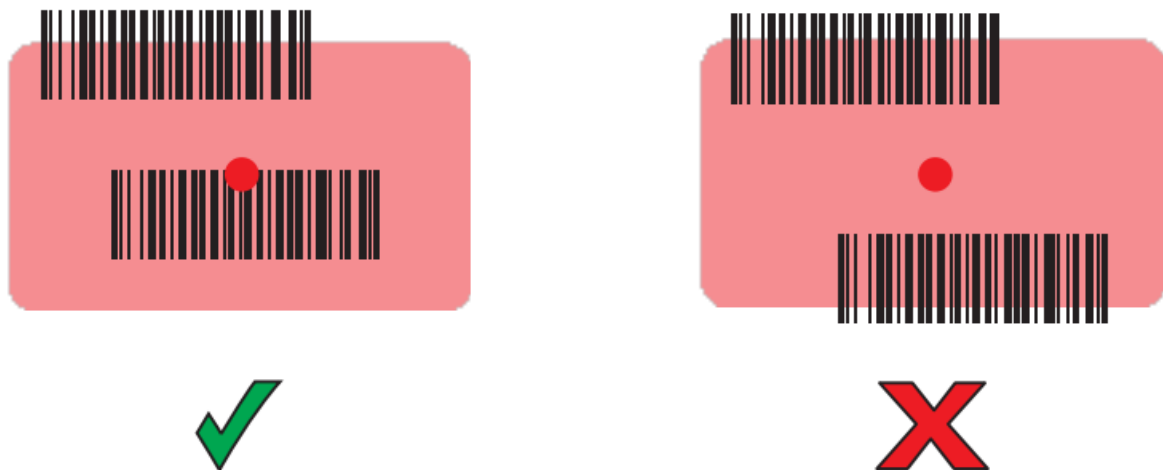

NOTE: When the device is in Picklist mode, it does not decode the barcode/QR code until the center of the crosshair touches the barcode/QR code.

The Data Capture LED light turns on, and the device beeps, by default, to indicate that the barcode or QR code was decoded successfully.


5. Release the scan button.

The device displays the barcode or QR code data in the text field.

RFID Scanning Considerations


The following hand grips are recommended to ensure the RFID function works properly.

RFID Scanning Orientation

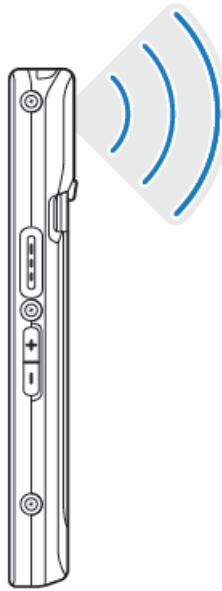


Optimal Hand Grips

IMPORTANT: When holding the device, ensure that your hand is below the hand strap (towel) bar and the scan buttons.

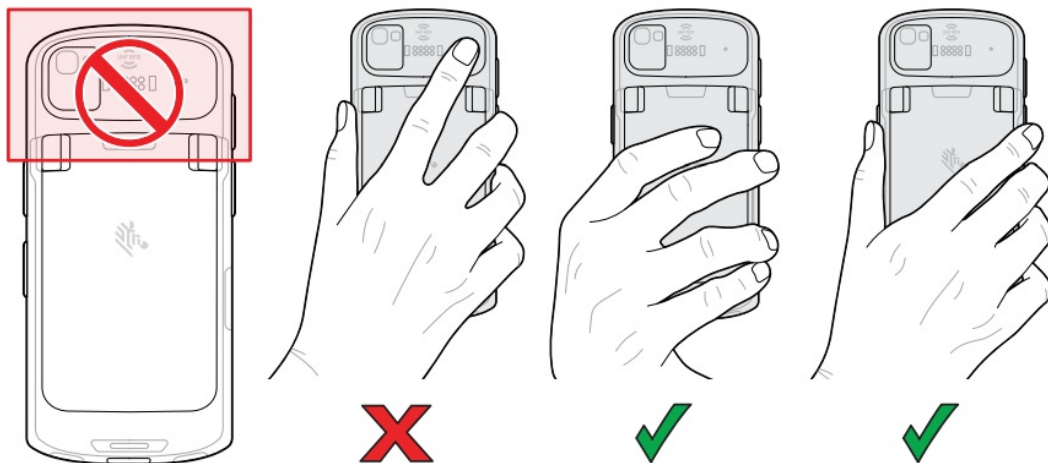

Ergonomic Considerations

Avoid extreme wrist angles when using the device.

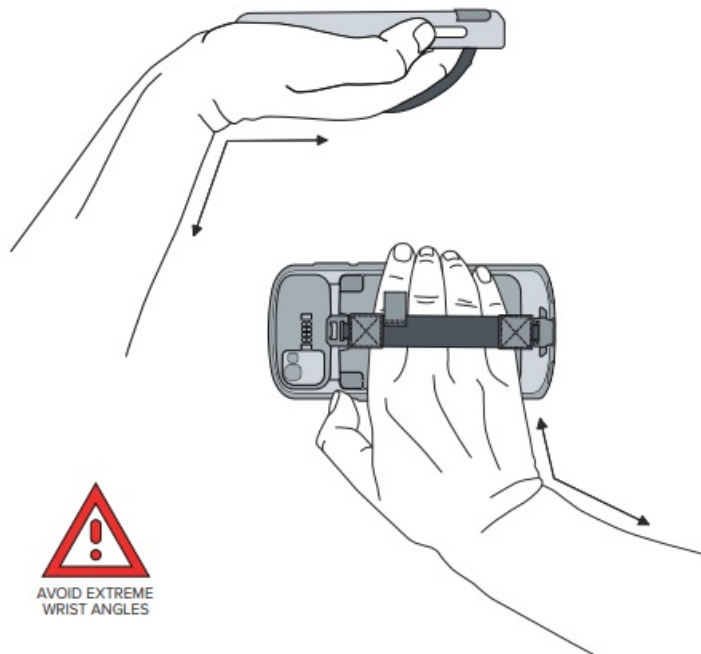


Service Information

Repair services using Zebra-qualified parts are available for at least three years after the end of production and can be requested at zebra.com/support.

www.zebra.com

Documents / Resources

	<p>ZEBRA TC53e-RFID Touch Computer [pdf] User Guide TC530R, TC53e-RFID Touch Computer, TC53e-RFID, Touch Computer, Computer</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.