



Zgrmbo 8810-2 Digital Clock Built in Lithium Battery Version Instruction Manual

[Home](#) » [Zgrmbo](#) » Zgrmbo 8810-2 Digital Clock Built in Lithium Battery Version Instruction Manual 

Zgrmbo

Digital Clock
Mode Number: 8810-2




Built-in Lithium Battery Version
Simple . Fashion . Quality

 After-sales Email: zgrmbo_us@outlook.com

Contents

- 1 **PRODUCT DESCRIPTION**
- 2 **GETTING STARTED**
- 3 **SPECIAL CONVENIENT FUNCTIONS**
- 4 **Documents / Resources**
 - 4.1 **References**


PRODUCT DESCRIPTION

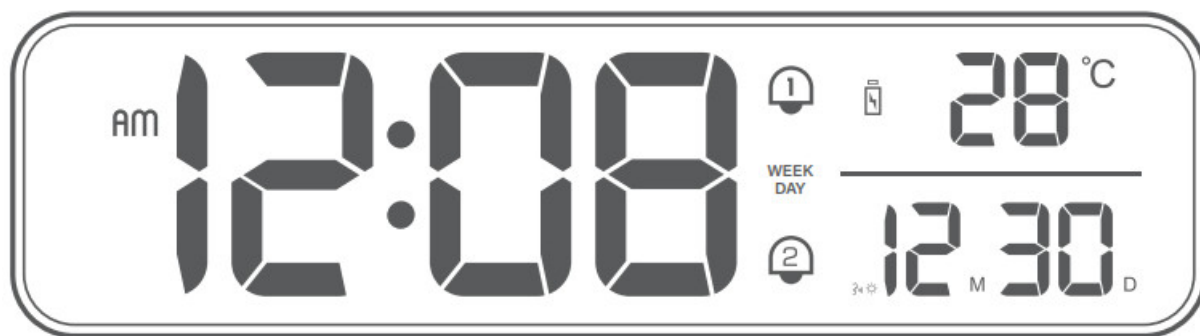


	The icon of alarm clock 1, means that alarm clock 1 has been turned on.
	The icon of alarm clock 2, means that alarm clock 2 has been turned on.
	The icon of WEEKDAY, means that the alarm clock only runs Mon-Fri.
	The icon of low-battery, means that that the clock battery is too low.
	The icon of voice-activated wake-up, means that the clock voice-activated wake-up mode is turned on.





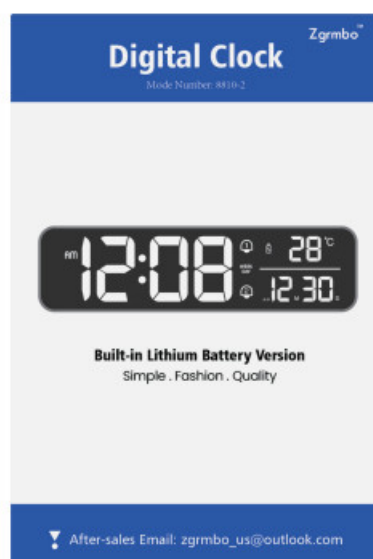



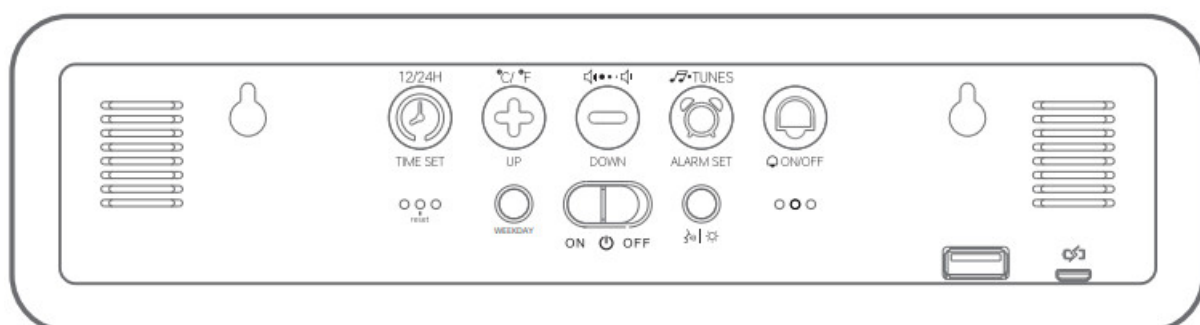


USB Power Cable



User Manual



	Press, the 12/24H Format switch button; Press and hold, activate the “TIME SET” button.
	Press, the °C/°F Format switch button; After activating the “TIME SET” button or the “ALARM SET” button. Press, the “+(UP)” switch button.
	Press, the volume adjustment switch button; After activating the “TIME SET” button or the “ALARM SET” button. Press, the “-(DOWN)” switch button.
	Press, the alarm music playing switch button; Press and hold, activate the “ALARM SET” button.
	Press, the alarm switch button.
	Clock reset button.
	Press, the alarm clock only runs Monday-Friday switch button.
	Clock switch button (the clock will still store the clock time after it is turned off).
	Voice-activated wake-up mode switch button.

GETTING STARTED

Time Setting

Step1: Press and hold the “TIME SET” button to activate the time setting.

Step2: Press the “+/-” button to set the year, and press the “TIME SET” button to switch to the next step.

Step3: Press the “+/-” button to set the month of the date, and press the “TIME SET” button to switch to the next step.

Step4: Press the “+/-” button to set the day of the date, and press the “TIME SET” button to switch to the next step.

Step5: Press the “+/-” button to set the hour of the time, and press the “TIME SET” button to switch to the next step.

Step6: Press the “+/-” button to set the minute of the time, and press the “TIME SET” button to complete the time setting.

Alarm Clock Setting

Step 1: Press and hold the “ALARM SET” button to display the “🔔” icon and time.

Step 2: Press the “+/-” button to set the hour of the “🔔” time, and press the “ALARM SET” button to switch to the next step.

Step 3: Press the “+/-” button to set the minute of the “🔔” time, and press the “ALARM SET” button to switch to the next step.

Step 4: Press the “+/-” button to select the alarm for the “🔔”, press the “ALARM SET” button to display the “🔔” icon and time.


Step 5: Press the “+/-” button to set the hour of the “🔔” time, and press the “ALARM SET” button to switch to the next step.

Step 6: Press the “+/-” button to set the minute of the “🔔” time, and press the “ALARM SET” button to switch to the next step.

Step 7: Press the “+/-” button to select the alarm for the “🔔”, and press the “ALARM SET” button to exit the alarm clock setting.

SPECIAL CONVENIENT FUNCTIONS

Alarm Switch Button

Press the alarm switch button() to quickly turn on or off the alarm clock.

When the alarm clock is turned on, the alarm clock icon on the clock screen will be displayed, otherwise it will not be displayed; When the alarm clock rings, the alarm icon will flash, press any button to turn off the alarm, otherwise the alarm will continue to ring for 2 minutes.

Snooze Mode

When the alarm clock rings, touch the top of the clock to enter the snooze mode. The alarm icon on the clock screen will remain flashing, and the alarm clock will ring again in 5 minutes. To turn off snooze mode, press any button on the back of the clock.

Weekday Alarm Clock

When an alarm clock is turned on (the alarm icon is displayed on the clock screen), press the “WEEKDAY” button to set the alarm clock to run only from Monday to Friday.

Select 12/24-hour Format

Directly press the “TIME SET” button to quickly switch the 12/24-hour Format.

Select °C/°F Format

Directly press the “+” button to quickly switch the °C/°F Format.

Volume Setting

Directly press the “-” button to quickly adjust the volume, and press any button to end the volume setting.


Music Appreciation

Directly press the “ALARM SET” button to enjoy and switch music.

Clock Screen Brightness Adjustment


Directly tap the top center of the clock to adjust the clock screen brightness.

Intelligent Voice-activated Mode


Press the voice-activated() button to turn on the voice-activated mode.


In the voice-activated mode, when the ambient sound reaches 90 dB or gently tapping the desktop, the clock screen display can be awakened, and the clock screen will automatically turn off after 6 seconds.

Note: when the clock is not plugged in, it is recommended to select the voice-activated mode to save the clock power. In the voice-activated mode, the clock can run for about 20 days without being plugged in!

After the voice-activated mode is turned on, the voice-activated icon () will be displayed on the clock screen.

Low-power Prompt

When the low-power icon() / screen flashes abnormally or does not display / the music cannot be played completely / the music alarm clock is discontinuous during the use of the clock, please charge the clock in time.


When charging, the low-power icon() of the clock is always on, and it will automatically turn off after being fully charged.

Note: when using this product for the first time, it is recommended to use it after the clock is fully charged.

Clock Reset

In case of clock crash, abnormal display, inability to operate keys, etc., press the reset key to restore the clock to the factory setting and then reprogram the clock time.

Zgrmbo

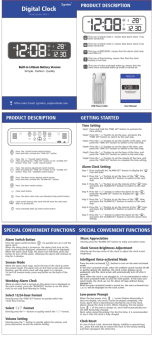	<p>Zgrmbo 8810-2 Digital Clock Built in Lithium Battery Version [pdf] Instruction Manual</p> <p>8810-2 Digital Clock Built in Lithium Battery Version, 8810-2, Digital Clock Built in Lithium Battery Version, Clock Built in Lithium Battery Version, Built in Lithium Battery Version, Lithium Battery Version, Battery Version, Version</p>
--	--

References

- [User Manual](#)