



**Contents** [ [hide](#) ]

- [1 ZOOM R4 MultiTrak 4 Track Recorder](#)
- [2 Introduction](#)
- [3 Product part names](#)
- [4 Firmware update process](#)
- [5 Updating the Firmware](#)
- [6 Confirming that the firmware was updated correctly](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



## **ZOOM R4 MultiTrak 4 Track Recorder**




Copyright(C) 2025 ZOOM CORPORATION. All Rights Reserved.

Proper display is not possible on grayscale devices.

## Introduction


### Items to prepare

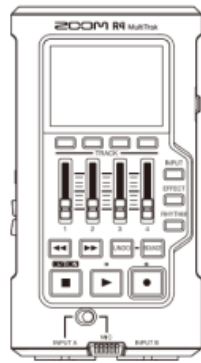

R4



Windows or macOS computer  
with Internet access

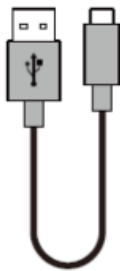

USB Type-C cable

Use a USB cable that supports data transfer. USB bus power is supported.



microSD card

Supported recording media  
microSDHC: 4 GB – 32 GB  
microSDXC: 64 GB – 1 TB

Always format microSD cards on the R4 after purchasing them new or using them with a different device.

## Product part names

Refer to “Functions of parts” in the Operation Manual.

The Operation Manual can be downloaded from the R4 Support & Downloads ([zoomcorp.com/help/r4](https://zoomcorp.com/help/r4)).

## Firmware update process

1. Download the firmware update file.
2. Extract the ZIP file.
3. Copy the extracted firmware update file to a microSD card.
4. Update the firmware.
5. Confirm that the firmware has been updated correctly.

## Updating the Firmware

This guide explains firmware update to version 1.30 as an example.

1. Download the firmware update file.



Download the ZIP file that contains the firmware update file from the R4 Support & Downloads ([zoomcorp.com/help/r4](https://zoomcorp.com/help/r4)).



## On Windows


### Extract the ZIP file.

Select the folder that contains the downloaded ZIP file. Click ①“Compressed Folder Tools” and then click ②“Extract all”. This extracts the ZIP file.

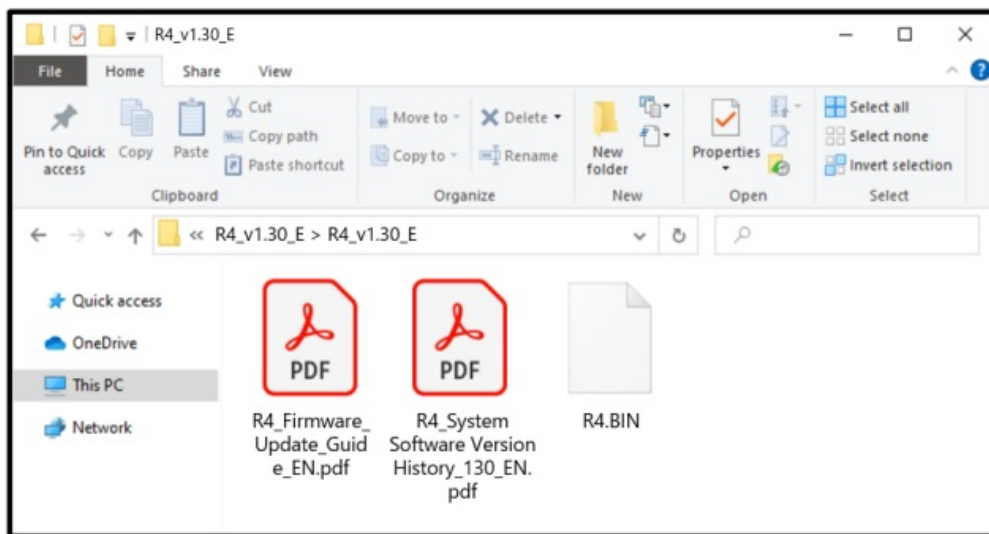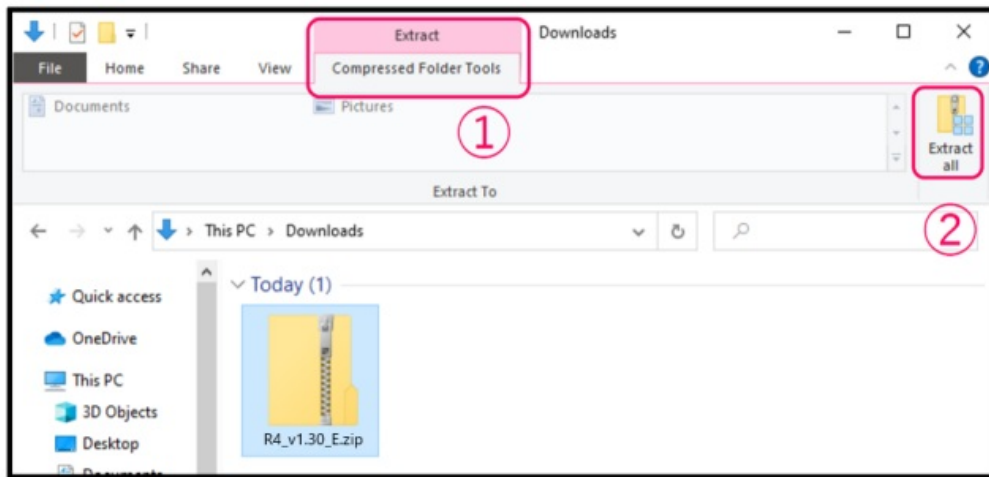


Copy the firmware update file to a microSD card. Copy the “R4.BIN” file to a microSD card.

microSD

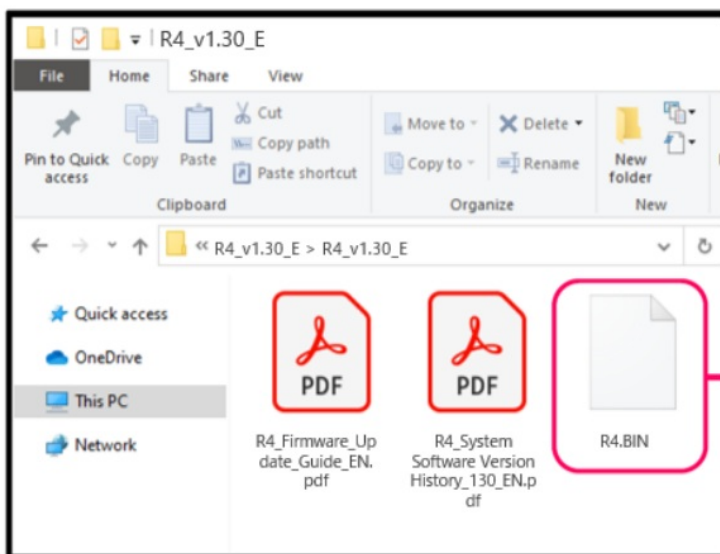

Firmware update file

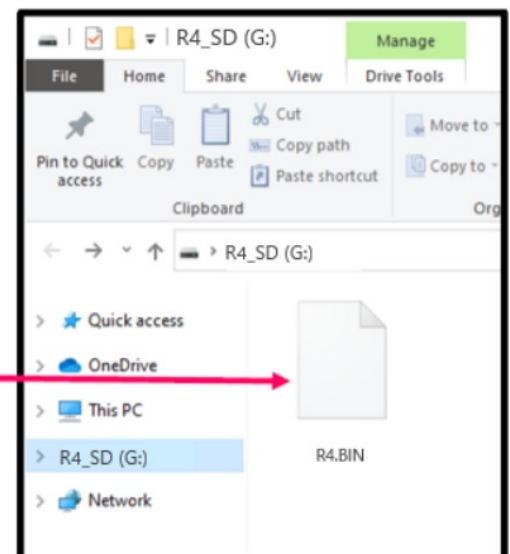


Copy the firmware update file to a microSD card.

## On macOS

### Extract the ZIP file.


After downloading, open the ①“Downloads” folder which appears at the right end of the Dock by default.

Then, click ②“R4\_v1.30\_E”. Downloaded files will be shown.

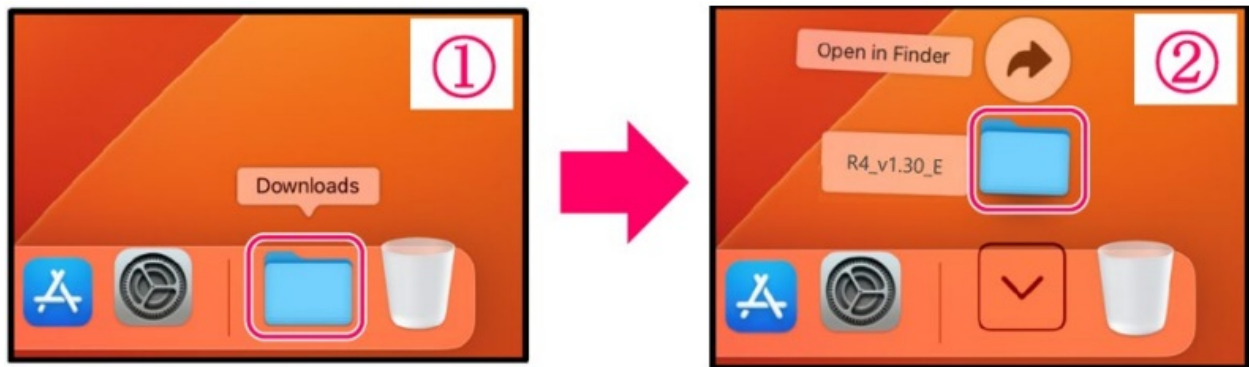

Copy the firmware update file to a microSD card.

Copy the “R4.BIN” file to a microSD card.

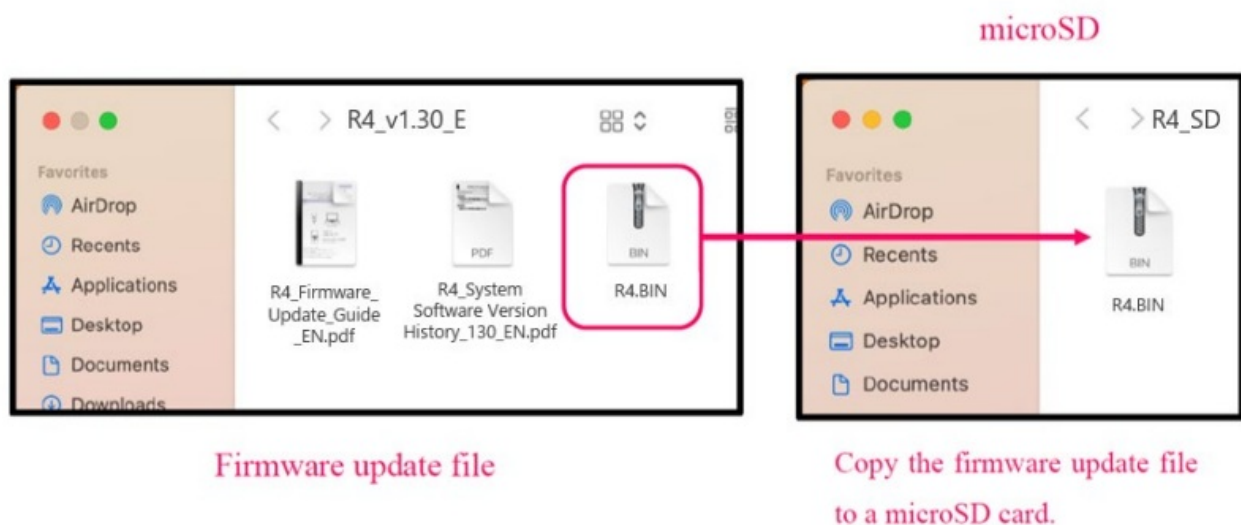


**The following procedures are the same on both Windows and macOS.**


Connect the power source (AC adapter, USB bus power or portable battery) to the USB port (Type-C) of R4.

### NOTE


When performing a firmware update using batteries, the update may not be possible depending on the remaining battery charge.

Insert the microSD card into the R4.

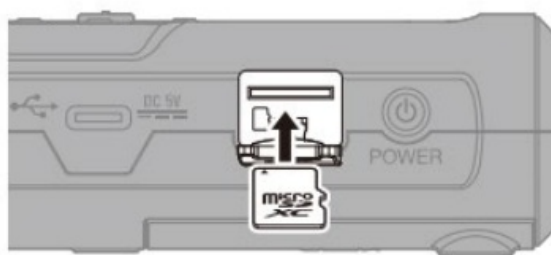


Press  until the recording and playback indicators light.

After the startup screen appears on the display, the Home Screen will open.




Press  and hold when the Home Screen is open.

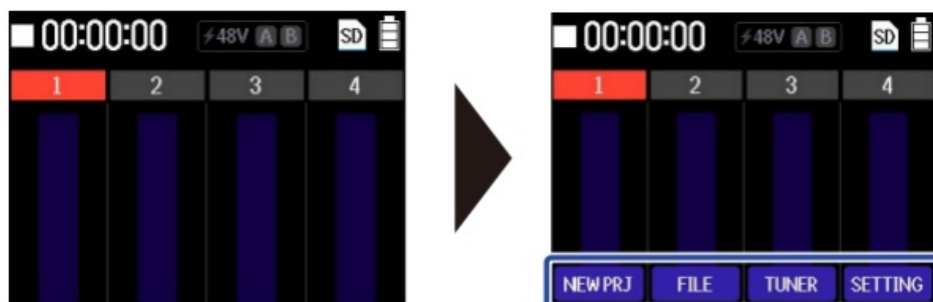This opens the Option Menu.



While pressing , press .

This opens the Settings Menu.

Use  and  to select an item, and use  to confirm.

Proceed with the following selections.


System Firmware




Press the **UPDATE** (TRACK/FUNCTION 4) button.


Use  and  to select "Execute" and use  to confirm.



Press and hold  **POWER**. The display will become blank and the power will turn off.

Press and hold the  **POWER** (power button) again to turn the power on.


The update will start automatically, and the PLAY indicator will blink slowly.

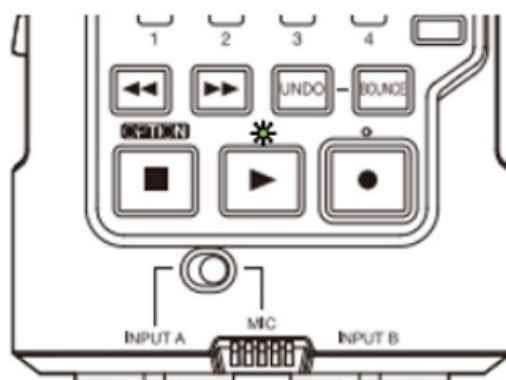

After about 1 minute, the Completion Screen will open.

## NOTE

During the firmware update, do not turn the power off or remove the microSD card. If the update fails, the PLAY and REC indicators will blink. If this occurs, turn the power off once and confirm that a microSD card is installed correctly. Then, turn the power on again and retry updating.


Press and hold  **POWER**. The display will become blank and the power will turn off.




## NOTE

If the firmware update fails, when the power is turned on, the PLAY and REC indicators might continue to blink and proper startup might not be possible. If this occurs, turn the power off. Then, turn it on again while pressing the PLAY button. This will start the update.

## Confirming that the firmware was updated correctly

Press and hold  when the Home Screen is open.

This opens the Option Menu.

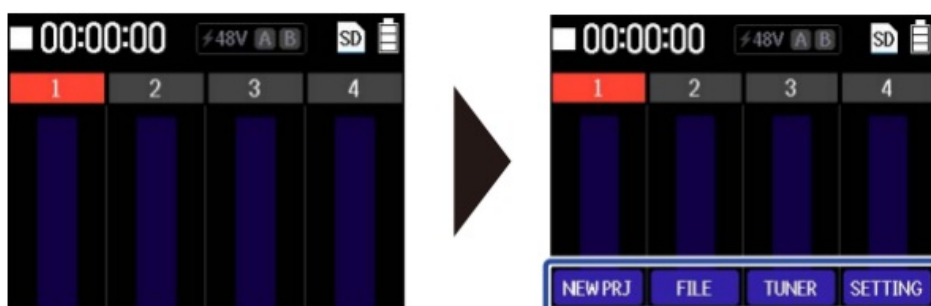

While pressing , press .

This opens the Settings Menu.

Use  and  to select an item, and use  to confirm.

Proceed with the following selections.

System    Firmware

Check the firmware version.




**ZOOM CORPORATION** will bear no responsibility for any losses or third-party claims

resulting from the use of this software. Moreover, distribution, sale, leasing, rental, alteration, and reverse engineering without permission of this software are prohibited. The specifications of this software and the contents of this document could be changed without notice in the future.

- Copying or reprinting this manual in part or in whole without permission is prohibited.
- Microsoft and Windows are trademarks of the Microsoft group of companies.
- Mac is a trademark of Apple Inc.
- The microSDXC logo is a trademark of SD-3C LLC.
- USB Type-C is a trademark of the USB Implementers Forum.
- Other product names, registered trademarks and company names in this document are the property of their respective companies.
- All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.
- The illustrations and display screens in this document could differ from the actual product.
- The contents of this document and the specifications of the product could be changed without notice.
- Recording from copyrighted sources, including CDs, records, tapes, live performances, video works and broadcasts, without permission of the copyright holder for any purpose other than personal use is prohibited by law. ZOOM CORPORATION will not assume any responsibility related to infringements of copyrights.

©2025 ZOOM CORPORATION Z2I-5630-01

## Documents / Resources

	<p><a href="#">ZOOM R4 MultiTrak 4 Track Recorder [pdf]</a> User Guide</p> <p>R4 MultiTrak 4 Track Recorder, R4, MultiTrak 4 Track Recorder, 4 Track Recorder, Track Recorder, Recorder</p>
---	---

## References

- [ZOOM](#)
- [User Manual](#)

Zoom

4 Track Recorder, MultiTrak 4 Track Recorder, R4, R4 MultiTrak 4 Track Recorder, Recorder, Track Recorder, zoom

—Previous Post

**ZOOM MS-200D Multi Stomp for Guitarists User Guide**

Next Post—

**ZOOM F8 Multi Track Field Recorder Instruction Manual**

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.