



# ZURN ZEMS6000AV Automatic Systems Sensor Operated Flushometer Instruction Manual

[Home](#) » [ZURN](#) » ZURN ZEMS6000AV Automatic Systems Sensor Operated Flushometer Instruction Manual 

## Contents

- [1 ZURN ZEMS6000AV Automatic Systems Sensor Operated Flushometer](#)
- [2 LIMITED WARRANTY](#)
- [3 Valve Rough-In](#)
- [4 Prior to Installation](#)
- [5 Electrical](#)
- [6 Sensor Installation](#)
- [7 Control Stop Installation Instructions](#)
- [8 Customized Sensor Range Setting](#)
- [9 ZEMS G2 Trouble Shooting](#)
- [10 ZEMS G2 Valves Parts List](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**ZURN ZEMS6000AV Automatic Systems Sensor Operated Flushometer**



### **ZEMS6000AV Automatic Systems Sensor Operated Flushometer**

### **ZEMS G2 Series Automatic Systems Sensor-Operated Flushometer**

The ZEMS G2 Series Automatic Systems Sensor-Operated Flushometer is a sensor-operated flush valve designed for both exposed and concealed systems. It comes in various models, including

- ZEMS6000AV, ZEMS6200AV, ZEMS6000AV-2, ZEMS6200AV-2, ZEMS6000AV-3,
- ZEMS6200AV-3, ZEMS6001AV, ZEMS6201AV, ZEMS6003AV, ZEMS6203AV,
- ZEMS6140AV, ZEMS6240AV, ZEMS6152AV, ZEMS6252AV, ZEMS6153AV,
- ZEMS6253AV, ZEMS6190AV, ZEMS6290AV, ZEMS6195AV, ZEMS6295AV,
- ZEMS6197AV, and ZEMS6297AV.

### **Limited Warranty**

The ZEMS G2 Series Flushometer comes with a limited warranty.

### **Installation Instructions**

#### **Valve Rough-In**

#### **For Models ZEMS6000 and ZEMS6200:**

- Install the valve rough-in according to the specified dimensions.
- Position the finished wall sensor box at a maximum of 434mm [121"] and a minimum of 241mm [57"] from the

floor.

- Place the motor actuator on top of the fixture.
- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6000-2, ZEMS6000-3, ZEMS6200-2, and ZEMS6200-3:**

- Follow the same instructions as above, but position the motor actuator sensor box at a maximum of 441mm [108"] and a minimum of 241mm [57"] from the floor.

**For Models ZEMS6140 and ZEMS6240:**

- Install the valve rough-in according to the specified dimensions.
- Position the finished wall sensor box at a maximum of 1034mm [273"] and a minimum of 334mm [95"] from the floor.
- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6152 and ZEMS6252:**

- Position the sensor box on top of the fixture.
- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6153 and ZEMS6253:**

- Position the sensor box at a maximum of 1034mm [273"] and a minimum of 334mm [95"] from the floor.
- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6001, ZEMS6003, ZEMS6201, and ZEMS6203:**

- Position the motor actuator sensor box on top of the fixture.
- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6190 and ZEMS6290:**

- Install the valve rough-in according to the specified dimensions.
- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6197 and ZEMS6297:**

- Connect a 1" I.P.S. supply to the flushometer.

**For Models ZEMS6195 and ZEMS6295:**

- Connect a 1" I.P.S. supply to the flushometer.

**Prior to Installation**

Before installing the flushometer, make sure to follow the electrical instructions provided in the manual. Install the hardwired power supply (P6000-HW6) or receptacle for the Zurn Power Converter (P6900-ACA-BA) in a convenient location. It is recommended to use an optional mini junction box (P6000-MJ) to distribute power to each sensor location.

## Electrical Hook-up

Make sure the power is off before connecting the sensor to the actuator and power converter. Follow the wiring diagram shown in Figure 1. Double-check the power converter polarity to ensure it is correct.

### Notes:

1. Failure to observe proper polarity may result in sensor and/or power converter failure.
2. Use #18 AWG for interconnections.

The optional mini junction box (P6000-MJ) allows a maximum of 8 actuators.

- For grounding conductor, use a minimum of 18 AWG copper conductor.
- For detailed instructions, please refer to the instruction manual.

**Disclaimer:** *The information provided here is a summary of the product manual. For complete and accurate instructions, please refer to the original product manual or contact the manufacturer.*

### Sensor-Operated Exposed Systems

ZEMS6000AV ZEMS6200AV-3  
ZEMS6200AV ZEMS6001AV  
ZEMS6000AV-2 ZEMS6201AV  
ZEMS6200AV-2 ZEMS6003AV  
ZEMS6000AV-3 ZEMS6203AV

### Sensor-Operated Concealed Systems

ZEMS6140AV ZEMS6190AV  
ZEMS6240AV ZEMS6290AV  
ZEMS6152AV ZEMS6195AV  
ZEMS6252AV ZEMS6295AV  
ZEMS6153AV ZEMS6197AV  
ZEMS6253AV ZEMS6297AV

**WARNING:** Cancer and Reproductive Harm – [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**ADVERTENCIA:** Cáncer y daño reproductivo – [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction – [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## LIMITED WARRANTY


All goods sold hereunder are warranted to be free from defects in material and factory workmanship for a period of five years from the date of purchase. Decorative finishes warranted for one year. We will replace at no costs goods that prove defective provided we are notified in writing of such defect and the goods are returned to us prepaid at Sanford, NC, with evidence that they have been properly maintained and used in accordance with instructions. We shall not be responsible for any labor charges or any loss, injury or damages whatsoever,

including incidental or consequential damages. The sole and exclusive remedy shall be limited to the replacement of the defective goods. Before installation and use, the purchaser shall determine the suitability of the product for his intended use and the purchaser assumes all risk and liability whatever in connection therewith. Where permitted by law, the implied warranty of merchantability is expressly excluded. If the products sold hereunder are "consumer products," the implied warranty of merchantability is limited to a period of three years and shall be limited solely to the replacement of the defective goods. All weights stated in our catalogs and lists are approximate and are not guaranteed.

## Valve Rough-In


### Models

ZEMS6000 and ZEMS6200

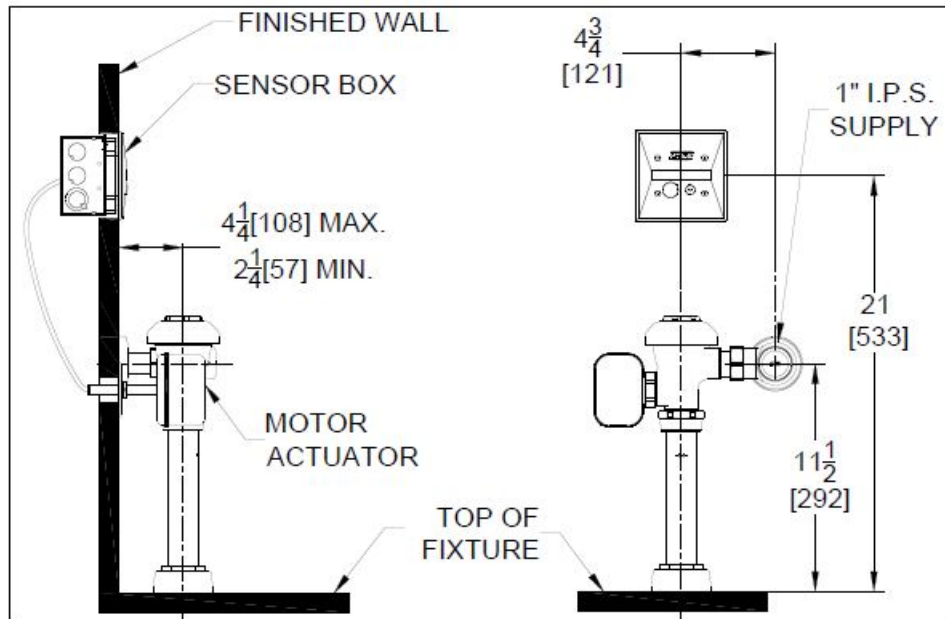


### Models

- ZEMS6000-2, ZEMS6000-3
- ZEMS6200-2, ZEMS6200-3

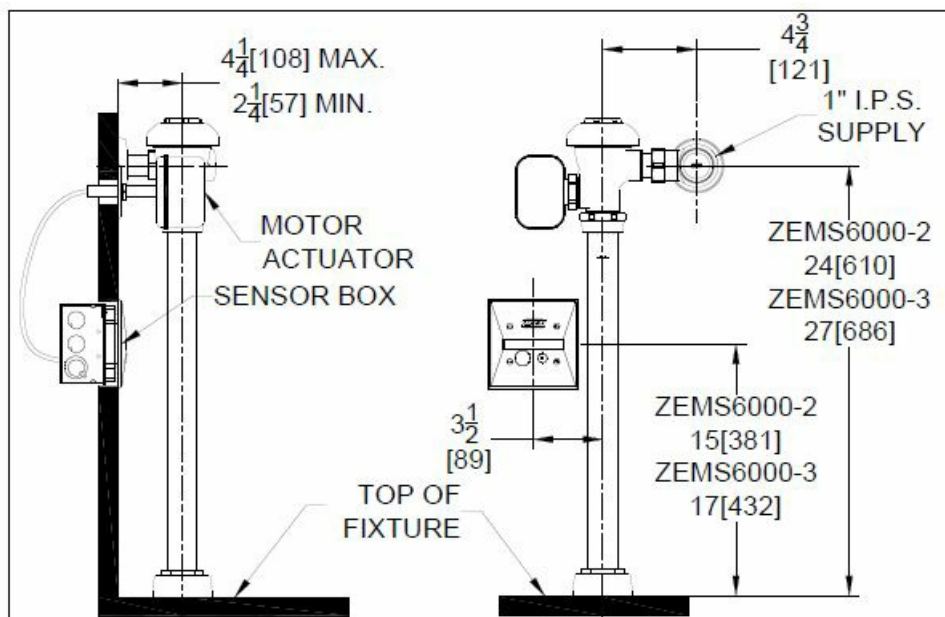


### Models

ZEMS6140 and ZEMS6240

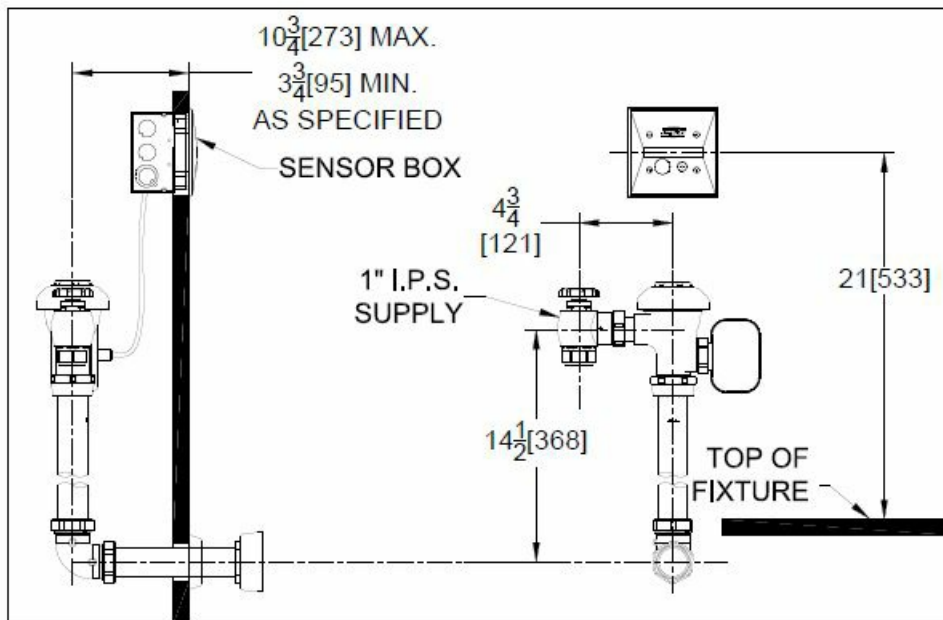


### Models

ZEMS6152 and ZEMS6252

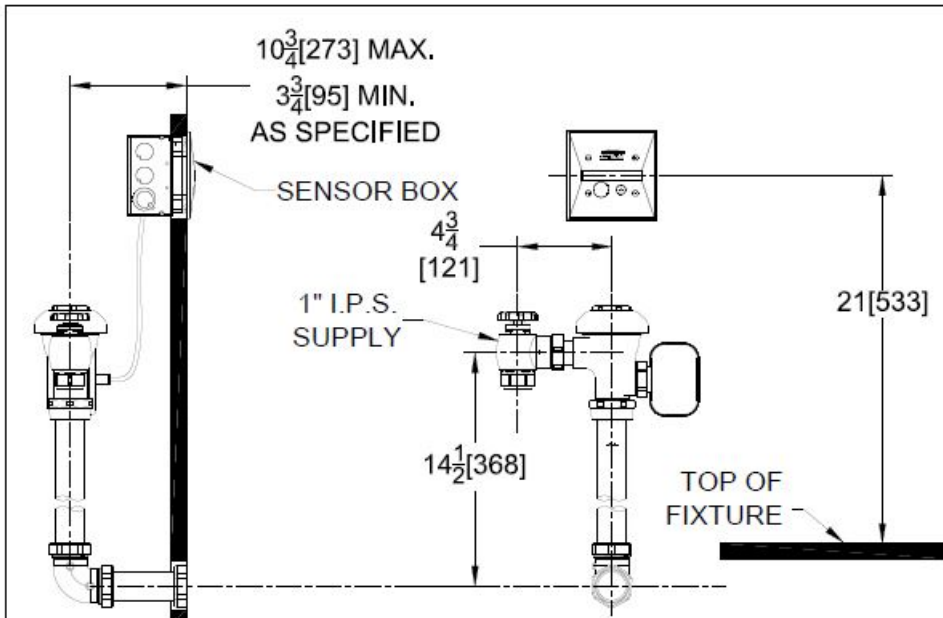


### Models

ZEMS6153 and ZEMS6253

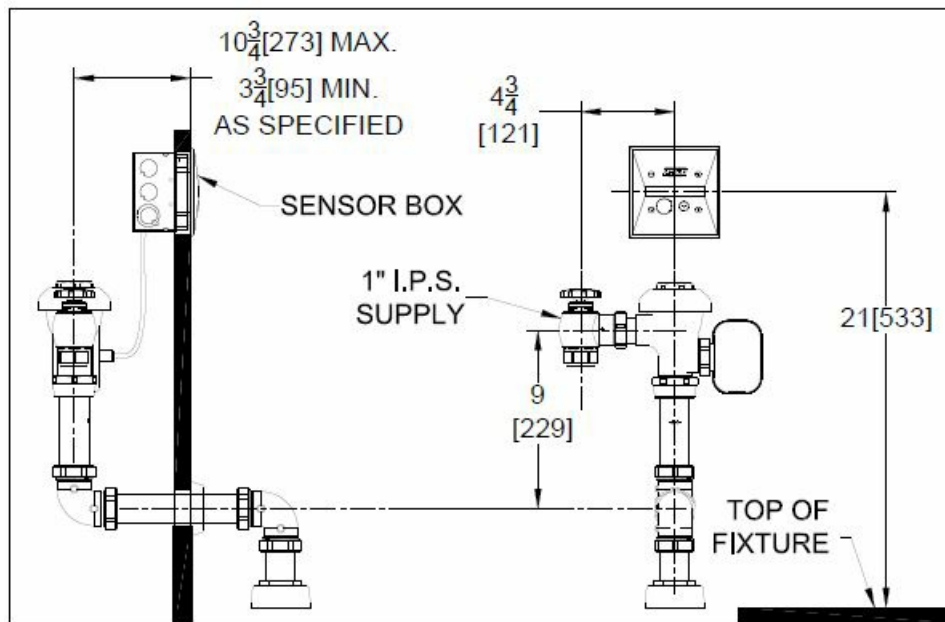

## Models

- ZEMS6001, ZEMS6003
- ZEMS6201, ZEMS6203

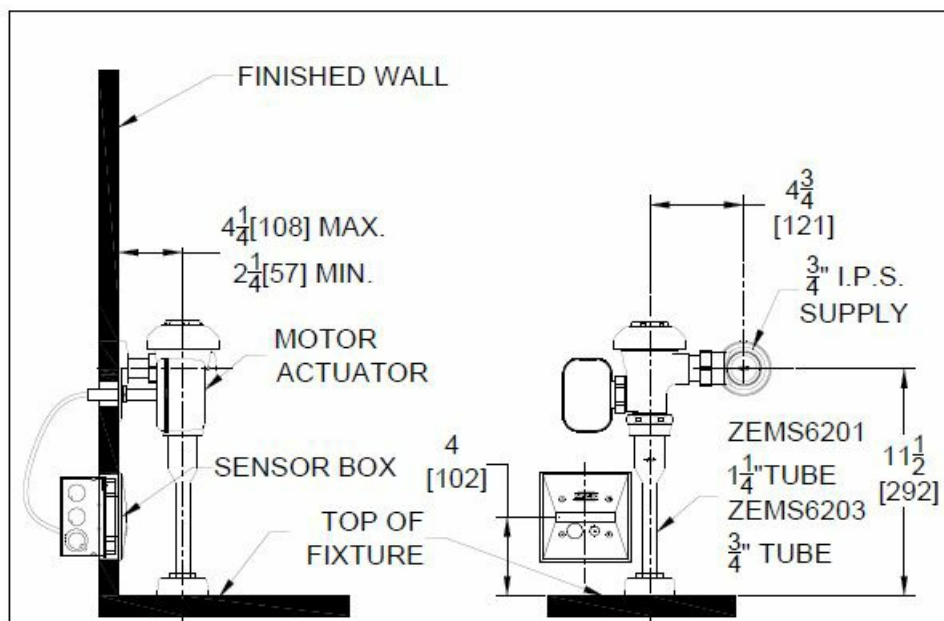


## NOTES:

FOR INSTALLATIONS WITH GRAB BAR, CENTERLINE OF 4 X 4 BOX MUST BE A MINIMUM OF 4 INCHES ABOVE CENTERLINE OF GRAB BAR.


## Models

ZEMS6190 and ZEMS6290

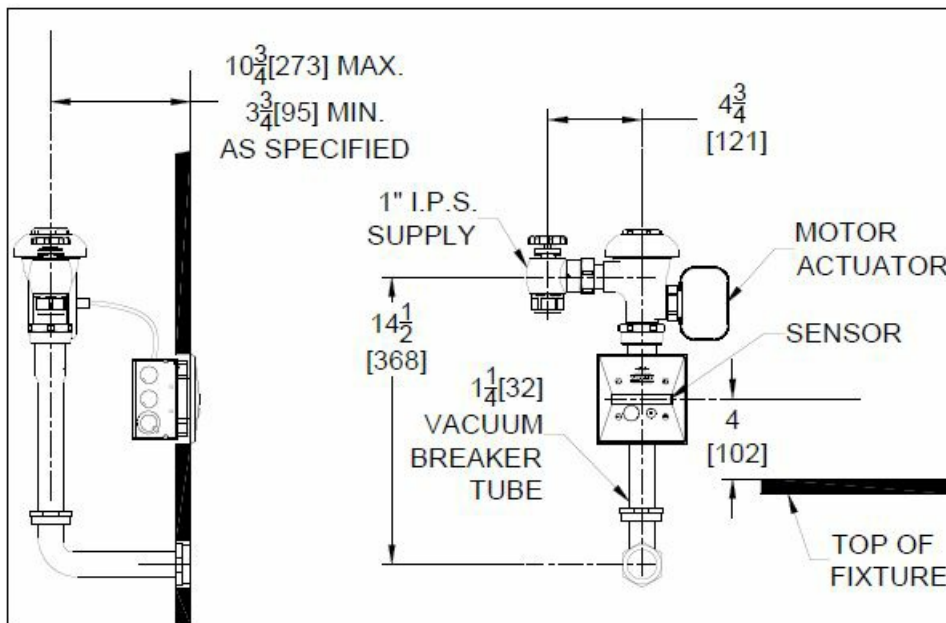

### Models


ZEMS6195 and ZEMS6295

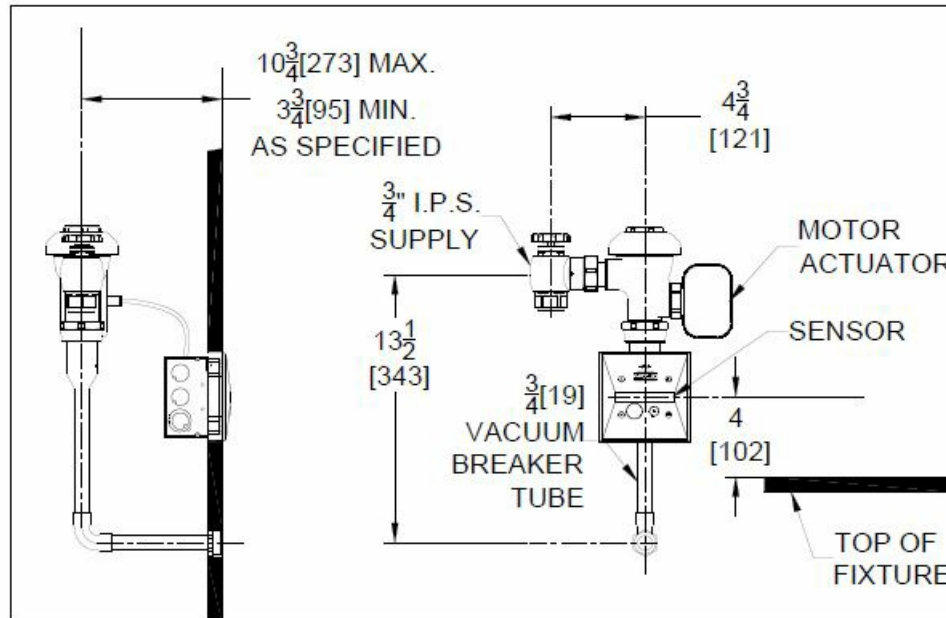

### Models

ZEMS6197 and ZEMS6297



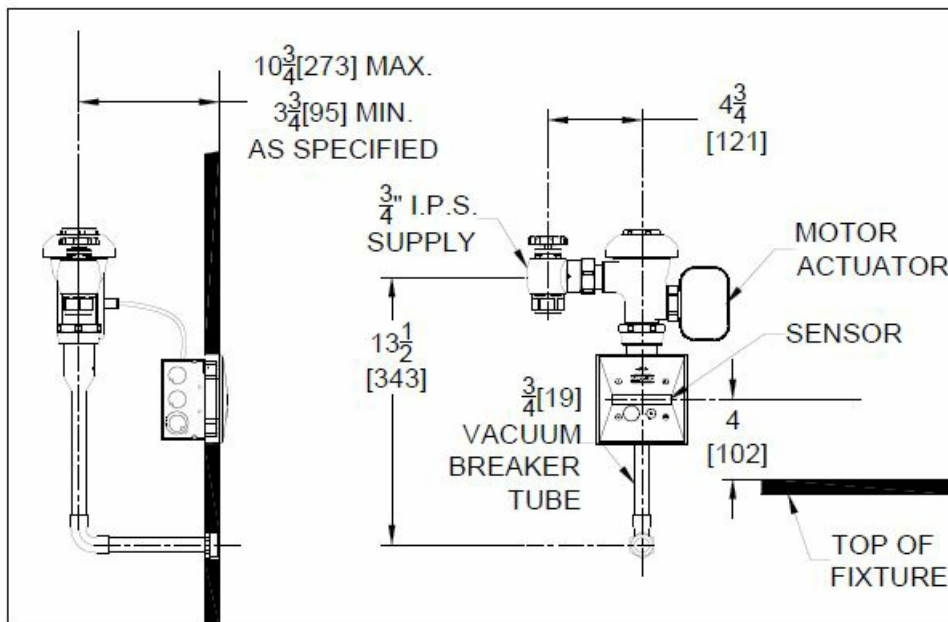

## Prior to Installation

Prior to installing the Zurn Automatic Sensor-equipped Flushometer, install the items listed below as illustrated in Figures 1 through 3.

- 2-gang electrical box (4 x 4 x 2 1/8, use Steel City #52171-N box, and #52-C-18 device cover or equivalent for sensor with closet or urinal installs);
- Optional: Single-gang electrical outlet for plug-in power converter.
- Electrical wiring to the power converter outlet (120 VAC, 35 watts service required for each power converter used).
- Closet fixture.
- Zurn carrier system, Z1200 series or equal.

## Important:

- ALL ELECTRICAL WIRING IS TO BE INSTALLED IN ACCORDANCE WITH NATIONAL/LOCAL CODES AND REGULATIONS.
- ALL PLUMBING IS TO BE INSTALLED IN ACCORDANCE WITH APPLICABLE CODES AND REGULATIONS.
- WATER SUPPLY LINES MUST BE SIZED TO PROVIDE AN ADEQUATE VOLUME OF WATER FOR EACH FIXTURE. FLUSH ALL WATER LINES PRIOR TO MAKING CONNECTIONS.
- SENSOR UNITS SHOULD NOT BE LOCATED ACROSSFROM EACH OTHER OR IN CLOSE PROXIMITY TO HIGHLY REFLECTIVE SURFACES.
- CONTROL STOP SHOULD NEVER BE OPENED TO ALLOW FLOW GREATER THAN FIXTURE IS CAPABLE OF EVACUATING. IN THE EVENT OF VALVE FAILURE, FIXTURE MUST BE ABLE TO HANDLE A CONTINUOUS FLOW.

## Electrical

### AC/DC Power Supply

Install hardwired power supply (P6000-HW6) or receptacle for the Zurn Power Converter (P6900-ACA-BA) in a



convenient location. An optional mini junction box (P6000-MJ) is recommended to distribute power to each sensor location.

**NOTE:** One Zurn P6000-HW6 can operate up to eight automatic sensor equipped flushometers, and the optional P6000-ACA-BA Power Converter can handle up to six flushometers and is supplied with a six-foot cord. If additional wire is needed from the Power Converter to the Flushometer(s), use #18 AWG (not provided). Do not supply power to the Power Converter until installation of actuator, sensor and Flushometer is completed and checked. Proper polarity must be observed or damage to one or all components will result.

### Electrical Hook-up (Figure 1)

Be certain power is off to prevent damage to electrical components. Connect the sensor to the actuator and power converter exactly as shown in Figure 1.

**Double check that power converter polarity is correct.**

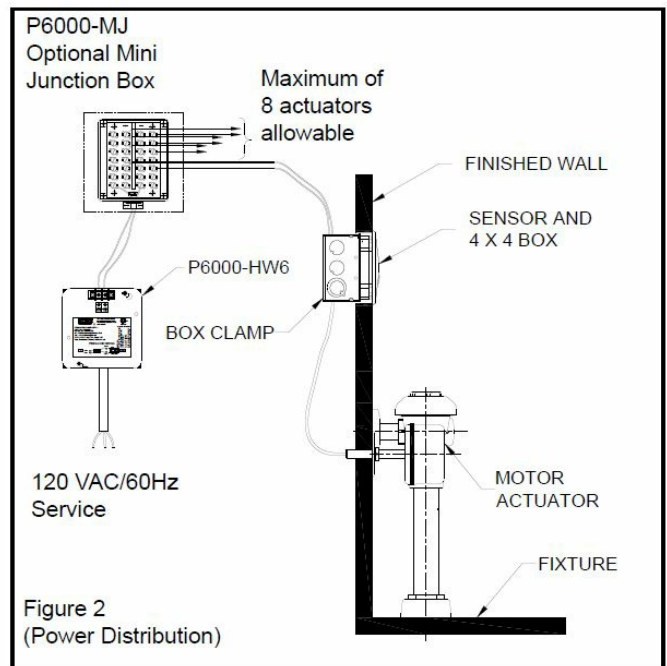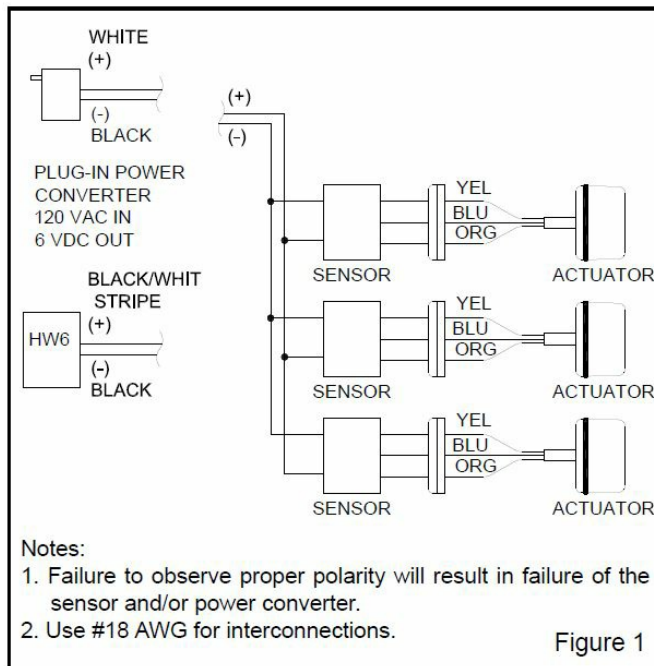

## Sensor Installation

### STEP 1 – Locate Sensor Box


Locate sensor box in the wall according to model number as shown on pages 2 and 3. Install plaster ring so screw holes are on left and right side of box (as shown in Figure 3). Trim tiles to allow screw holes in plaster ring to show. Note: Product is configured at time of shipment for a 168 hour trap seal flush (SW1 in OFF position on rear of sensor). If a 48 hour trap seal flush is desired, set SW1 to ON position. (Figure 3A)

### STEP 2 – Mount Automatic Sensor (Figure 3)

Install the Zurn Automatic Sensor into the lower half of the 2-gang electrical box using two (2) screws provided. Connect the 2-wire power cable and 3-wire actuator cable to sensor. Connectors are keyed to insure correct polarity. Ensure that the sensor is mounted in the orientation shown (with lens angled downward, see Figure 4).


### STEP 3 – Install Top Bracket (Figure 3)

Fasten the Top Bracket to the electrical box using (2) screws provided. Ensure that bracket is mounted in the orientation shown (with face angled upward, see Figure 4).

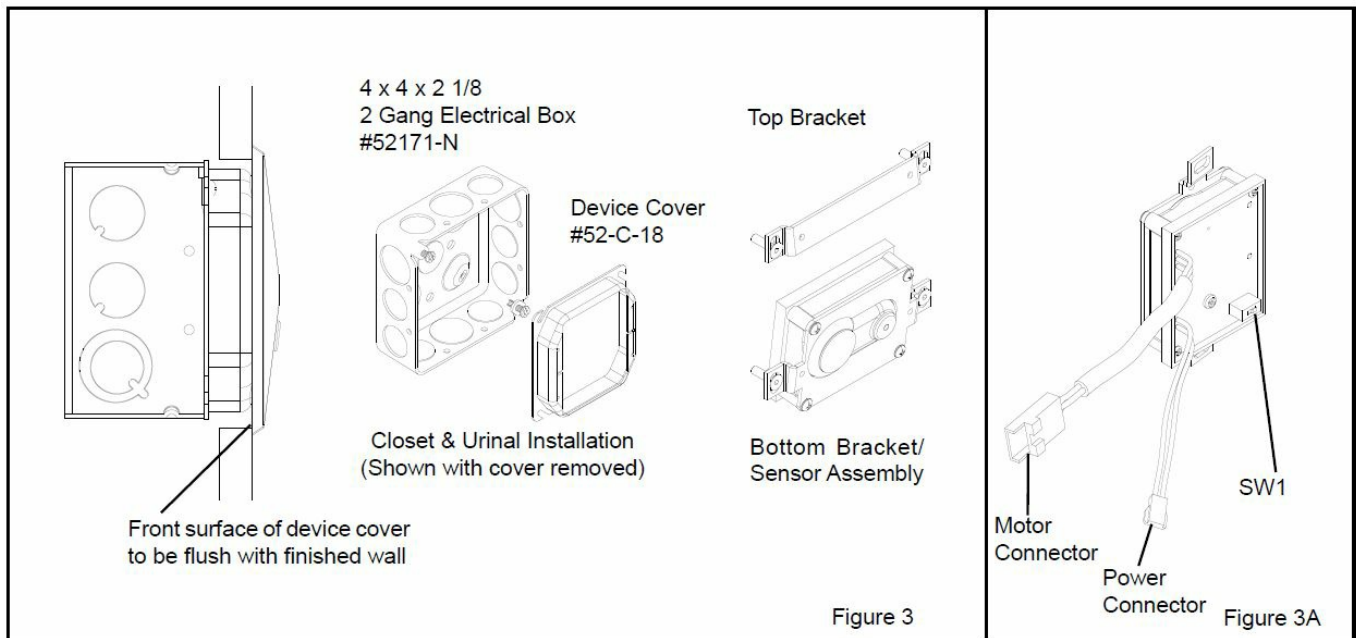

#### STEP 4 – Install Cover Plate (Figure 4)

Perform a trial fit of the Cover Plate and adjust positions of the sensor and top bracket as needed to ensure alignment of sensor lens, button, and cover screws. Fasten Cover Plate with (4) screws provided.

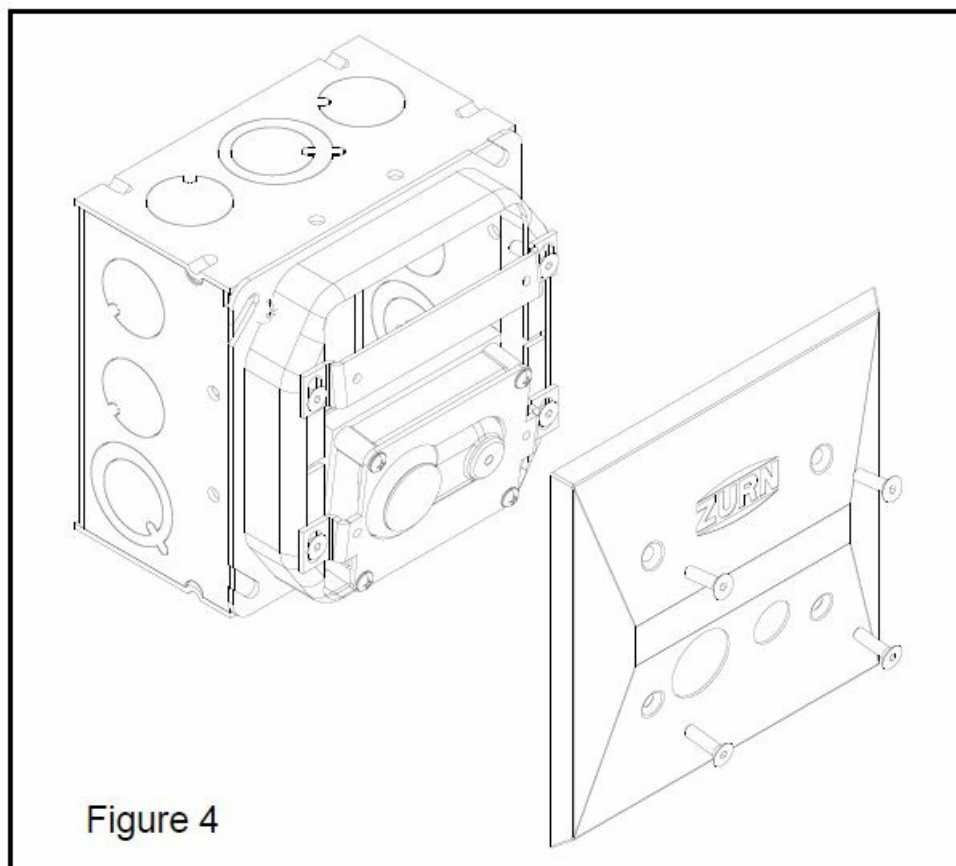


#### Mechanical

The AquaVantage® design is optimized to operate between 25 and 80 psi (172 to 552 kPa) of water pressure (running). The minimum pressure required for the valve to work properly is determined by the fixture selected. Please consult fixture manufacturer for water pressure requirements. Protect the chrome or special finish of this flushometer during installation. Do not use toothed tools to install or service the valve as this will damage the finish. Also, see “Care and Cleaning” section of this manual.

#### Control Stop Installation Instructions


### STEP 1

Install control stop assembly by threading it onto water supply pipe and tightening with a smooth jawed wrench. Apply thread sealing compound or pipe tape to male NPT thread on sweat solder adapter only. See Figure 5. Prior to turning on main water supply line ensure all stop valves are closed off tight by using a flathead screwdriver and turning the stop valve adjustment screw clockwise.

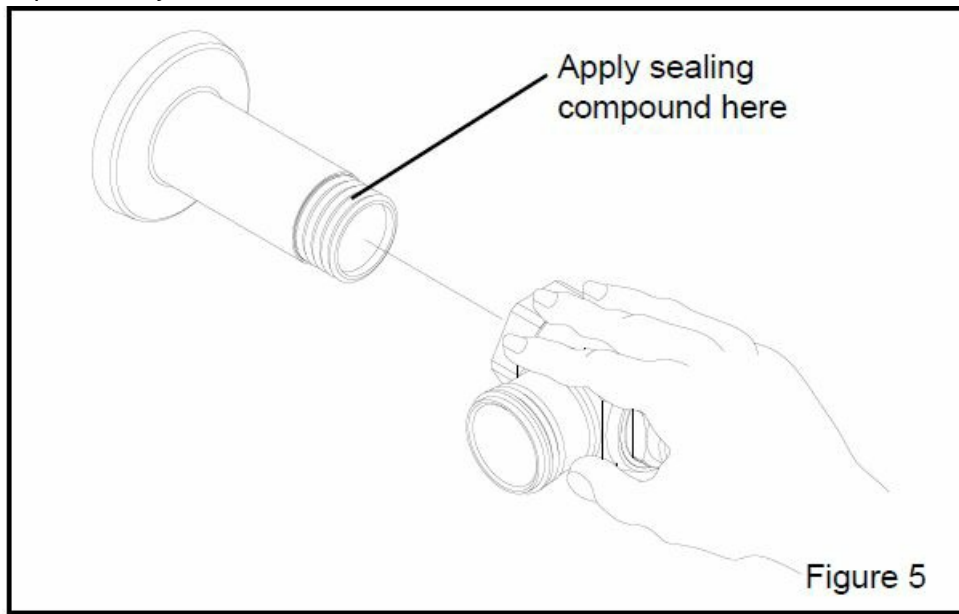

### STEP 2

When all stop valves are properly connected to the water supply line and water pressure is available open the control stop using a flathead screwdriver and turning the stop valve adjustment screw counter clockwise. See Figure 6. Allow the water supply line to flush any debris or sediment that may be present in the line. Close the control stop once the lines are completely flushed.

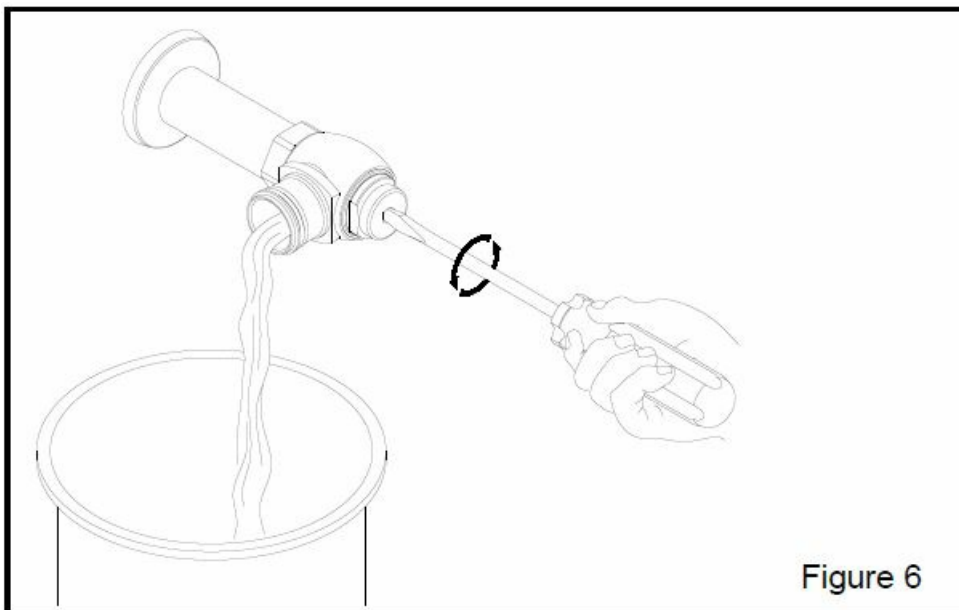

### Flush Valve Installation

Prior to attaching flush valve to control inspect and verify that the O-ring seal is located within the O-ring groove at the tailpiece. Ensure the locking nut and locking snap ring are also present on the tailpiece. See Figure 7. Lubricate O-ring with water if necessary and insert flush valve tailpiece into the control stop valve. Tighten locking nut using a smooth jawed wrench.


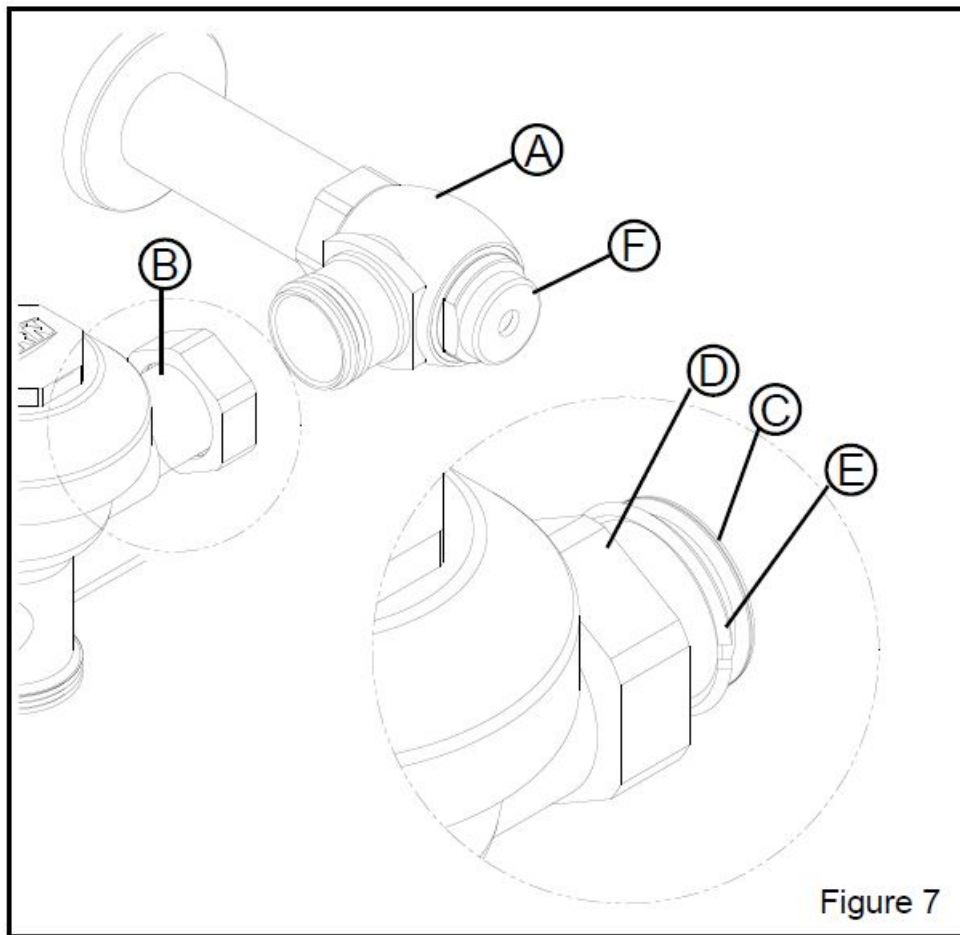


Figure 7

### Install Vacuum Breaker Flush Connection


Models ZEMS6000, ZEMS6000-2, ZEMS6000-3, ZEMS6001, ZEMS6003, ZEMS6200, ZEMS6200-2, ZEMS6200-3, ZEMS6201, and ZEMS6203

Slide the tube nut (H), spud nut (G), slip gasket, rubber gasket and spud escutcheon over the vacuum breaker tube and insert tube into fixture spud. Hand tighten tube nut to valve body and hand tighten spud nut onto fixture spud. Adjust the valve assembly for plumb. Tighten fixture spud nut (G), vacuum breaker tube nut (H) and lock nut (D) (fig. 7 & 8) with a wrench.

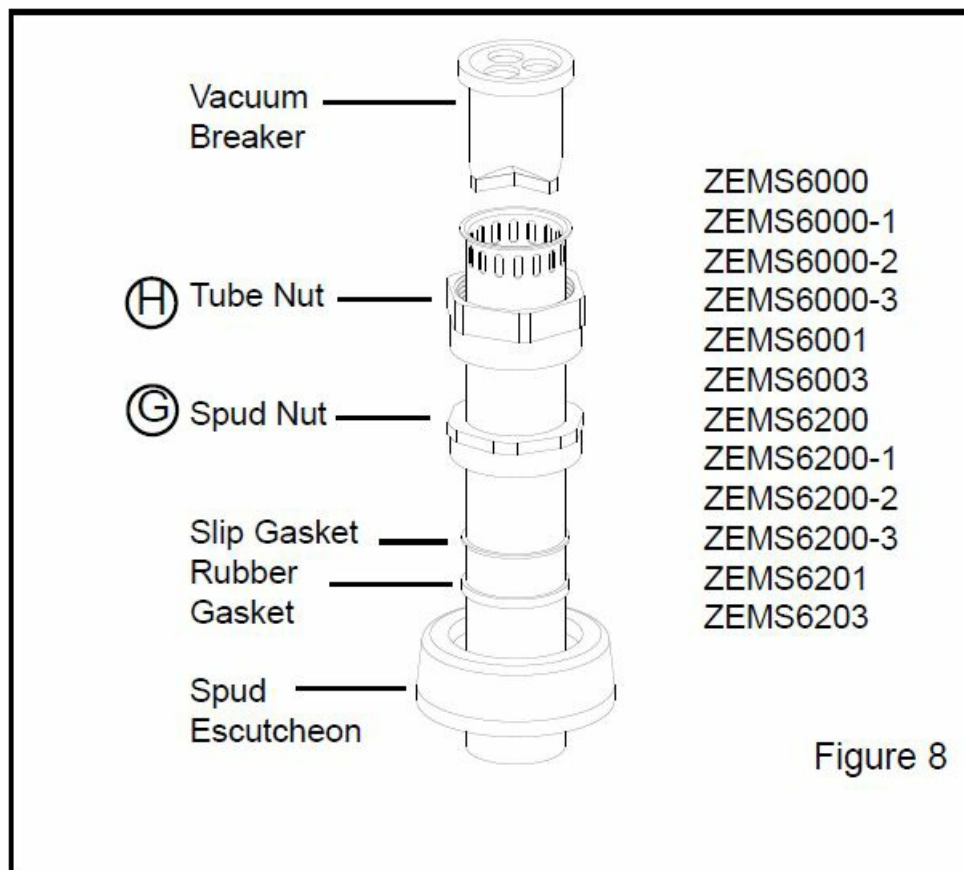

Models ZEMS6140, ZEMS6152, ZEMS6153, ZEMS6190, ZEMS6195, ZEMS6197, ZEMS6240, ZEMS6252, ZEMS6253, ZEMS6290, ZEMS6295 and ZEMS6297 (Figure 9)



**NOTE:** When cutting scored pipe, leave a minimum of 1-1/4" of scoring to ensure engagement with compression coupling. Assemble pipe, elbows, couplings, slip washers, rubber gaskets and flanges as illustrated in Figure 9. Hand tighten all couplings. Once installation is completed, tighten all connections.

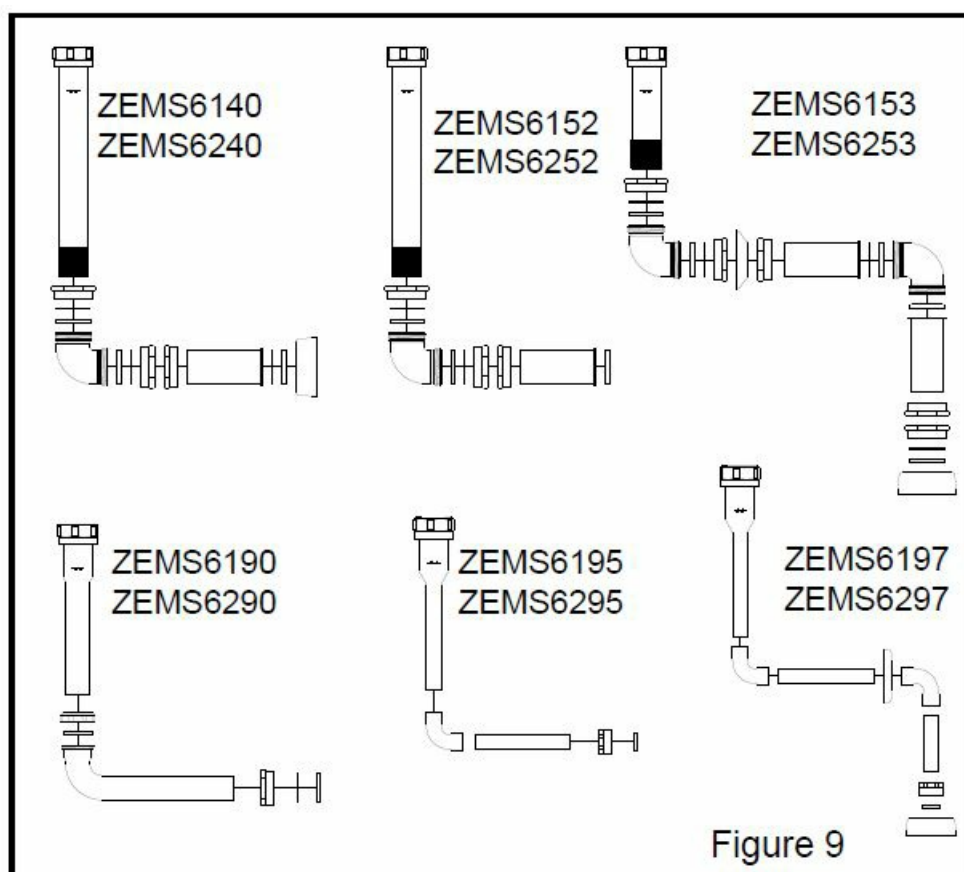



1. Drill 1-3/4" diameter hole per Figures 10 or 11.
2. Run "fish tape" from electrical box to 1-3/4" hole.
3. Install actuator escutcheon to the actuator pipe with setscrew toward actuator. Do not tighten setscrew at this time.
4. Pull actuator cable through hole with fish tape and back to sensor box. Secure cable to box with box clamp.
5. With escutcheon loose and handle port washer installed, push cable into wall. The actuator must be angled away from the valve body at this time until the actuator push rod clears the handle port flange. The actuator can now be mounted to the flush valve and tightened.
6. Push escutcheon back to wall and tighten setscrew.

**NOTE:** See Figure 2 for typical installation including optional mini junction box.

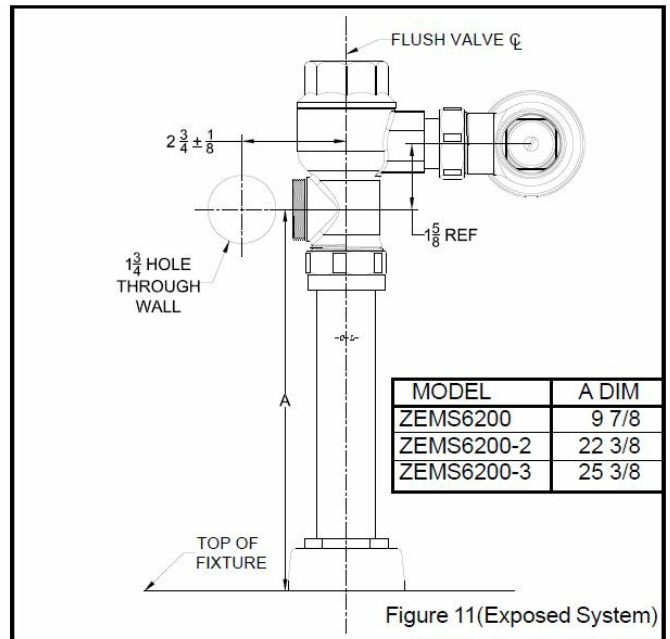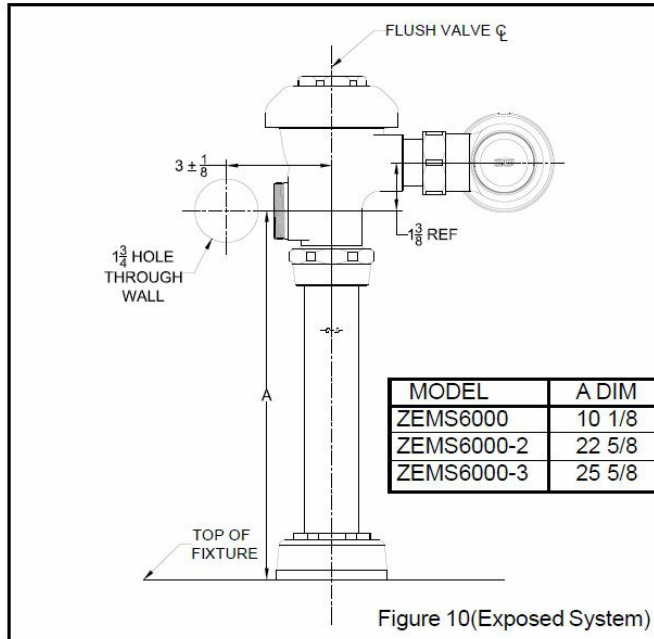

FV582 Rev. E 11/11/2022

## Customized Sensor Range Setting

The ZEMS is factory set to accommodate most closet and urinal installations. If this factory setting does not accommodate your specific environment, follow steps below to customize your range settings for your specific ZEMS model.

## CALIBRATION INSTRUCTIONS FOR ZEMS G2

1. Obtain a target. SEE FIGURE 12.

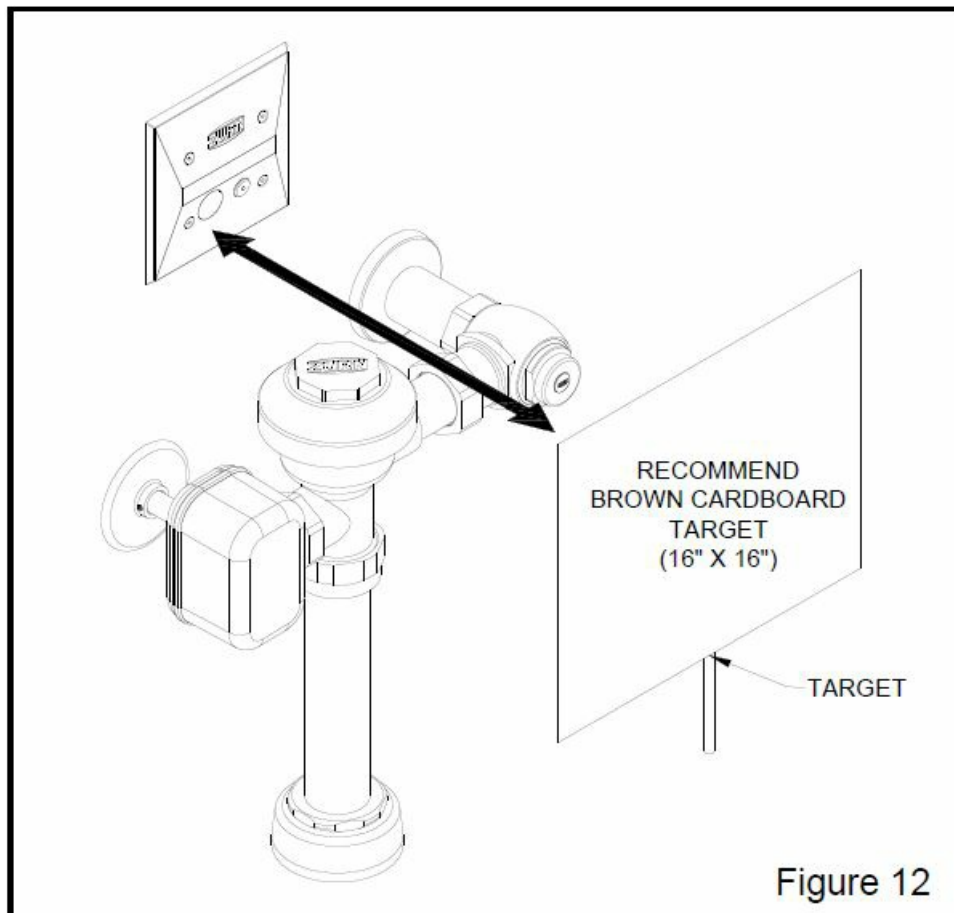


Figure 12

2. PRESS and HOLD button for 10 seconds or until the LED turns solid. (\*Unit will blink four times and flush once while button is being held)
3. RELEASE finger after LED turns solid.
4. PRESS and HOLD button when LED starts blinking.
5. RELEASE finger when LED turns solid.
6. Set target at desired distance, (No less than 16") from sensor face and verify NO other objects are in view of sensor face.
7. Keep target steady – Unit will blink while calibrating.
8. After 30 seconds, calibration ends with a fast double blink or a solid LED for 5 seconds.
9. IF THE LED REMAINS SOLID FOR 5 SECONDS AFTER CALIBRATION, the calibration was NOT successful.  
REPEAT STEPS 2-8
10. For closet installations continue to "VERIFY CALIBRATION FOR CLOSET INSTALLATIONS".

### Verify Calibration for Closet Installations

1. Stand outside closet stall and close door and verify that sensor does not see stall door. If LED blink/flushes, recalibrate to a shorter range.
2. Slowly open door to closet stall while looking at ZEMS-IS sensor.
3. If led blinks while door is opening, recalibrate to a shorter range. FAILURE TO DO SO WILL RESULT IN GHOST FLUSHING.

### Activating the Motor Actuator with the Sensor

To activate the motor actuator with the sensor, simply place a target in front of the sensor. A single red light will flash indicating the sensor has recognized the target. If the target stays in view for eleven seconds, two flashing red lights will occur. This indicates that the target has been in view for the required time and upon leaving the view,



a signal will be sent to the motor actuator to flush the flush valve

**NOTE:** If the target does not stay in view for the required eleven seconds, a flush will not occur.

**IMPORTANT NOTE:** Excessive water flow creates noise, while too little flow will not satisfy the needs of the fixture. Proper adjustment is made when:

1. The plumbing fixture is cleansed after each flush without splashing water out from the lip.
2. A quiet flushing cycle is achieved.

After adjustment: Replace the Zurn stop cap screw cover.

### Care and Cleaning Instrustructions

Do not use abrasive or chemical cleaners to clean Flushometers, sensor, and actuators as they may degrade the sensor lens, dull the luster, and attack the chrome or special decorative finishes. Use only mild soap and water, then wipe dry with a clean cloth or towel.

While cleaning the bathroom tile, the Flushometer and actuator should be protected from splattering of cleaner. Do not use acids and cleaning fluids as they can damage the optics lens and chrome plating.

### Seasonal use.

Valves that are used in installations subject to shut down because of cold and freezing conditions should be maintained in the following manner.

1. Shut off the main supply.
2. Drained water.
3. Remove the stop valve cap and stop internals to allow the water to drain from the flush valve and supply line.


### ZEMS G2 Trouble Shooting

Problem	Possible Cause	Corrective Action
Valve will not operate.	1) Stop valve is closed	1) Open stop valve.
	2) Supply valve is closed.	2) Open supply valve.
	3) The electric wire(s) is not connected.	3) Connect the wires.
	4) Sensor lens may be dirty.	4) Clean lens.
	5) Reflective surface in front of sensor.	5) Remove the reflective surface from in front of the sensor.
	6) Detection range not adjusted properly.	6) Adjust the detection range.
	7) The infrared sensor or the actuator is out of order.	7) Contact distributor for replacement.
	8) Sensor fault	8) Replace sensor

	9) No power provided by power supply	9) Replace power supply
Flush valve does not activate after user leaves	1) Sensor does not recognize a user	1) Re-calibrate sensor per "Calibration Instructions" section.
	2) Power supply may be disrupted	2) Check available voltage where escutcheon is attached to wall with DC voltmeter. 7.4-9 VDC is required.
		3) Verify connection to actuator.
Repeated valve activation when power is provided	1) Insufficient DC power level (less than 7.4 volts DC)	1) Upgrade the -HW6 power supply to the new ZURN power supply (greater than 7.4 volts DC) or replace the ACA supply.
Insufficient volume of water to adequately siphon fixture	1) Stop valve is not open enough.	1) Open stop valve for desired volume of water.
	2) Urinal piston installed in closet valve.	2) Replace urinal piston with proper closet piston.
	3) Insufficient volume or pressure at supply.	3) Consult fixture guide for minimum gallons per minute flow and running pressure for satisfactory performance.
Valve is flushing too long or not shutting off.	1) Trip mechanism not seating properly due to foreign material between trip mechanism and seat.	1) Disassemble parts and rinse thoroughly.
	2) By-pass orifice is plugged or partially plugged.	2) Examine by-pass orifice and clean if necessary being certain not to enlarge orifice opening.
	3) Line pressure is not adequate to force trip mechanism to seal.	3) Pressure is inadequate or has dropped below minimum operating range. Steps should be taken to increase the line pressure.
Water splashes out of fixture/	1) Supply volume is more than is necessary.	1) Adjust downward on control stop.
	2) Lime accumulation on vortex or spreader holes of fixture.	2) Remove the lime build up.
Flush is not considered quiet.	1) Control stop may not be adjusted for quiet operation.	1) Adjust the control stop for quiet operation keeping in mind the fixture evacuation requirements.
	2) Fixture may be contributing to noise.	2) Check noise created by fixture by placing a cover over the bowl opening to separate valve noise from bowl noise. If it is determined the fixture is too noisy, consult with fixture manufacturer.

	3) Piping system may be source of noise.	3) High pressure in the system can sometimes be controlled by the stop valve. Other sources of noise may be the absence of air chamber and shock absorbers, loose pipes, improper size pipes, etc. In these cases the building engineer should be consulted.
Flush valve "ghost" flushes or activates randomly with no user present.	1) Sensor Lens may be dirty.	1) Clean lens.
	2) Power supply output is out of tolerance.	2) DC voltage must be between 7.4-9 volts. Check for power fault or malfunction in a unit or replace with a Zurn power converter.
	3) Sensor is viewing stall door.	3) Re-calibrate sensor per "Calibration Instructions" section.
Flush valve shuts off too quick.	<b>Diaphragm Valves</b>	
	1) Damaged diaphragm.	1) Install new P6000-ECA, P6000-EUA replacement kit.
	2) Enlarged by-pass orifice.	2) Install new P6000-ECA, P6000-EUA replacement kit.
	<b>Piston Valves</b>	
	1) Damaged piston.	1) Install new P6200-EC, P6200-EU replacement kit.
	2) Enlarged by-pass orifice.	2) Install new P6200-EC, P6200-EU replacement kit.
Valve is short flushing	<b>Diaphragm Valves</b>	
	1) Enlarged by-pass orifice.	1) Install new P6000-ECA, P6000-EUA replacement kit.
	2) Urinal piston installed in closet valve.	2) Replace urinal piston with proper closet piston.
	<b>Piston Valves</b>	
	1) Enlarged by-pass orifice.	1) Install new P6200-EC, P6200-EU replacement kit.
	2) Urinal piston installed in closet valve.	2) Replace urinal piston with proper closet piston.

## ZEMS G2 Valves Parts List

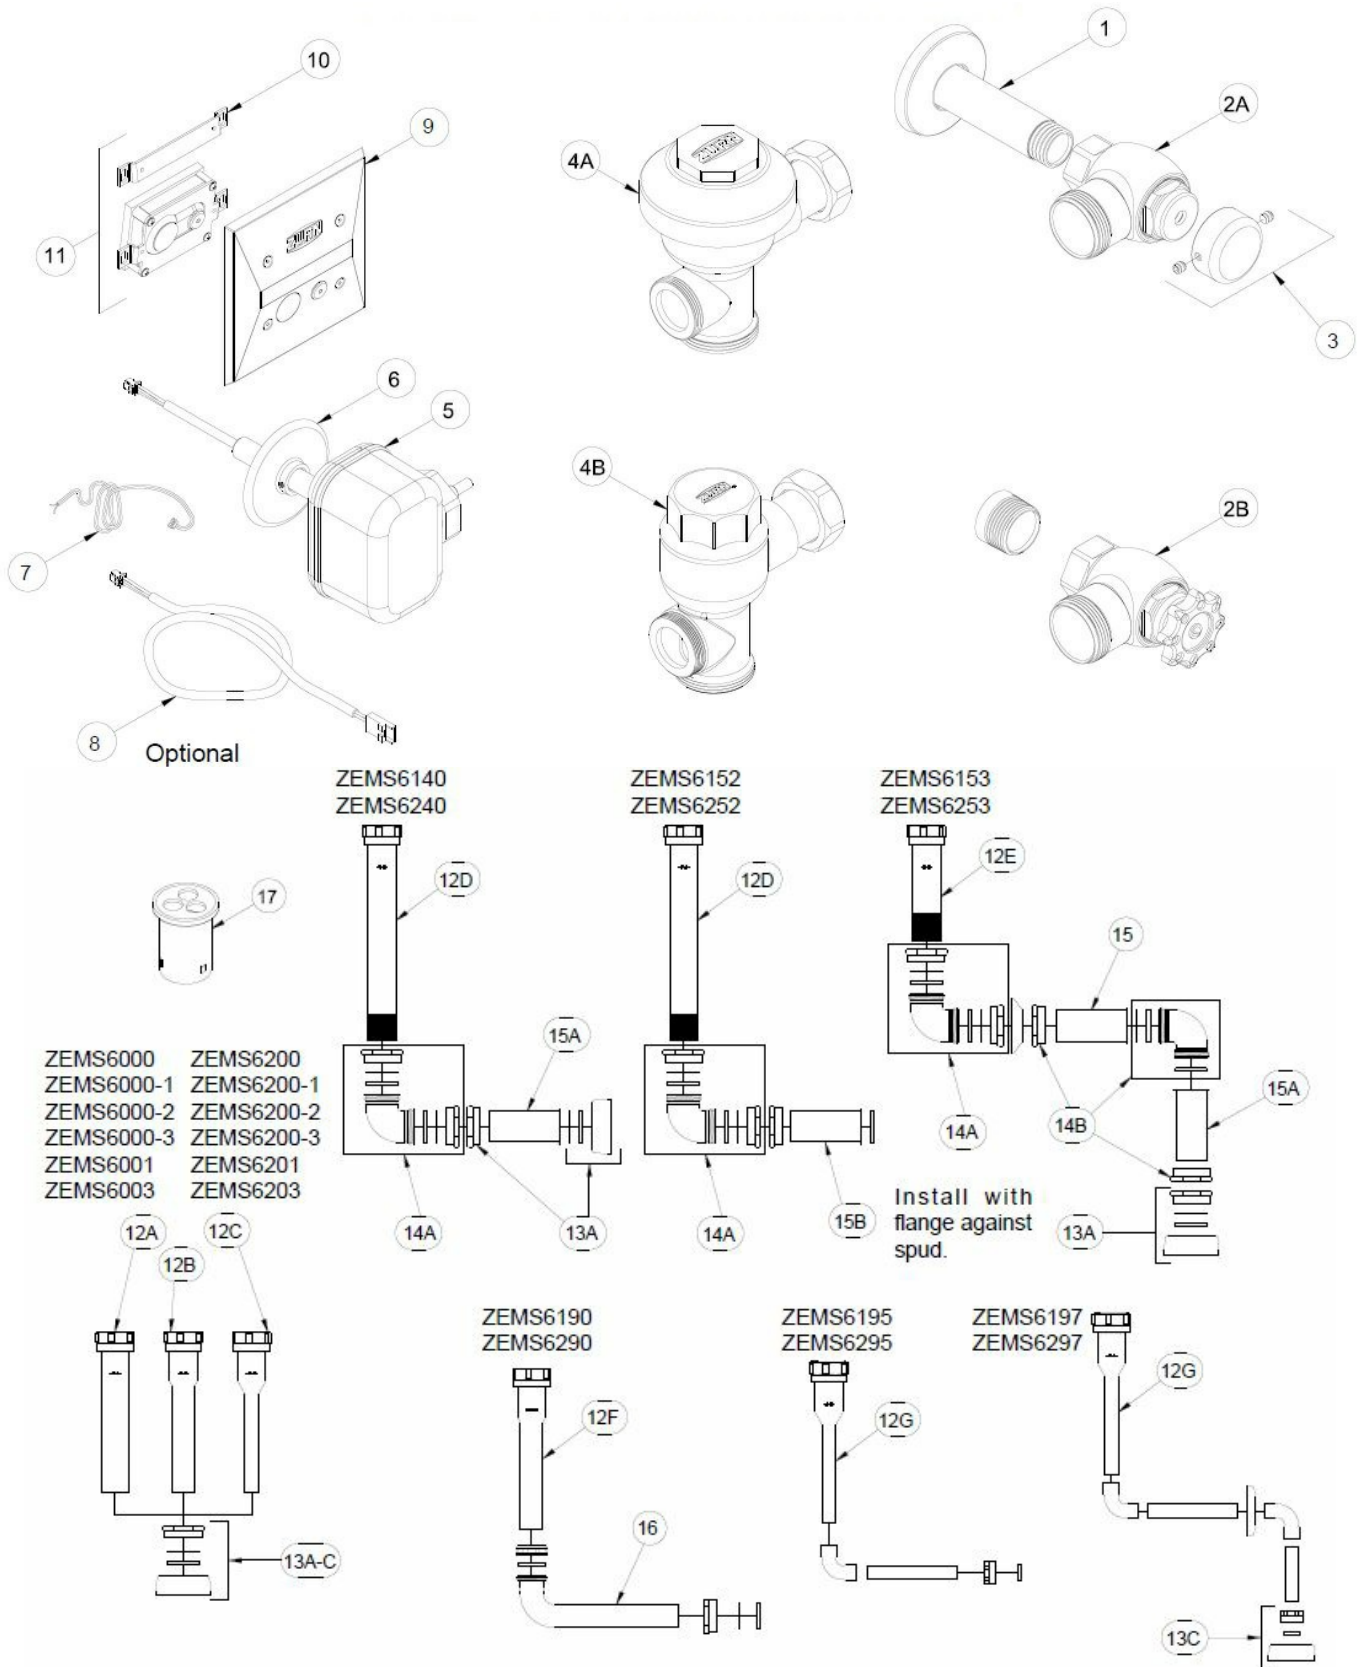

1. P6000-YBYC Closet Cast Wall Escutcheon & Solder Kit  
P6003-YBYC Urinal Cast Wall Escutcheon & Solder Kit
2. 2A. P6000-C-SD-CP Chrome Plated Closet Stop Assembly
  - P6003-C-SD-CP Chrome Plated Urinal Stop Assembly
  - P6000-C-SD-RB Rough Brass Closet Stop Assembly
  - P6003-C-SD-RB Rough Brass Urinal Stop Assembly
  - 2B. P6000-C-WH-CP Chrome Plated Closet Stop Assembly for


- Wheel Handle
  - P6003-C-WH-CP Chrome Plated Urinal Stop Assembly for
  - Wheel Handle
  - P6000-C-WH-RB Rough Brass Closet Stop Assembly for
  - Wheel Handle
  - P6003-C-WH-RB Rough Brass Urinal Stop Assembly for
  - Wheel Handle
3. P6000-VC Vandal-Resistant Control Stop Cover
  4. Varies(Z60\_\_\_,Z61\_\_\_) Diaphragm Valve
    - 4B. Varies(Z62\_\_\_) Piston Valve
  5. PEMS6000-HYM-G2 ZEMS Actuator
  6. PEMS6000-G ZEMS Escutcheon
  7. PEMS6000-CWB-G2 Sensor Power Supply Cable
  8. PEMS6000-CW-G2 Motor-Sensor Connector Extension
    - Cable, 24" (Optional)
    - (Max 2 per installation)
  9. PEMS6000-22-G2 ZEMS Sensor Plate with fasteners
  10. PEMS6000-22-KIT-G2 ZEMS Top Bracket with fasteners
  11. PEMS6000-26-G2 ZEMS Sensor with top bracket and fasteners
  12. 12A. P6000-A-AA-CP Chrome Plated 1-1/2" X 8 1/2" Vacuum
    - Breaker Assembly
    - P6000-2-A-AA-CP Chrome Plated 1-1/2" X 21" Vacuum
    - Breaker Assembly
    - P6000-3-A-AA-CP Chrome Plated 1-1/2" X 24" Vacuum
    - Breaker Assembly
    - 12B. P6001-A-AA-CP Chrome Plated 1-1/4" X 8 1/2" Vacuum
    - Breaker Assembly
    - 12C. P6003-A-AA-CP Chrome Plated 3/4" X 8 1/2" Vacuum
    - Breaker Assembly
    - 12D. P6000-1-A-AA-RB Rough Brass 1-1/2" X 12 1/2" Vacuum
    - Breaker Assembly
    - 12E. P6000-A-AA-RB Rough Brass 1-1/2" X 5" Vacuum
    - Breaker Assembly
    - 12F. P6001-10-A-AA-RB Rough Brass 1-1/4" X 10" Vacuum
    - Breaker Assembly
    - 12G. P6003-10-A-AA-RB Rough Brass 3/4" X 10" Vacuum
    - Breaker Assembly
  13. P6000-H 1 1/2" Spud Coupling Assembly
    - 13B. P6001-H 1 1/4" Spud Coupling Assembly
    - 13C. P6003-H 3/4" Spud Coupling Assembly
  14. P6000-QE3-RB Rough Brass 1 1/2" Slip Elbow Assembly
    - 14B. P6000-QE3-CP Chrome Plated 1 1/2" Slip Elbow Assembly
  15. P6000-QT1-xx Chrome Plated Slotless Tube

- 15B. P6000-QT3-xx Rough Brass Slotless Tube

16. Varies Rough Brass Slip Elbow

17. P6000-B-HP Vacuum Breaker

### **Z6000 Series**

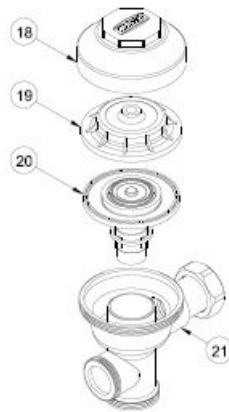

18. P6000-LL-CP Chrome Plated Valve Body Outside Cover

- P6000-LL-RB Rough Brass Valve Body Outside Cover

19. P6000-L Valve Body Inside Cover

20. P6000-ECA-WS Closet Repair Kit (3.5 gpf)

- P6000-ECA-WS1 Low Consumption Closet Kit (1.6 gpf)
- P6000-ECA-HET High Efficiency Closet Kit (1.28 gpf)
- P6000-EUA-WS Urinal Repair Kit (1.5 gpf)
- P6000-EUA-WS1 Low Consumption Urinal Kit (1.0 gpf)
- P6000-EUA-EWS High Efficiency Urinal Kit (0.5 gpf)
- P6000-EUA-ULF Pint Urinal Kit (0.125 gpf)

21. P6000-19\_\_ Valve Body

### **Piston Valves (Z6200 Series)**

22. P6200-LL-CP Valve Body Cover

- P6200-LL-ULF-CP .125 gpf Valve Body Cover

23. P6200-LL-CG Valve Body Cover Gasket

24. P6200-EC-WS1 Low Consumption Closet Kit (1.6 gpf)


- P6200-EC-HET High Efficiency Closet Kit (1.28 gpf)
- P6200-EU-WS1 Low Consumption Urinal Kit (1.0 gpf)
- P6203-EU-EWS High Efficiency Urinal Kit (0.5 gpf)
- P6203-EU-ULF Ultra Low Flush Kit (.125 gpf)

25. P6000-S-30 Main Seat


- P6200-MS-ULF .125 gpf Main Seat
- Varies Valve Body

26. PTR6203-FA-LF Urinal 0.125/0.250 gpf Tailpiece filter

### **Z6200 Series**

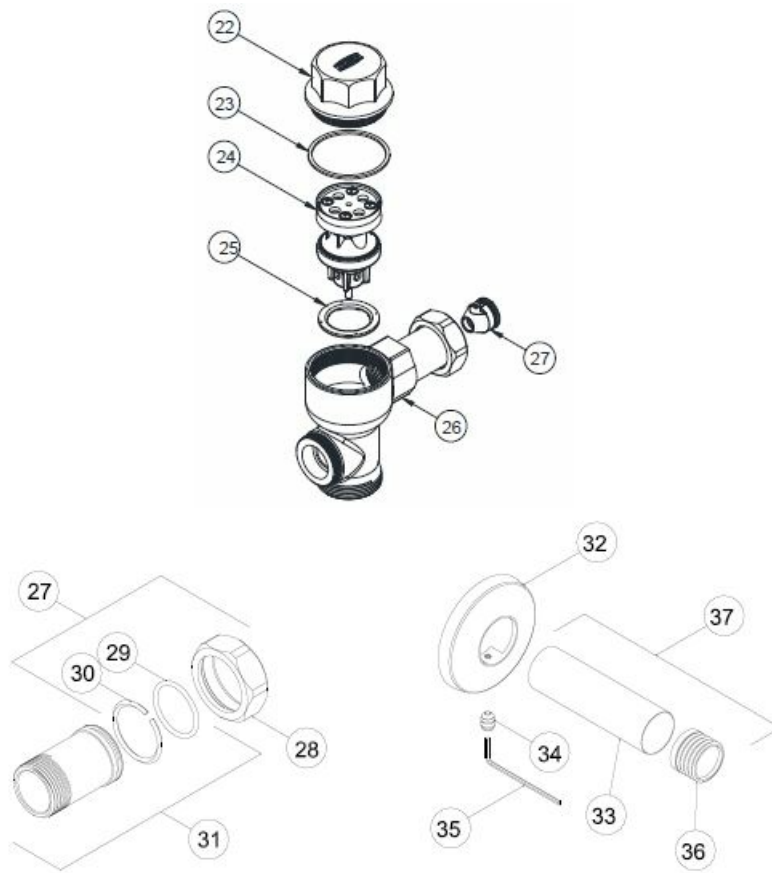

- 27. P6000-K Tailpiece Coupling Assembly
- 28. P6000-C32-CP Chrome Plated Locking Nut
  - P6000-C32-RB Rough Brass Locking Nut
- 29. P6000-C31 Tailpiece O-Ring
- 30. P6000-C30 Snap Ring
- 31. P6000-J\_\_\_ Adjustable Tailpiece Assembly
- 32. P6000-YC 1" Cast Wall Escutcheon
  - P6003-YC 3/4" Cast Wall Escutcheon
- 33. P6000-YB-CVR 1"Supply Cover Tube
  - P6003-YB-CVR 3/4" Supply Cover Tube
- 34. P6000-YC-SS Setscrew for Cast Wall Escutcheon
- 35. P6000-VC-W-VP 5/64 Allen Wrench
- 36. P6000-YBA 1" Sweat Solder Adapter
  - P6003-YBA 3/4" Sweat Solder Adapter
- 37. P6000-YB 1" Sweat Solder Kit
  - P6003-YB 3/4" Sweat Solder Kit

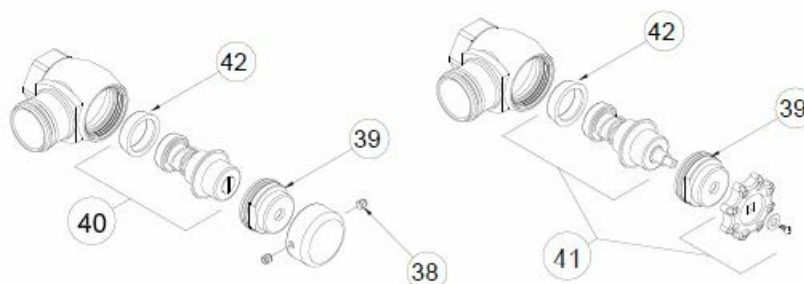

- 38. P6000-VC-SS Set Screw for Control Stop Cover
- 39. P6000-C34-CP Chrome Plated Stop Cap Bonnet

- P6000-C34-RB Rough Brass Stop Cap Bonnet


40. P6000-D-SD Stop Cap Internals

41. P6000-D-WH Stop Cap Internals with Wheel Handle

42. P6000-D42 Stop Seat

- Patent [zurn.com/patents](http://zurn.com/patents)
- US 1.855.ONE.ZURN
- CANADA 1.877.892.5216
- [ZURN.COM](http://ZURN.COM).

## Documents / Resources

 <p><b>ZURN</b> AquaSense® ZEMS 6000AV Sensor Operated Flushometer Automatic Systems Sensor Operated Flushometer, Sensor Operated Flushometer, Operated Flushometer, Flushometer</p>	<p><a href="#">ZURN ZEMS6000AV Automatic Systems Sensor Operated Flushometer</a> [pdf] Instruction Manual</p> <p>ZEMS6000AV Automatic Systems Sensor Operated Flushometer, ZEMS6000AV, Automatic Systems Sensor Operated Flushometer, Sensor Operated Flushometer, Operated Flushometer, Flushometer</p>
---	--

## References

- [P65Warnings.ca.gov](http://P65Warnings.ca.gov)
- [ZURN Engineered Water Solutions | Zurn](#)
- [ZURN Patents | Zurn Industries LLC's products](#)

[Manuals+.](#)