

AKAI MPC KEY 37 Standalone MPC Production Keyboard



AKAI MPC KEY 37 Standalone MPC Production Keyboard User Guide

[Home](#) » [AKAI](#) » AKAI MPC KEY 37 Standalone MPC Production Keyboard User Guide 

Contents

- [1 AKAI MPC KEY 37 Standalone MPC Production Keyboard](#)
- [2 Product Specifications](#)
- [3 GETTING STARTED](#)
- [4 TOP PANEL](#)
- [5 Wi-Fi y Bluetooth](#)
- [6 REAR PANEL](#)
- [7 Frequently Asked Questions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

AKAI®

AKAI MPC KEY 37 Standalone MPC Production Keyboard



Product Specifications

- **Model:** XYZ-123
- **Dimensions:** 10 x 5 x 3 inches
- **Weight:** 2 lbs
- **Material:** Plastic
- **Colour:** Black


GETTING STARTED

Package Contents: MPC Key 37, Power Adapter, USB Cable, Software Download Card, Quickstart Guide, Safety & Warranty Manual

- **AKAi PRO.COM/REGiSTER**
- REGISTER YOUR PRODUCT
- DOWNLOAD THE USER GUIDE
- DOWNLOAD INCLUDED SOFTWARE
- WATCH TUTORIAL VIDEOS



TOP PANEL

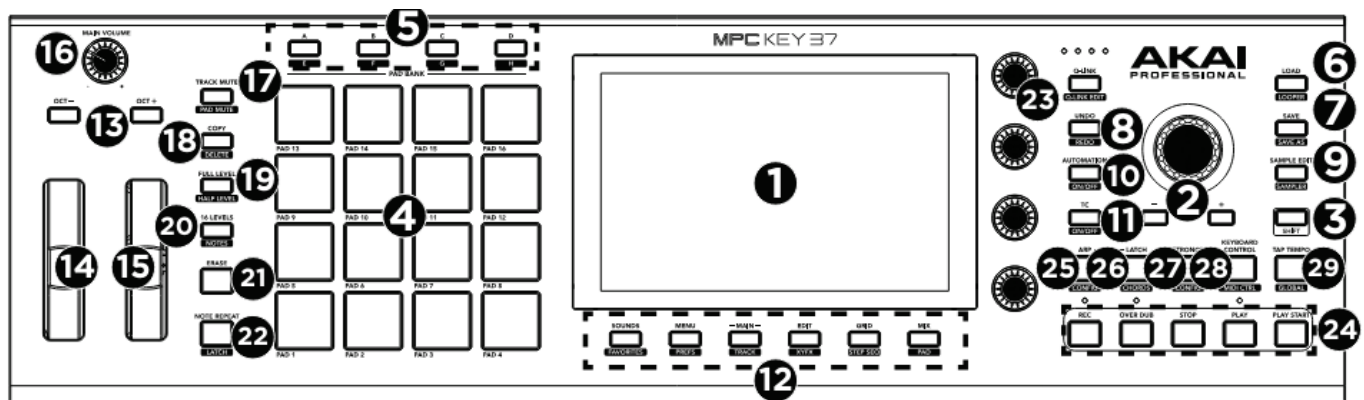


1. **Display:** View the full-color multi-touch display for information on the current operation. Tap the upper-left part of the display to open the mode menu or return to the previous view. Spread two fingers to zoom in (into a section of a waveform, for example). Pinch two fingers to zoom out.
2. **Data Entry Controls:** Use these to scroll through menu options or adjust parameter values.
3. **Shift:** Press and hold to access some buttons' secondary functions.
4. **Pads:** Press these velocity and pressure-sensitive pads to trigger samples.
5. **Bank:** Press to access Pad Banks A-D. Double press or SHIFT press a button to access Pad Banks E-H.
6. **Load/ Looper:** Press to open the Browser to load programs, samples, sequences, and more. SHIFT+press to open the Looper.
7. **Save/ Save As:** Press to open the Save menu to save projects, programs, sequences, and more. SHIFT+press to open the "Save As" option.
8. **Undo/ Redo:** Press to undo or SHIFT +press to redo the last action.
9. **Sample Edit/ Sampler:** Press this button to view Sample Edit Mode. SHIFT +press to view the Sampler.
10. **Automation/ On/Off:** Press this button to toggle the Global Automation state between Read and Write. SHIFT+press this button to disable or enable Global Automation.
11. **TC/ Actlvado/Desactivado:** Pulse este bot6n para abrir la ventana de correcci6n de temporizaci6n. SHIFT +pulse para activar o desactivar la correcci6n de temporizaci6n.
12. **Controles de plsta y vista:** Pulse estos botones para abrir el menu de modos o acceder a estos modos: Sonidos / Favoritos, Menu/ Preferencias, Principal / Visualizaci6n de pistas, Edici6n de programa / XYFX, Cuadr6cula / Secuenciador de pasos, Mezclador de canal / pad.
13. **Oct-/ Oct+:** Pulse estos botones para transponer el teclado una octava hacia arriba o hacia abajo par vez. SHIFT +pulse para transponer el teclado una octava hacia arriba o hacia abajo par vez. Pulse ambos botones de octava al mismo tiempo para restablecer la configuraci6n de octava a las valores predeterminados.
14. **Rueda de Inflexi6n de tono:** La rueda de inflexi6n de pitch se utiliza principalmente para seleccionar las notas reproducidas en el teclado hacia arriba o abajo.
15. **Rueda de modulaci6n:** La rueda de modulaci6n suele usarse para aiiadir variaciones al sonido que esta tocando.
16. **Volumen principal:** Gire esta perilla para ajustar el volumen de la salida principal y la salida para auriculares.
17. **Silenciamiento de pista / Silenciamiento de pad:** Pulse este bot6n para acceder al modo de silenciamiento de pista. SHIFT +pulse para acceder al modo de silenciamiento de pad.
18. **Copiar / Borrar:** Pulse este bot6n para copiar un pad a otro en programas de clip y de batters. SHIFT +pulse para eliminar.
19. **Nivel miiximo/Nivel medio:** Pulse este bot6n para activar/desactivar el modo de nivel maxima para las almohadillas. SHIFT +pulse para activar/desactivar el modo de nivel media para las almohadillas.

20. **16 niveles / Notas:** Pulse este botón para activar/desactivar la función 16 Level. SHIFT+ pulse para activar o desactivar el modo de notas para las pads.
21. **Borrar:** Mientras se reproduce una secuencia, mantenga pulsado este botón y pulse un pad o tecla para suprimir el evento de nota de ese pad o tecla en la posición de reproducción actual.
22. **Note Repeat/ Latch:** Mantenga pulsado este botón y pulse un pad para disparar la muestra de ese pad repetidamente. SHIFT +pulse para “trabar” la característica de repetición de nota.
23. **Perillas Q-Link:** Pulse el botón Q-Link para cambiar la columna de parámetros que controlan en ese momento. Utilice estas perillas sensibles al tacto para ajustar diversos parámetros y valores.
24. **Controles de transporte:** Utilice estos controles para iniciar/detener la reproducción y grabación.
25. **Arpegiador / Config:** Pulse este botón para activar o desactivar el arpegiador interno. SHIFT+pulse o mantenga pulsado este botón para configurar los ajustes del arpegiador.
26. **Latch/ Acordes:** Pulse este botón para activar o desactivar el pestillo del arpegiador. SHIFT +pulse para activar o desactivar modo de acordes.
27. **Metrónomo / Config:** Pulse este botón para habilitar o deshabilitar el metrónomo. SHIFT +pulse o mantenga pulsado este botón para abrir la ventana de configuración del metrónomo.
28. **Control del teclado / Control MIDI:** Pulse este botón para visualizar el menú de control del teclado. SHIFT+pulse para entrar al modo de control MIDI.
29. **Tocar tempo/ Global:** Púlselo repetidamente según el tempo deseado para introducir un nuevo tempo (en BPM). SHIFT+pulse para establecer si la secuencia seguirá su propio tiempo o un tempo global.

Wi-Fi y Bluetooth

- Pulse SHIFT+MENU para abrir las preferencias y seleccionar Wi-Fi o Bluetooth.
- Para activar o desactivar la conectividad Bluetooth o inalámbrica, toque On/Off.
- Para seleccionar una red inalámbrica o dispositivo Bluetooth, toque la.
- Para conectarse con una red inalámbrica seleccionada, toque Connect.
- Para ‘Pair’ o conectar un dispositivo Bluetooth (en la sección de dispositivos seleccionados, toque Pair o Connect).

REAR PANEL

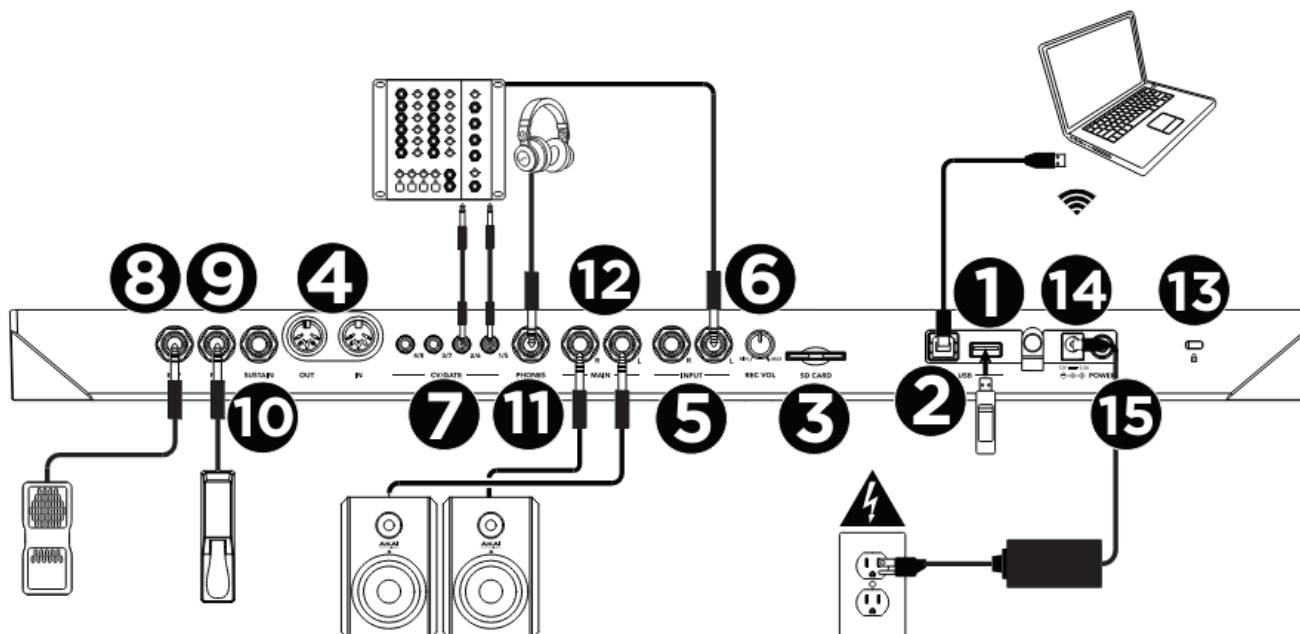

1. **USB-A Port:** Connect a class-compliant MIDI or audio device, or a USB flash drive here to access files.
2. **USB-B Port:** Connect to a computer's USB port to send/receive MIDI data.
3. **SD card Slot:** Insert a SD, SDHC, or SDXC card to access files.
4. **MIDI Input/Output:** Connect to external MIDI devices (synthesizer, drum machine, etc.).
5. **Audio Inputs (1/4" / 6.35 mm, TRS):** Connect these inputs to an audio source (mixer, synthesizer, drum machine, etc.).
6. **Rec Volume:** Adjust the gain of the incoming signal from the audio inputs.
7. **CV/Gate (1/8" / 3.5 mm, TRS):** Send control voltage (CV) and/or gate signals from these outputs to external sequencers. The 4 CV/gate outputs can be expanded to 8 using TRS to TS adapters (not included).
8. **EXP (1/4n / 6.35 mm, TRS):** Connect an optional expression pedal to this input for adding expressive changes during performances.
9. **FS2 (1/4n / 6.35 mm, TRS):** Connect an optional footswitch or other foot pedal to this input.
10. **Sustain (1/4" / 6.35 mm, TRS):** This input accepts an optional momentary-contact foot pedal.
11. **Phones Output: (1/4" / 6.35 mm, TRS):** Connect headphones here.
12. **Main Output (1/4" / 6.35 mm, TRS):** Connect these outputs to your monitors, mixer, etc.
13. **Kensington® Lock Slot:** Use this slot to secure MPC Key 37 to a table or other surface.
14. **Power:** Connect the included power adapter here. The power adapter has two pieces to it. Ensure both are removed from the box contents.
15. **Power Button:** Press to turn MPC Key 37's power on/off.

DOWNLOAD THE FULL USER GUIDE TO LEARN MORE AKAI [PRO.COM](https://www.pro.com)

AKAI [PRO.COM/SUPPORT](https://www.pro.com/support)

- For articles, videos, and web support.
- Para artículos, videos y soporte web.
- Pour des articles, des vidéos et de l'assistance technique par web.
- Per articoli, video, e supporto di web.
- Far Artikel, Videos und Web-Support



Frequently Asked Questions

- **Q: How do I replace the batteries?**
- A: To replace the batteries, follow these steps:
 - Open the battery compartment located on the back of the product.
 - Remove the old batteries and insert new ones according to the polarity markings.
 - Close the battery compartment securely.
- **Q: What is the warranty period for this product?**
- A: The product comes with a 1-year warranty from the date of purchase. Please refer to the warranty card for more details.

Documents / Resources

	AKAI MPC KEY 37 Standalone MPC Production Keyboard [pdf] User Guide Y4O-ACVR, Y4OACVR, MPC KEY 37 Standalone MPC Production Keyboard, MPC KEY 37, Standalone MPC Production Keyboard, MPC Production Keyboard, Production Keyboard, Keyboard
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.