Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Warner Home Video B00000K19E

The Matrix DVD Instruction Manual

Model: B00000K19E

Introduction

This manual provides essential information for the proper use and enjoyment of your**The Matrix DVD**. Released by **Warner Home Video**, this DVD allows you to experience the groundbreaking 1999 science fiction action film. Please read through this guide to ensure optimal playback and access to all features.

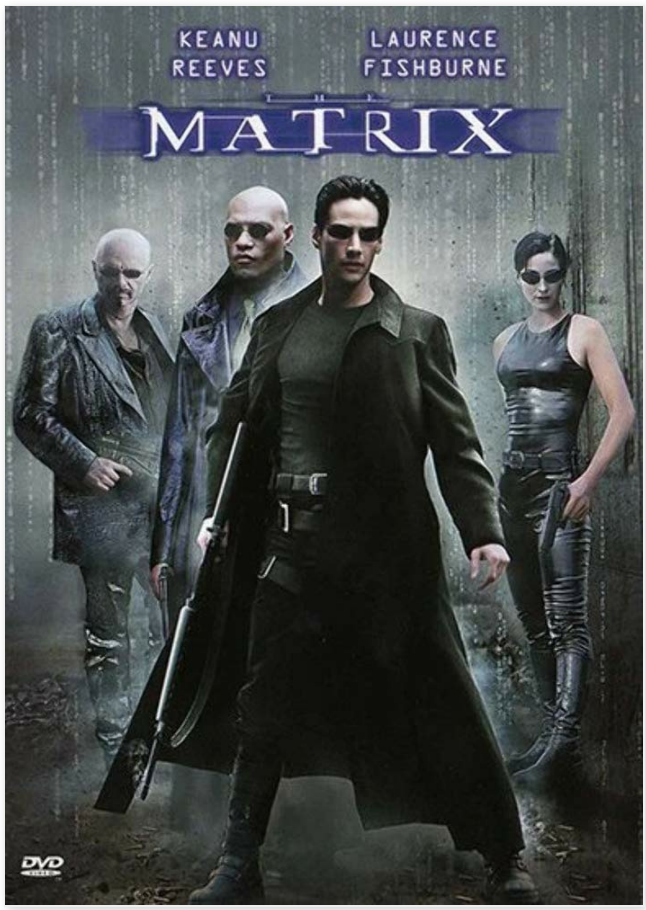


Image: Front cover of The Matrix DVD. It displays the main characters Neo, Morpheus, and Trinity, set against a backdrop of green digital code, characteristic of the film's visual style. The title "MATRIX" is prominently displayed at the top.

Setup

To begin enjoying your **The Matrix DVD**, follow these simple steps:

1. **Prepare your DVD Player:** Ensure your DVD player is connected to your television or display device and is powered on.
2. **Insert the DVD:** Gently open the DVD player tray or slot. Hold the DVD by its edges to avoid touching the playback surface. Carefully place the disc into the tray with the label side facing up.
3. **Close the Tray:** Close the DVD player tray. The player will typically begin reading the disc automatically.
4. **Select Input:** If your TV does not automatically switch, select the correct input source (e.g., HDMI 1, AV) on your television to display the DVD player's output.

Operating Instructions

Navigate the DVD and access its content using your DVD player's remote control.

- **Main Menu:** Once the DVD loads, the main menu will appear. From here, you can select options such as "Play Movie," "Scene Selection," "Special Features," and "Setup."
- **Play Movie:** Select "Play Movie" to start the film from the beginning.
- **Scene Selection:** Use this option to jump directly to specific chapters or scenes within the movie.
- **Audio and Subtitles:** In the "Setup" or "Language" menu, you can select your preferred audio track (English Dolby Digital 5.1) and subtitle options (English).
- **Remote Control Functions:**
  - **PLAY/PAUSE:** Starts or pauses playback.
  - **STOP:** Stops playback.
  - **FAST FORWARD/REWIND:** Skips through the movie quickly.
  - **SKIP/NEXT:** Jumps to the next or previous chapter.
  - **MENU/TOP MENU:** Returns to the main DVD menu.

Special Features

The Matrix DVD includes a variety of special features that enhance the viewing experience and provide deeper insight into the film's production. Access these from the main menu.

- **Behind-the-Scenes Documentary:** Explore the making of *The Matrix* with exclusive footage and interviews.
- **Audio Commentary:** Listen to insights from the cast and crew, including Carrie-Anne Moss, Editor Zach Staenberg, Special Effects Supervisor John Gaeta, and Composer Don Davis.
- **Mini-Documentaries:** Discover more about the film's visual effects and concepts through "Follow the White Rabbit" and "Take the Red Pills" mini-documentaries.
- **PC DVD-ROM Enhancements:** For users with a PC DVD-ROM drive, additional features may be accessible, including web links and interactive content.

Specifications

Feature	Detail
Title	The Matrix
Format	DVD (AC-3, Anamorphic, Dolby, Color, Widescreen, Closed-captioned, Special Edition, NTSC)
Aspect Ratio	2.35:1
Run Time	2 hours and 16 minutes

Feature	Detail
Language	English (Dolby Digital 5.1)
Subtitles	English
Number of Discs	1
Release Date	September 21, 1999
Studio	Warner Home Video
MPAA Rating	R (Restricted)
Product Dimensions	0.51 x 5.62 x 7.54 inches; 2.72 ounces

Troubleshooting

If you encounter any issues while playing your DVD, consider the following common solutions:

- **Disc Not Playing/Skipping:**
  - Check the disc for visible scratches, smudges, or dust. Gently clean the disc with a soft, lint-free cloth, wiping from the center outwards.
  - Ensure the disc is inserted correctly into the DVD player.
  - Try playing another DVD to confirm the issue is with the disc and not the player.
- **No Audio/Video:**
  - Verify that all cables (HDMI, AV, etc.) connecting the DVD player to the TV are securely connected.
  - Ensure your TV is set to the correct input source for the DVD player.
  - Check the volume levels on both your TV and audio receiver (if applicable).
- **Menu Navigation Issues:**
  - Ensure your remote control batteries are not depleted.
  - Point the remote directly at the DVD player's sensor.

Care and Maintenance

Proper care will extend the life of your DVD and ensure continued enjoyment:

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth (such as a microfiber cloth) from the center to the outer edge. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the DVD in its original case when not in use to protect it from dust, scratches, and direct sunlight. Keep it in a cool, dry place.
- **Avoid Extreme Conditions:** Do not expose the DVD to extreme temperatures, high humidity, or direct sunlight for prolonged periods, as this can warp the disc or damage the data layer.

Warranty and Support

For information regarding product warranty or technical support for your**The Matrix DVD**, please refer to the contact information provided on the DVD packaging or visit the official **Warner Home Video** website. General inquiries about DVD playback issues can often be resolved by consulting your DVD player's instruction manual.

© 1999 Warner Home Video. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00000K19E

More documents and user manuals: **https://manuals.plus/**