**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Canon EOS Rebel 2000

# Canon EOS Rebel 2000 35mm Film SLR Camera Instruction Manual

Model: EOS Rebel 2000

### Introduction

The Canon EOS Rebel 2000 is a versatile 35mm film SLR camera designed for both amateur and advanced photographers. It combines ease of use with advanced features, making it suitable for various photographic situations. This manual provides essential information for setting up, operating, and maintaining your camera.



Image: Front view of the Canon EOS Rebel 2000 camera with the 28-80mm lens attached.

Key features include a 7-point autofocus system, 35-zone AE metering, and a built-in retractable flash. The camera supports a wide range of shooting modes, from full auto to manual, allowing for creative control over your photography.

## Setup

### 1. Battery Installation

The EOS Rebel 2000 requires two CR2 lithium batteries. To install them, open the battery compartment located at the bottom of the camera. Insert the batteries according to the polarity indicators inside the compartment, then close the

cover securely.




Image: The bottom of the camera with the battery compartment open, ready for battery insertion.

Video: Demonstrates how to change the batteries in the Canon EOS Rebel 2000 camera.

## 2. Lens Attachment

To attach the lens, align the red dot on the lens barrel with the red dot on the camera's lens mount. Rotate the lens clockwise until it clicks into place. To detach, press the lens release button on the camera body and rotate the lens counter-clockwise.




Image: Front view of the camera with the 28-80mm lens securely attached.

Video: Guide on how to properly change lenses on the Canon EOS Rebel 2000.

### 3. Film Loading

Open the camera back cover by sliding the latch downwards. Place a 35mm film cartridge into the film chamber on the left side. Pull the film leader across to the red mark on the take-up spool. Ensure the film perforations engage with the sprocket teeth. Close the back cover firmly. The camera will automatically advance the film to the first frame.




Image: The camera's film compartment with the back cover open, showing where to insert the film cartridge and leader.

Video: Step-by-step instructions for loading film into the Canon EOS Rebel 2000.

## Operating the Camera

### 1. Power On/Off

To turn the camera on, rotate the main switch to the 'ON' position. To turn it off, rotate the switch to 'OFF'.

### 2. Shooting Modes

The mode dial on the top of the camera allows you to select various shooting modes:

- **Full Auto:** The camera automatically sets all exposure parameters.
- **Program (P):** Camera sets aperture and shutter speed, but allows for program shift.
- **Shutter-Priority (Tv):** You set the shutter speed, camera sets aperture.
- **Aperture-Priority (Av):** You set the aperture, camera sets shutter speed.
- **Manual (M):** You set both aperture and shutter speed.
- **Depth-of-Field AE (A-DEP):** Automatically sets aperture for maximum depth of field.
- **Scene Modes:** Includes Portrait, Landscape, Macro (Close-up), Sports, and Night Portrait for specific shooting conditions.

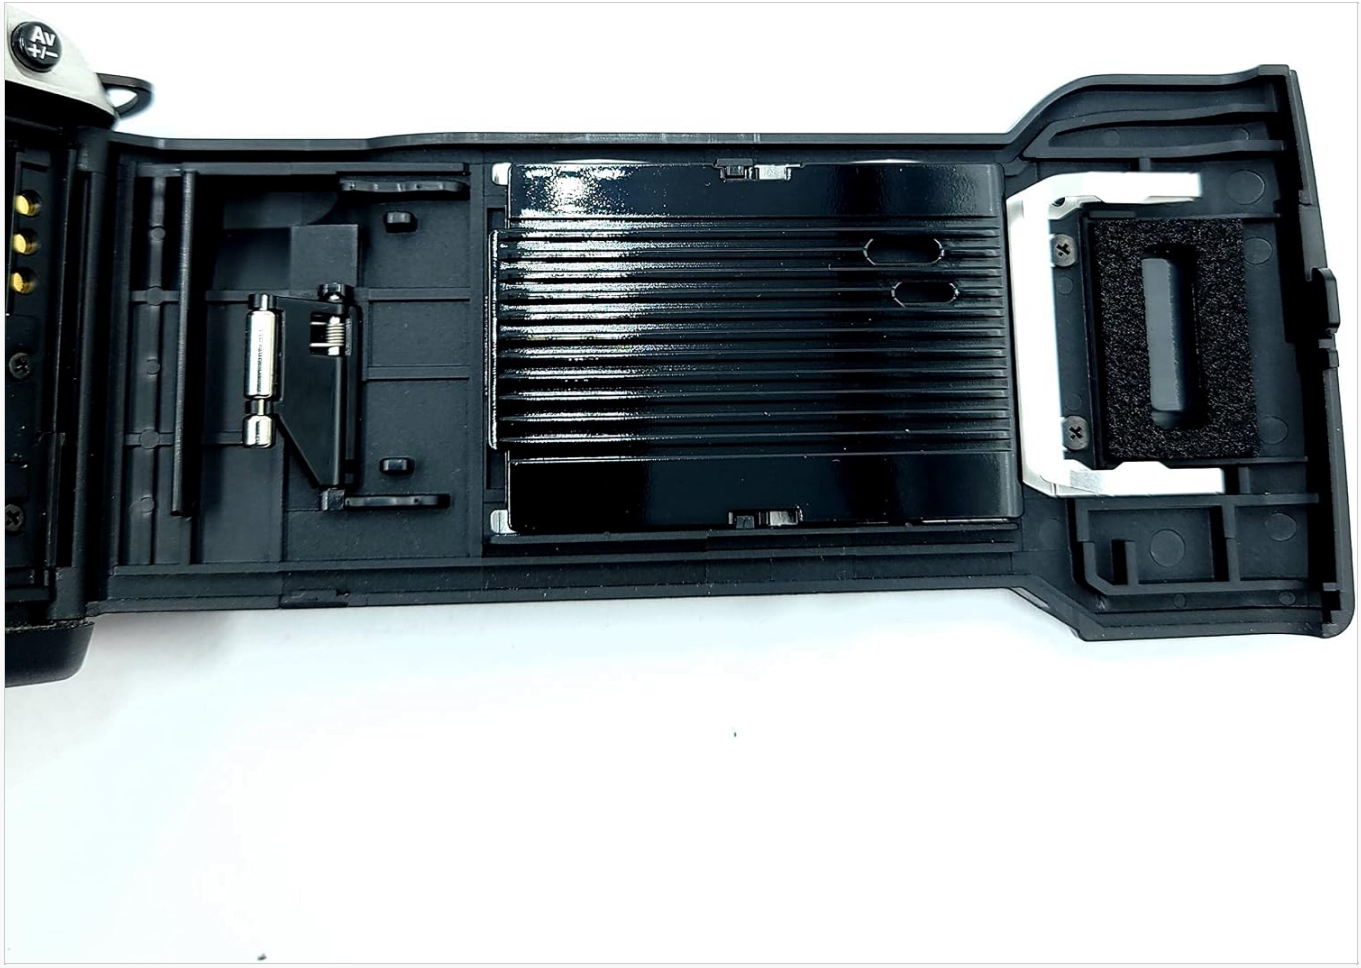


Image: Top view of the camera, highlighting the mode dial and LCD display for settings.

### 3. Autofocus System

The camera features a 7-point autofocus system. In most automatic modes, the camera selects the focus point automatically. In creative modes, you can manually select a focus point using the controls on the camera back. Half-press the shutter button to activate autofocus and exposure metering.

### 4. Built-in Flash

The built-in flash automatically pops up and fires in low-light conditions when in full auto mode. In other modes, you can manually raise the flash by pressing the flash button. Flash modes include automatic, red-eye reduction, and flash off.

Video: A general overview of the Canon EOS Rebel 2000, showcasing its features and operation.

## Maintenance

To ensure the longevity and optimal performance of your Canon EOS Rebel 2000, follow these maintenance guidelines:

- Keep the camera and lens clean. Use a soft, lint-free cloth to wipe dust and smudges. For lenses, use specialized lens cleaning fluid and cloths.
- Avoid exposing the camera to extreme temperatures, humidity, or direct sunlight for extended periods.
- When not in use, store the camera in a dry, cool place, preferably in a camera bag to protect it from dust and impacts.
- Remove batteries if the camera will not be used for an extended period to prevent leakage.

## Troubleshooting

If you encounter issues with your camera, refer to the following common troubleshooting tips:

- **Camera does not power on:** Check if the batteries are correctly inserted and fully charged. Replace them if necessary.
- **Film does not advance:** Ensure the film is loaded correctly and the leader is engaged with the take-up spool. Re-open and re-load if needed.
- **Autofocus not working:** Ensure the lens is set to AF (Autofocus) mode. Check for sufficient light and contrast in your subject.
- **Flash not firing:** Verify that the flash is raised and not set to 'Flash Off' mode. Check battery level.
- **Exposure issues:** If photos are consistently too dark or too bright, check your selected shooting mode and exposure compensation settings.

For more complex issues, consult a qualified camera technician.

## Specifications

| Feature | Specification |
|---|---|
| Model Name | EOS Rebel 2000 |
| Film Type | 35mm Film |
| Lens Mount | Canon EF |
| Autofocus System | 7-Point Autofocus |
| Metering System | 35-Zone Evaluative, Partial, Center-weighted |
| Shutter Speed Range | 1/2000 to 30 seconds, Bulb |
| ISO Range | Auto (25-5000), Manual (6-6400) |
| Built-in Flash | Retractable, Guide No. 12 (ISO 100, meters) |
| Power Source | Two CR2 Lithium Batteries |
| Dimensions (W x H x D) | Approx. 139 x 90 x 63 mm (body only) |
| Weight | Approx. 340g (body only) |

## Warranty and Support

This Canon EOS Rebel 2000 camera comes with a 1-year warranty on parts and 90 days on labor. Please retain your proof of purchase for warranty claims.

For further assistance or technical support, please visit the official Canon support website or contact their customer service department. You can find more information and resources on the Canon Store on Amazon.

© 2023 Canon Inc. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B00001QEMF**

More documents and user manuals: **https://manuals.plus/**