
Sony Pictures Home Entertainment 1749

Easy Rider (Special Edition) DVD Instruction Manual

Model: 1749

Product Overview

The *Easy Rider (Special Edition)* DVD, Model 1749, offers the landmark American film for home viewing. This special edition includes the full feature film and additional content, providing an immersive experience of the classic movie.

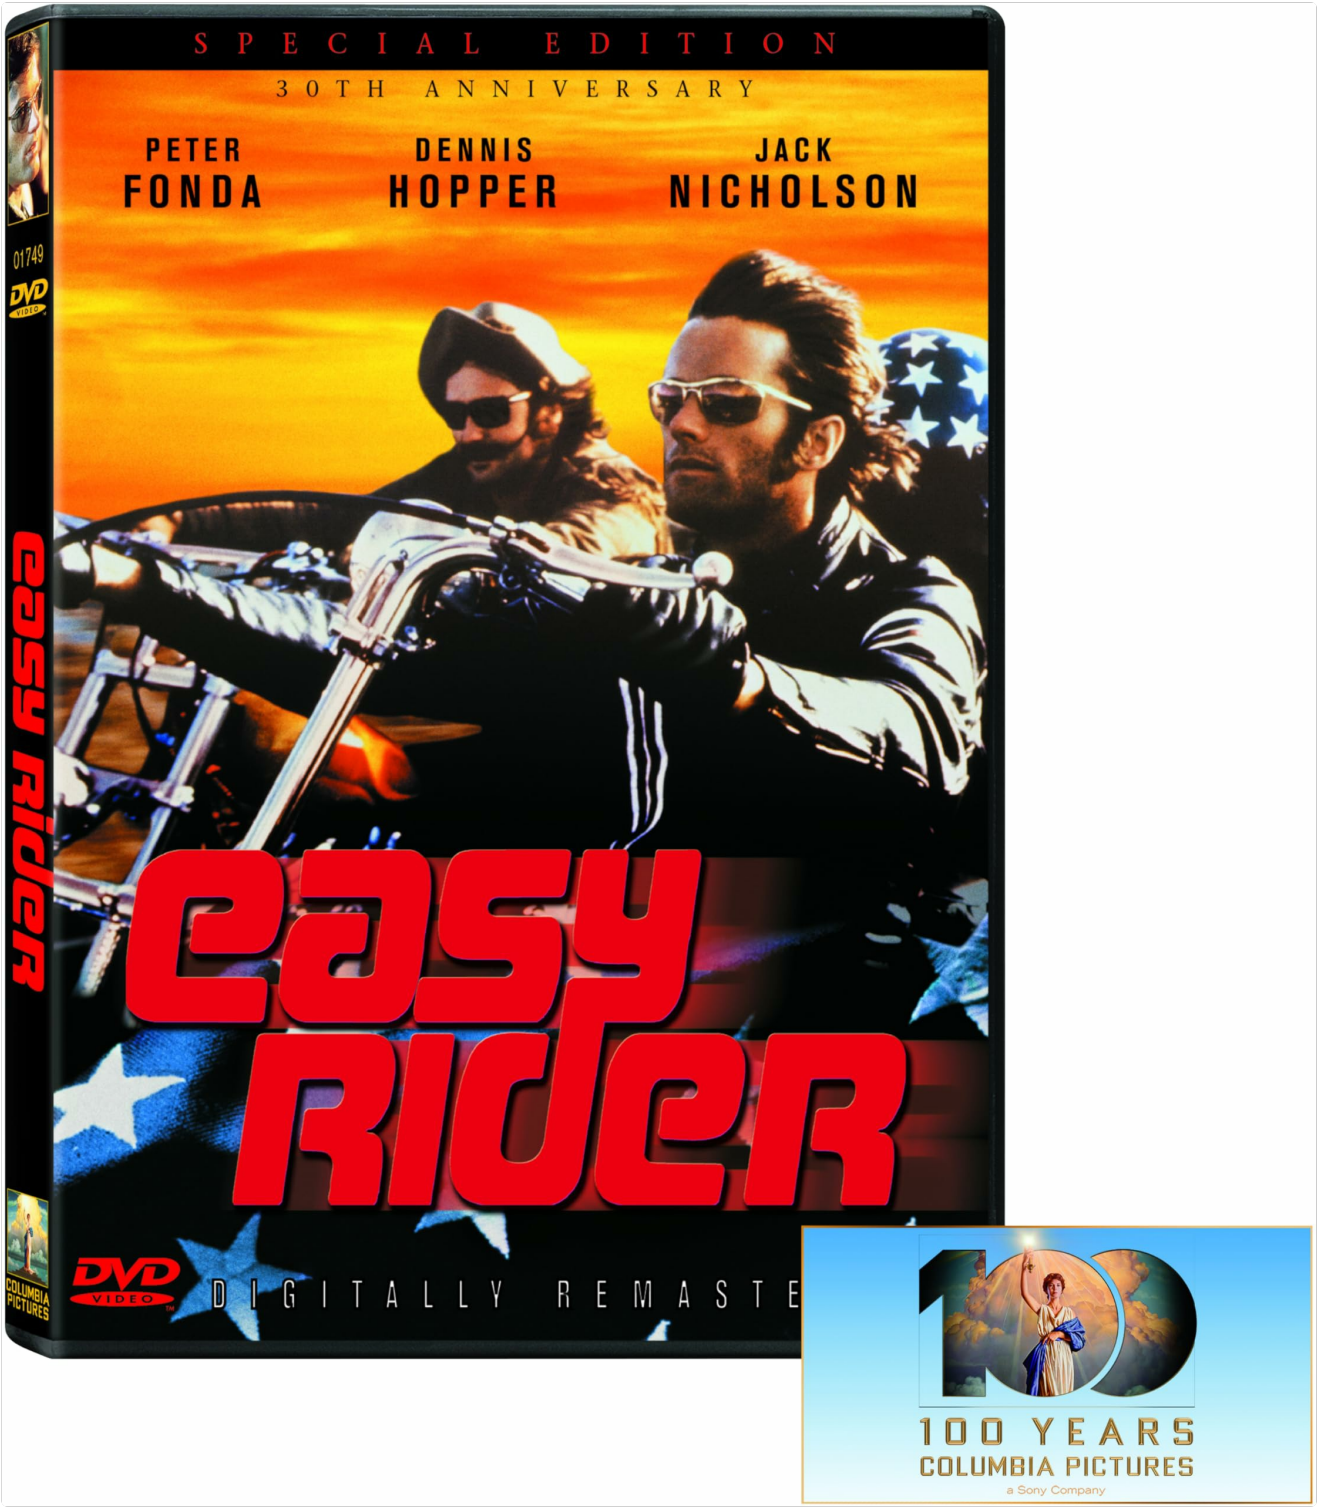

The DVD cover displays the iconic imagery of the film 'Easy Rider', featuring the main characters on their motorcycles against a scenic backdrop.

Setup

1. **Unpack the DVD:** Carefully remove the DVD disc from its packaging. Handle the disc by its edges to avoid fingerprints on the playback surface.
2. **Insert into DVD Player:** Open the disc tray of your DVD player or computer's DVD drive. Place the disc with the label side facing up onto the tray. Close the disc tray.
3. **Power On:** Ensure your DVD player and television are powered on and correctly connected. Select the appropriate input source on your television.
4. **Automatic Playback:** The DVD should begin playing automatically or display the main menu.

Operating Instructions

Basic Playback

- **Play/Pause:** Press the PLAY or PAUSE button on your remote control to start or temporarily stop playback.
- **Stop:** Press the STOP button to end playback and return to the main menu or stop the disc.
- **Fast Forward/Rewind:** Use the FF (Fast Forward) or REW (Rewind) buttons to quickly scan through the film.
- **Chapter Skip:** Use the NEXT or PREVIOUS chapter buttons to jump between different scenes or chapters.

Menu Navigation

From the main menu, you can select various options using the arrow keys and ENTER button on your remote control:

- **Play Movie:** Starts the main feature film.
- **Scene Selection:** Allows you to jump to specific scenes within the movie.
- **Special Features:** Accesses bonus content, if available on this edition.
- **Setup:** Adjusts audio and subtitle settings.

Audio Settings

To change the audio track:

1. Access the DVD's main menu or the 'Audio' option within the 'Setup' menu.
2. Select from available audio tracks:
    - English (Dolby Digital 2.0 Surround)
    - English (Dolby Digital 5.1)
    - Unqualified

Subtitle Selection

To enable or change subtitles:

1. Access the DVD's main menu or the 'Subtitles' option within the 'Setup' menu.
2. Select your preferred language from the following options: English, French, Korean, Mandarin Chinese, Portuguese, Spanish, Thai.

Official Video Clip

Your browser does not support the video tag.

This video clip provides a brief excerpt from the film 'Easy Rider', showcasing a scene with the main characters.

Care and Maintenance

- **Cleaning the Disc:** To clean the DVD, gently wipe the playback surface with a soft, lint-free cloth from the center outwards. Do not use abrasive cleaners or solvents.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. This prevents scratches and warping.
- **Handling:** Always hold the disc by its edges or by placing a finger through the center hole to avoid touching the data surface.

Troubleshooting

Problem	Solution
Disc does not play or skips	Check the disc for scratches or smudges and clean if necessary. Ensure the disc is inserted correctly. Try playing the disc in another DVD player to rule out player issues.
No audio during playback	Verify that your TV and DVD player volume are not muted and are set to an audible level. Check audio cable connections. Select the correct audio track from the DVD menu.
Subtitles are not displayed	Ensure subtitles are enabled and the desired language is selected from the DVD's subtitle menu.
Picture quality is poor	Check video cable connections between the DVD player and TV. Ensure your TV is set to the correct input source. Clean the disc if smudges are present.

Specifications

Feature	Detail
Brand	Sony Pictures Home Entertainment
Model Number	1749
ASIN	B000022TSY
Media Format	DVD
Number of Discs	1
Run Time	1 hour and 35 minutes
Aspect Ratio	1.85:1
MPAA Rating	R (Restricted)
Languages	English (Dolby Digital 2.0 Surround), English (Dolby Digital 5.1), French (Dubbed)
Subtitles	English, French, Korean, Mandarin Chinese, Portuguese, Spanish, Thai
Release Date (DVD)	December 7, 1999
Initial Film Release Date	1969-07-14
Product Dimensions	0.6 x 5.3 x 7.5 inches
Item Weight	2.4 ounces

Warranty and Support

For specific warranty information, please refer to the packaging of your*Easy Rider (Special Edition)* DVD or contact Sony Pictures Home Entertainment directly. General product support and return policies are typically handled by the retailer from which the product was purchased.

For further assistance or to view the product page, please visit theAmazon product listing.

© 2026 Sony Pictures Home Entertainment. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question