Warner Home Video B00008WJBF

Fame DVD Instruction Manual

Comprehensive guide for enjoying your "Fame" DVD.

1. Overview

This manual provides instructions for the proper use and care of your "Fame" DVD. "Fame" is a classic musical drama film that explores the lives of students at the High School of Performing Arts in New York City. It showcases their struggles, triumphs, and the sacrifices they make in pursuit of their dreams.
The DVD features the original 1980 film directed by Alan Parker and Mark Schneider, starring Eddie Barth, Irene Cara, Lee Curreri, Laura Dean, and Antonia Franceschi.

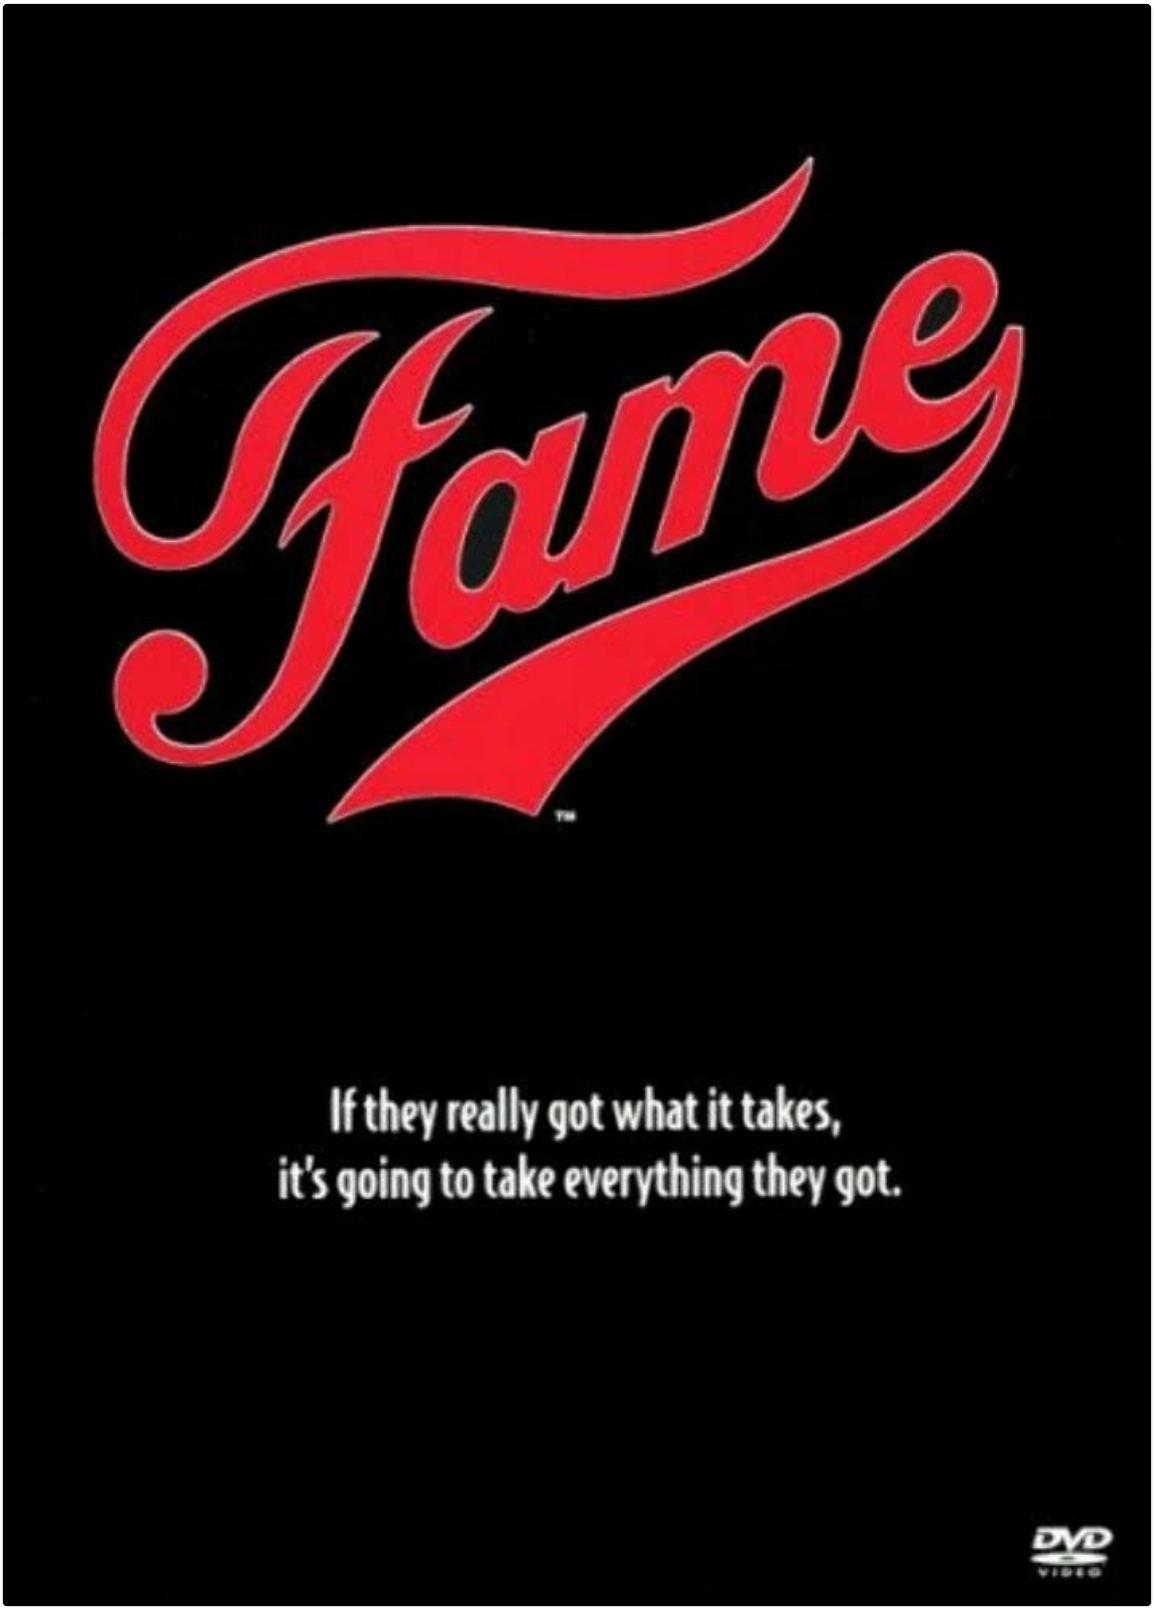


Image 1.1: Front cover of the "Fame" DVD. The cover displays the movie title "Fame" in a prominent red, stylized script against a black background. Below the title, in white text, is the tagline: "If they really got what it takes, it's going to take everything they got." A small "DVD VIDEO" logo is visible in the bottom right corner.

2. Setup

To begin watching your "Fame" DVD, ensure you have a compatible DVD player and a television or display device. Follow these steps:

1. Connect your DVD player to your television using appropriate cables (e.g., HDMI, RCA, component). Refer to your DVD player and television manuals for specific connection instructions.

2. Insert the "Fame" DVD into the disc tray of your DVD player. Ensure the disc is clean and free of scratches or smudges.
3. Turn on your television and DVD player. Select the correct input source on your television that corresponds to your DVD player's connection.

3. Operating Instructions

Once the DVD is loaded and the player is connected, you can navigate the disc's features.

3.1. Main Menu Navigation

Upon loading, the DVD will typically display a main menu. Use your DVD player's remote control to navigate:

- Use the **ARROW** keys (Up, Down, Left, Right) to highlight menu options.
- Press the **ENTER** or **PLAY** button to select a highlighted option.
- Common menu options include "Play Movie," "Scene Selection," "Audio Options," "Subtitles," and "Special Features."

3.2. Playback Controls

During movie playback, use your remote control for standard functions:

- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback and returns to the beginning of the disc or menu.
- **FAST FORWARD/REWIND:** Skips through the movie quickly.
- **SKIP/NEXT/PREVIOUS:** Jumps to the next or previous chapter/scene.
- **MENU:** Returns to the main DVD menu.

3.3. Audio and Subtitle Options

The "Fame" DVD supports English (Dolby Digital 5.1) audio and English subtitles, with French dubbing also available. These options can typically be selected from the main menu or by pressing the **AUDIO** or **SUBTITLE** button on your remote during playback.

4. Maintenance and Care

Proper care will ensure the longevity and optimal performance of your "Fame" DVD.

- Always handle the DVD by its edges to avoid touching the playback surface.
- Store the DVD in its original case when not in use to protect it from dust and scratches.
- Keep the DVD away from direct sunlight, extreme temperatures, and high humidity.
- To clean the disc, gently wipe from the center outwards with a soft, lint-free cloth. Do not use abrasive cleaners or solvents.
- Avoid bending or flexing the disc, as this can cause damage.

5. Troubleshooting

If you encounter issues while playing your "Fame" DVD, consider the following common solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty or scratched; incorrect input selected on TV; DVD player malfunction.	Clean the disc. Ensure TV input is correct. Try the disc in another DVD player if available.
Picture or sound skips/freezes.	Disc surface issues; player lens dirty.	Clean the disc. Consider using a DVD player lens cleaner.
No sound.	TV/player volume too low; incorrect audio track selected; audio cables loose.	Increase volume. Check audio settings on DVD menu. Ensure audio cables are securely connected.
No picture.	Incorrect TV input; video cables loose; TV/player settings.	Verify TV input. Check video cable connections. Adjust TV/player display settings.

6. Specifications

Key technical details for the "Fame" DVD (ASIN: B00008WJBF):

- **Format:** DVD, Multiple Formats, Closed-captioned, Color, Dubbed, Anamorphic, Subtitled, Widescreen, NTSC, Dolby
- **Aspect Ratio:** 1.85:1
- **Run Time:** 2 hours and 13 minutes
- **Release Date:** June 1, 2004
- **Language:** English (Dolby Digital 5.1), French (Dubbed)
- **Subtitles:** English
- **Number of Discs:** 1
- **MPAA Rating:** R (Restricted)
- **Product Dimensions:** 7.5 x 5.5 x 0.5 inches; 3.2 ounces
- **Studio:** Warner Home Video

7. Warranty and Support

This DVD is manufactured to high-quality standards. In the unlikely event of a manufacturing defect, please refer to the return policy of your retailer. For general inquiries about the film content or technical specifications, you may visit the official Warner Home Video website or relevant movie databases.
For issues related to playback, first consult the troubleshooting section of this manual and your DVD player's instruction manual. If problems persist, contact the customer support for your DVD player manufacturer.

© 2004 Warner Home Video. All rights reserved.