**Warner Home Video MFR085392864829#N**

# Warner Home Video: The Matrix Reloaded DVD Instruction Manual (Model MFR085392864829#N)

This manual provides instructions and information for the Warner Home Video release of The Matrix Reloaded DVD, Model MFR085392864829#N. Learn about its features, playback, and care.

**Product Overview**
**Setup**
**Operating**
**Special Features**
**Maintenance**
**Troubleshooting**
**Specifications**
**Warranty & Support**

## 1. Product Overview

The Matrix Reloaded DVD is the second installment in The Matrix trilogy, offering an immersive science fiction experience. This Widescreen Edition DVD set includes the main feature film along with various bonus content.

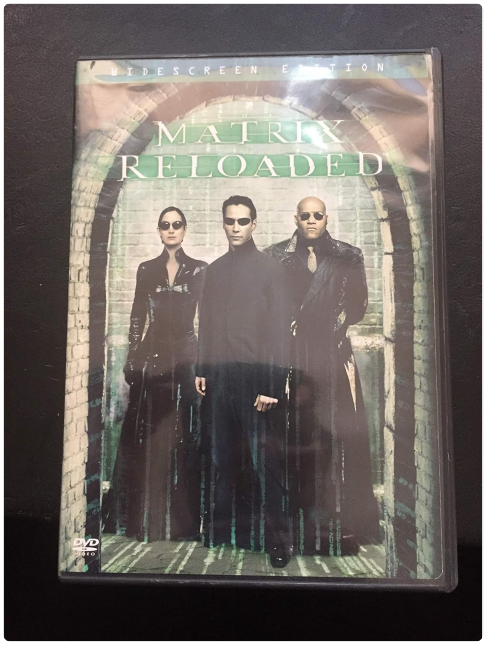



**Image 1.1:** Front cover of The Matrix Reloaded Widescreen Edition DVD, featuring Neo, Trinity, and Morpheus.

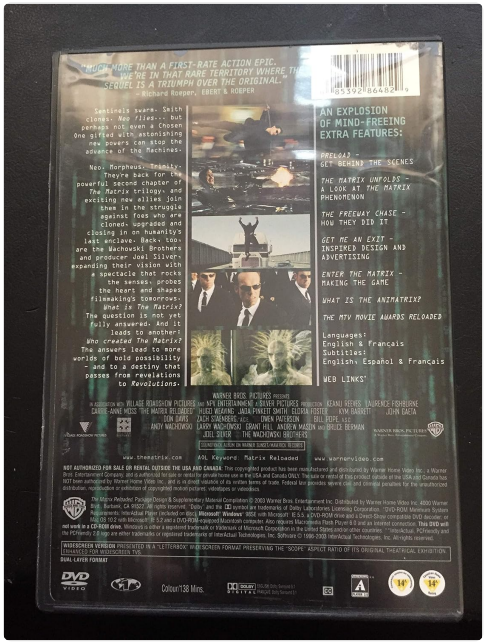



**Image 1.2:** Back cover of The Matrix Reloaded DVD, detailing the plot summary and listing bonus content such as documentaries and web links.




**Image 1.3:** Inside the DVD case for The Matrix Reloaded, displaying two discs. Disc One typically contains the main feature, and Disc Two contains bonus materials.

## 2. Setup

To enjoy The Matrix Reloaded DVD, follow these general setup instructions:

1. **Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and powered on.
2. **Insert the Disc:** Open the DVD case and carefully remove Disc One (main feature) by pressing down on the center hub and lifting the disc by its edges. Insert the disc into your DVD player's disc tray or slot with the label side facing up.
3. **Select Input:** Switch your television or display device to the correct input source (e.g., HDMI 1, AV, Component) that your DVD player is connected to.
4. **Power On:** If not already on, power on your DVD player. The disc should begin to load automatically.
5. **Navigate Menu:** Use your DVD player's remote control to navigate the on-screen menu. Select "Play Movie" or similar to start the film.

## 3. Operating Instructions

Basic controls for DVD playback:

- **Play/Pause:** Press the "Play" button to start playback and "Pause" to temporarily stop.
- **Stop:** Press the "Stop" button to end playback and return to the main menu or stop the disc.
- **Fast Forward/Rewind:** Use the "FF" (Fast Forward) and "RW" (Rewind) buttons to scan through the movie.
- **Skip Chapter:** Use the "Next Chapter" or "Previous Chapter" buttons to jump between scenes.
- **Menu:** Press the "Menu" or "Title" button to access the DVD's main menu for scene selection, special features, or language options.

- **Audio/Subtitles:** Use the "Audio" or "Subtitle" buttons on your remote to change language tracks or enable/disable subtitles.

## 4. Special Features

This Widescreen Edition DVD of The Matrix Reloaded includes a variety of bonus content to enhance your viewing experience. These features are typically found on Disc Two or accessible via the main menu.

### Bonus Content List:

- **DVD ROM Features:** Web links to the official Matrix website.
- **Documentaries:**
  - PRELOAD: Go behind the scenes with the cast and crew.
  - THE FREEWAY CHASE: Anatomy of the mind-blowing scene.
  - ENTER THE MATRIX: Making of the ground-breaking video game.
  - WHAT IS THE ANIMATRIX?
  - THE MATRIX UNFOLDS: A look at the Matrix phenomenon.
  - GET ME AN EXIT: Matrix-inspired design advertising.
- **Other:** THE MTV MOVIE AWARDS RELOADED.

### Official Product Video:

Your browser does not support the video tag.

**Video 4.1:** Official trailer for The Matrix Reloaded. This video provides a preview of the film's action sequences and plot elements, showcasing key characters and visual effects.

## 5. Maintenance

Proper care of your DVD discs will ensure their longevity and optimal playback performance:

- **Handling:** Always hold discs by their edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If a disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards. Do not use abrasive materials or harsh cleaning chemicals.
- **Storage:** Store discs in their original case, away from direct sunlight, extreme temperatures, and high humidity. Keep cases upright to prevent discs from shifting and scratching.
- **Avoid Scratches:** Do not stack discs without their cases. Be careful when inserting or removing discs from the player.

## 6. Troubleshooting

If you encounter issues during playback, consider the following common solutions:

- **Disc Not Playing/Skipping:**
  - Check if the disc is clean and free of smudges or scratches. Clean if necessary (refer to Maintenance section).
  - Ensure the disc is inserted correctly into the DVD player (label side up).
  - Try playing another DVD to determine if the issue is with the disc or the player.
  - Restart your DVD player and television.
- **No Picture/Sound:**
  - Verify all cables (video and audio) are securely connected between the DVD player and the television.
  - Ensure your television is set to the correct input source.
  - Check the volume level on both your television and audio receiver (if applicable).
  - Confirm that the DVD player is powered on.
- **Remote Control Not Working:**
  - Check and replace the batteries in the remote control.
  - Ensure there are no obstructions between the remote and the DVD player's sensor.

## 7. Specifications

| Feature | Detail |
|---|---|
| **Title** | The Matrix Reloaded |
| **Brand** | Warner Home Video |
| **Model Number** | MFR085392864829#N |
| **Format** | DVD (Widescreen Edition) |
| **Number of Discs** | 2 |
| **Aspect Ratio** | 2.35:1 |
| **MPAA Rating** | R (Restricted) |
| **Run Time** | 2 hours and 18 minutes |
| **Release Date** | May 15, 2007 |
| **Actors** | Keanu Reeves, Laurence Fishburne, Carrie-Anne Moss, Hugo Weaving, Jada Pinkett Smith |
| **Directors** | Lana Wachowski, Lilly Wachowski |
| **Producers** | Bruce Berman, Grant Hill, Joel Silver, Lana Wachowski, Lilly Wachowski |
| **Languages** | English (Dolby Digital 2.0 Surround), English (Dolby Digital 5.1), French (Dolby Digital 5.1), Unqualified |

| | |
|---|---|
| **Subtitles** | English, French, Spanish |
| **Product Dimensions** | 0.7 x 7.5 x 5.4 inches; 6.4 ounces |

## 8. Warranty and Support

For information regarding product warranty or customer support, please refer to the packaging or contact Warner Home Video directly. General inquiries about DVD playback or content may also be directed to your DVD player manufacturer's support channels.
As this is a media product, specific warranty details typically cover manufacturing defects of the disc itself, rather than content preferences or compatibility with all playback devices. Always ensure your DVD player is compatible with Region 1 (North America) DVDs if purchased in that region.

© 2003 Warner Bros. Entertainment Inc. All rights reserved.
This manual is for informational purposes only. Specifications and content are subject to change without notice.