Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Warner Home Video 1982921188

Everwood: The Complete First Season DVD User Manual


1. Introduction

This instruction manual provides essential information for the proper use and enjoyment of the **Everwood: The Complete First Season DVD** set. It covers setup, operation, maintenance, and troubleshooting to ensure a seamless viewing experience. Please read this manual thoroughly before using the product.

2. Setup

To begin watching **Everwood: The Complete First Season**, follow these simple steps:

1. **Unpack the DVD Set:** Carefully remove the DVD case from its packaging.
2. **Select a Disc:** Open the DVD case and gently remove one of the six discs by pressing the center hub and lifting the disc by its edges. Avoid touching the playback surface.
3. **Insert into Player:** Insert the selected DVD into a compatible DVD player or computer drive with the label side facing up.
4. **Power On:** Turn on your DVD player and television/monitor.
5. **Initial Menu:** The DVD should automatically load to the main menu. If it does not, ensure your player is set to the correct input source and try pressing the 'Play' button on your remote control.

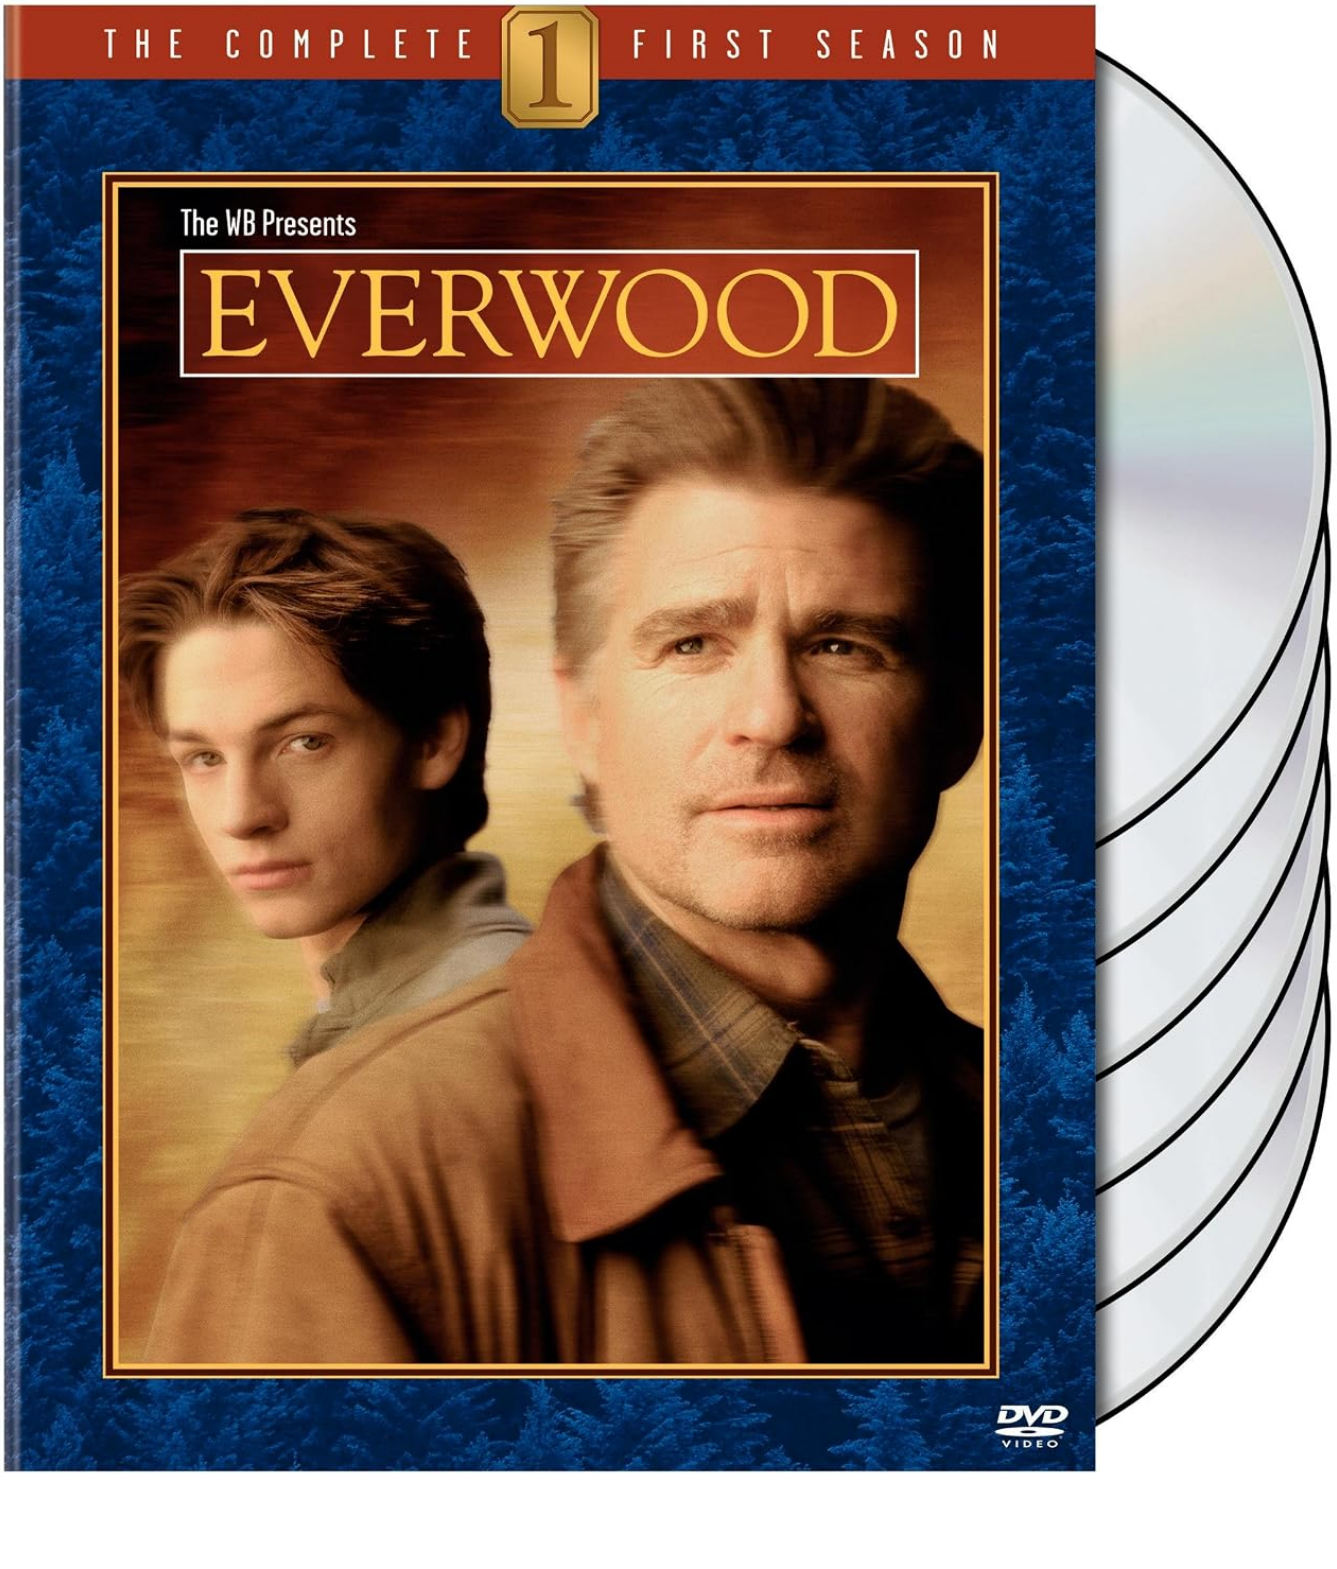

This image displays the packaging for the Everwood: The Complete First Season DVD set, including the outer case and the six individual discs.

3. Operating Instructions

Navigate the DVD menus and enjoy the series and special features.

3.1. Main Menu Navigation

- Use the arrow keys on your remote control to highlight menu options.

- Press 'Enter' or 'OK' to select an option.
- Common options include 'Play All Episodes', 'Episode Selection', 'Special Features', and 'Setup' (for language/subtitle options).

3.2. Episode Playback

Select 'Play All Episodes' to watch the entire disc's content sequentially, or choose 'Episode Selection' to pick a specific episode.

3.3. Special Features

The DVD set includes various special features. Access these from the main menu under 'Special Features'.

- **Audio Commentary:** Available on four episodes (Pilot, Episode 20, The Unveiling, Home) with the show's creators, cast, and crew, including Treat Williams and Gregory Smith.
- **Deleted Scenes:** Titled "Everwood Casualties."
- **Featurette:** "In Search of Everwood" - a behind-the-scenes look at the making of the show.
- **Gag Reel:** A collection of bloopers and outtakes.

3.4. Language and Subtitles

To change audio language or enable subtitles, navigate to the 'Setup' or 'Audio/Subtitles' option on the main menu. Available options include:

- **Audio:** English (Dolby Digital 2.0 Surround)
- **Subtitles:** English, French, Spanish

4. Maintenance

Proper care of your DVDs will ensure their longevity and optimal performance.

- **Handling:** Always hold discs by their edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If a disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store discs in their original case, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place discs on rough surfaces or stack them without protection.

5. Troubleshooting

If you encounter issues while using your DVD set, consider the following solutions:

- **Disc Not Reading:** Ensure the disc is clean and free of scratches. Try inserting it into another compatible DVD player to rule out player issues.
- **Skipping or Freezing:** Clean the disc thoroughly. Check for any visible damage. Ensure your DVD player's lens is clean.

- **No Audio/Video:** Verify that your DVD player is correctly connected to your television/monitor and that the correct input source is selected. Check audio settings on both the player and TV.
- **Menu Navigation Issues:** Ensure your remote control batteries are functional. Try navigating with the buttons on the DVD player itself.

If problems persist after attempting these steps, consult your DVD player's manual or contact the retailer for further assistance.

6. Specifications

Feature	Detail
Product Title	Everwood - The Complete First Season
Brand	Warner Home Video
Model Number	1982921188
ASIN	B0002DB0FO
Media Format	Box set, Closed-captioned, Color, Dolby, Full Screen, Multiple Formats, NTSC, Subtitled
Number of Discs	6
Run Time	17 hours and 2 minutes
Aspect Ratio	1.33:1
MPAA Rating	NR (Not Rated)
Release Date	June 6, 2006
Product Dimensions	7.75 x 5.75 x 1.75 inches; 3.2 ounces
Languages	English (Dolby Digital 2.0 Surround)
Subtitles	English, French, Spanish

7. Warranty and Support

This product is a DVD media set. Specific warranty information for media products typically falls under the retailer's return policy for defective items. Please retain your proof of purchase.

For issues related to manufacturing defects or disc damage upon receipt, please contact the retailer from whom you purchased the product within their specified return period. For general inquiries about the **Everwood** series or Warner Home Video products, you may visit the official Warner Bros. website or contact their customer support channels.

Please note that wear and tear from improper handling or storage are not typically covered under warranty.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0002DB0FO

More documents and user manuals: **https://manuals.plus/**