Warner Home Video B0002Y69NG

The Ultimate Matrix Collection DVD Set Instruction Manual

Model: B0002Y69NG

Introduction to The Ultimate Matrix Collection

This manual provides comprehensive instructions for the proper use and care of The Ultimate Matrix Collection DVD set. This definitive ten-disc collection features all three films in the Matrix trilogy: *The Matrix*, *The Matrix Reloaded*, and *The Matrix Revolutions*, alongside the acclaimed animated companion piece, *The Animatrix*. The set also includes extensive supplemental materials designed to deepen your understanding and enjoyment of the Matrix universe.

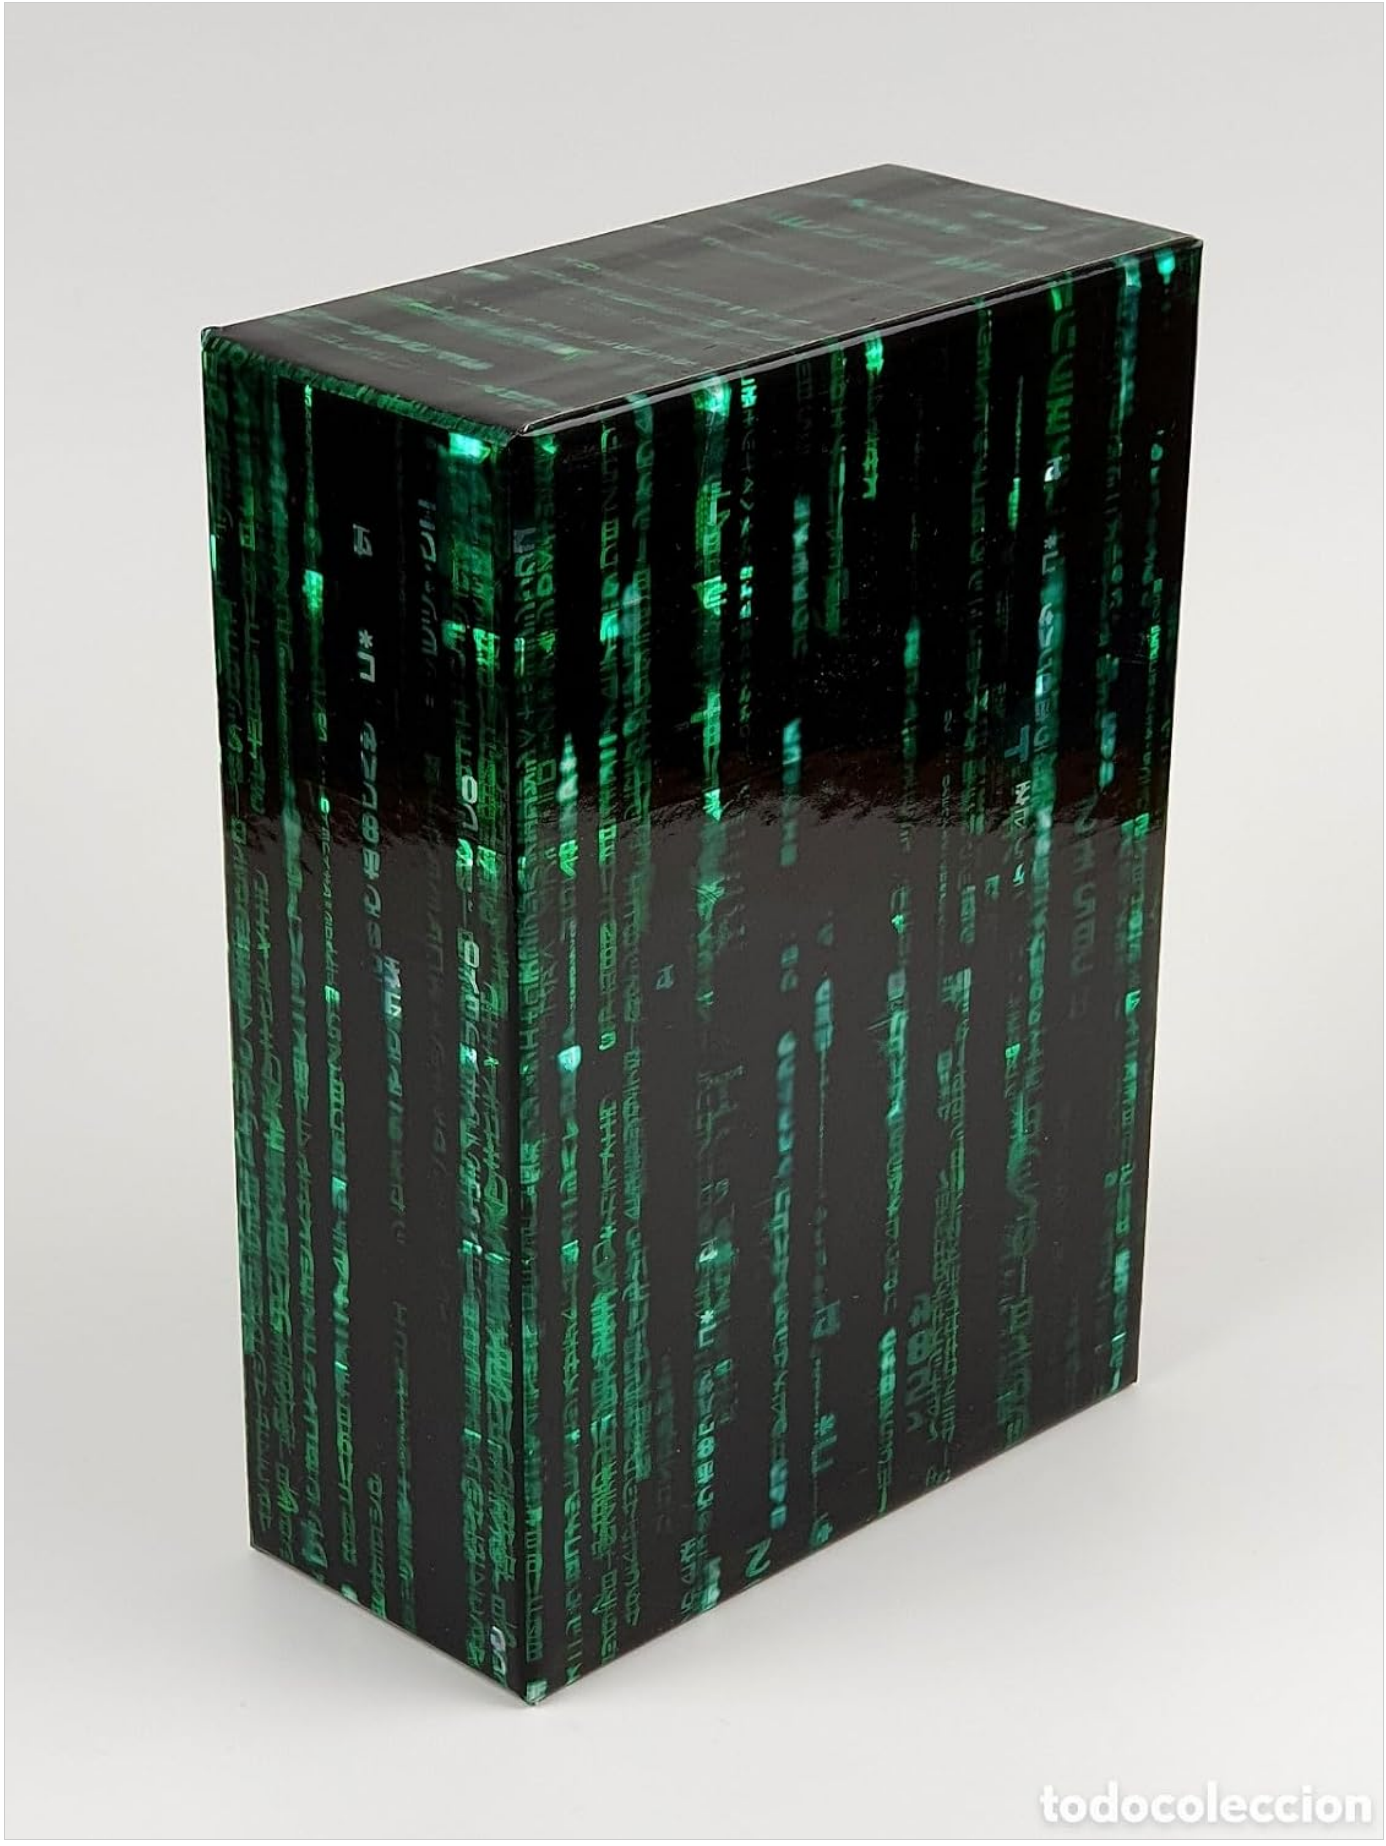


Image: The complete Ultimate Matrix Collection DVD box set.

Package Contents

Your Ultimate Matrix Collection DVD set includes the following discs:

- *The Matrix* (Film Disc)
- *The Matrix Reloaded* (Film Disc)
- *The Matrix Revolutions* (Film Disc)
- *The Animatrix* (Film Disc)
- *The Matrix Revisited* (Supplemental Disc)
- Five (5) additional supplemental DVDs with brand-new materials.

Setup Guide

To begin enjoying your DVD collection, ensure your DVD player is correctly set up and connected to your television or display device.

Connecting Your DVD Player:

1. **Power Connection:** Plug the DVD player's power cord into a standard electrical outlet.
2. **Video Connection:** Connect a video cable (HDMI, Component, or Composite) from the DVD player's "Video Out" port to the corresponding "Video In" port on your television.
3. **Audio Connection:** Connect audio cables (HDMI, RCA stereo, or Digital Audio) from the DVD player's "Audio Out" ports to the corresponding "Audio In" ports on your television or audio receiver.
4. **Input Selection:** Turn on your television and select the correct input source (e.g., HDMI 1, Video 1) that corresponds to your DVD player's connection.

Operating Your DVD Set

Playing a Disc:

1. Turn on your DVD player and television.
2. Open the disc tray on your DVD player.
3. Carefully place the desired DVD disc onto the tray with the label side facing up.
4. Close the disc tray. The DVD player should automatically begin reading the disc and display the main menu or start playback.

Navigating Menus:

Use the directional buttons (up, down, left, right) on your DVD player's remote control to highlight menu options. Press the "Enter" or "OK" button to select an option.

Selecting Audio and Subtitles:

Most DVD players allow you to change audio tracks and subtitle options during playback. Look for "Audio" or "Subtitle" buttons on your remote, or access these options through the disc's main menu or a pop-up menu during playback.

- **Audio Languages:** English, Spanish, French
- **Subtitles:** Available options will vary by disc.

Disc Contents and Special Features Overview

This collection provides an immersive experience into the Matrix universe, featuring all films and a wealth of bonus content.

The Matrix (Film Disc):

The groundbreaking first film of the trilogy, newly remastered for enhanced picture and sound quality.

Your browser does not support the video tag.

Video: Official trailer for The Matrix film. This video provides a brief overview of the film's premise and action sequences.

The Matrix Reloaded & The Matrix Revolutions (Film Discs):

The second and third installments that continue Neo's journey and the fight for humanity's survival.

The Animatrix (Film Disc):

A collection of nine animated short films that delve deeper into the Matrix universe, exploring its history and various characters.

Supplemental Discs (The Matrix Revisited & 5 New DVDs):

These discs contain a vast array of bonus features, including:

- Two new audio commentaries on each film (The Philosophers: Dr. Cornel West and Ken Wilber; The Critics: Todd McCarthy, John Powers and David Thomson).
- Additional Scenes: Filmed for the *Enter the Matrix* video game.
- DVD ROM Features.
- Documentaries and Featurettes (106 deep-delving pieces).
- Easter Eggs.
- Introduction by the Wachowski Brothers.
- Music Videos.
- Photo Galleries.
- Storyboards.
- TV Spots.
- Theatrical Trailers.

Maintenance and Care

Proper care of your DVD discs will ensure their longevity and optimal playback performance.

- **Handling:** Always hold discs by their edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If a disc becomes dirty, gently wipe it with a soft, lint-free cloth (such as a microfiber cloth) from the center outwards. Do not use abrasive materials or harsh cleaning chemicals.
- **Storage:** Store discs in their original cases, away from direct sunlight, extreme temperatures, and high humidity.
- **Scratches:** While minor scratches may not affect playback, deep scratches can cause errors. Handle discs with care to prevent damage.

Troubleshooting

If you encounter issues while using your DVD set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty or scratched; Disc is inserted incorrectly; DVD player malfunction.	Clean the disc; Ensure disc is inserted label-side up; Try another disc; Consult your DVD player's manual.
No video or distorted video.	Incorrect video input selected on TV; Loose video cables; TV or DVD player settings.	Select correct TV input; Check all video cable connections; Adjust aspect ratio settings on DVD player or TV.
No audio or distorted audio.	Loose audio cables; TV or receiver volume too low/muted; Incorrect audio output settings.	Check all audio cable connections; Increase volume and check mute status; Verify audio output settings on DVD player and receiver.
Disc skips or freezes.	Dirty or scratched disc; Dust inside DVD player; Disc region incompatibility (unlikely for this product).	Clean the disc thoroughly; Ensure disc is free of damage; Try playing the disc in another player if possible.

Specifications

Key technical specifications for The Ultimate Matrix Collection DVD set:

- **Format:** DVD (NTSC, Closed-captioned, Widescreen)
- **Number of Discs:** 10
- **Run Time:** Approximately 10 hours and 18 minutes (total for all films and main features)
- **Aspect Ratio:** 2.40:1, 1.85:1 (varies by film/content)
- **Languages:** English, Spanish, French (Audio and/or Subtitles, varies by disc)
- **MPAA Rating:** R (Restricted)
- **Product Dimensions:** 7.75 x 5.75 x 2.5 inches
- **Weight:** 1.4 Pounds
- **Studio:** Warner Home Video
- **ASIN:** B0002Y69NG

© 2025 Warner Home Video. All rights reserved.

For further assistance, please refer to your DVD player's user manual or visit the official Warner Bros. website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question