Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KODAK 8912065

Kodak Ultra Premium Photo Paper Semi-Gloss 4x6 Inch User Manual

Introduction Setup Operating Instructions Maintenance & Storage Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides essential information for the proper use and care of your Kodak Ultra Premium Photo Paper Semi-Gloss. This photo paper is designed to produce high-quality, vibrant prints from your inkjet printer, ideal for preserving your cherished memories.

Key features include instant drying, resistance to smearing and smudging, vivid color reproduction, and universal compatibility with inkjet printers.

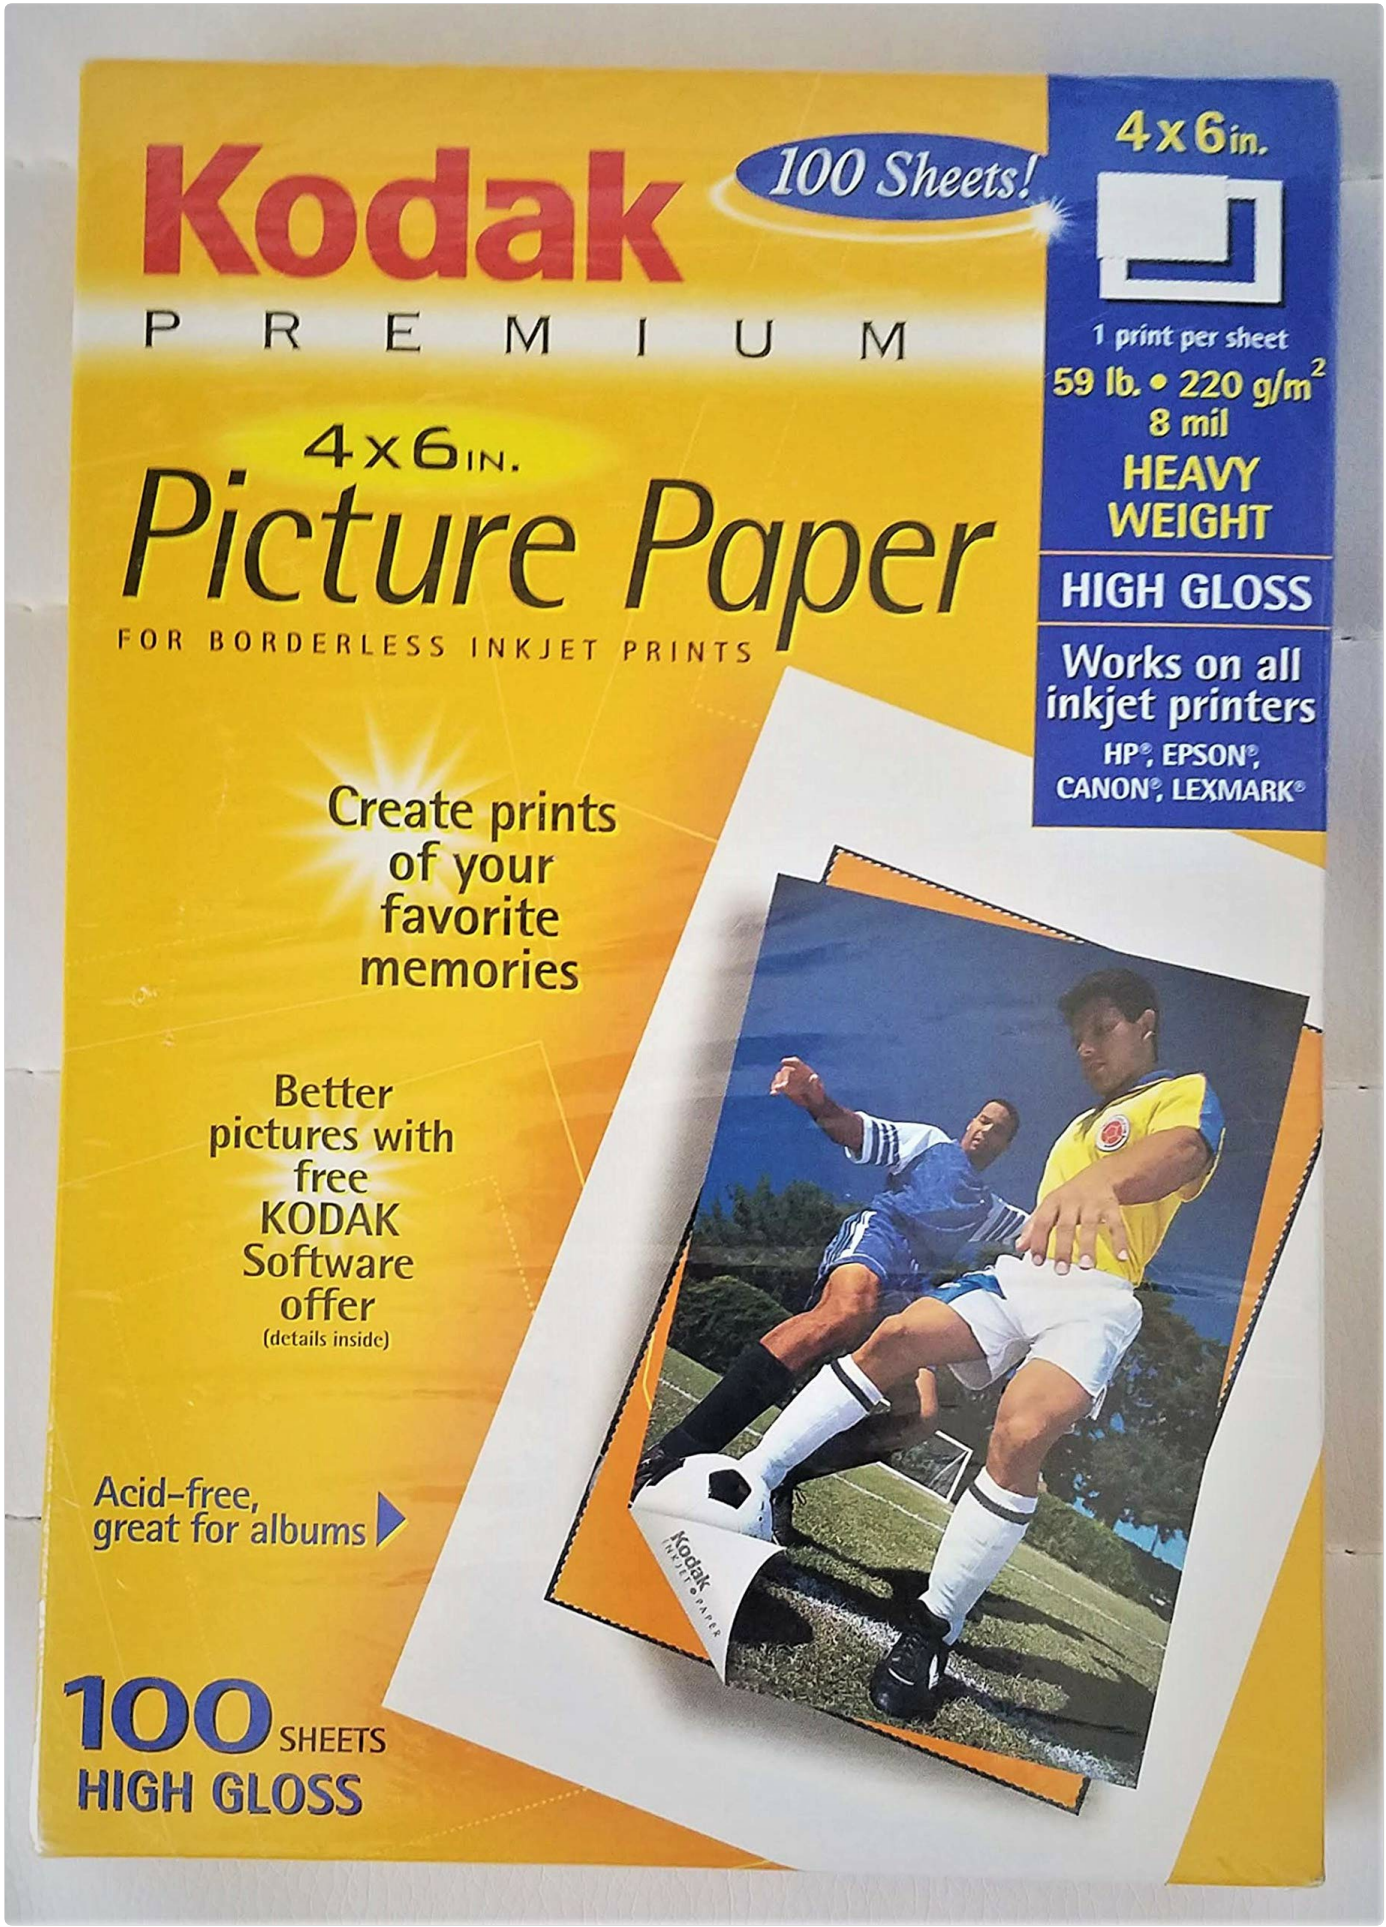


Figure 1: Kodak Ultra Premium Photo Paper Semi-Gloss packaging. This image displays the product's front and back, highlighting features, compatibility, and usage guidelines.

2. Setup

2.1 System Requirements for Optional Software

For users interested in the optional Kodak software, ensure your computer meets the following minimum system requirements:

- **Operating Systems:** Windows 98, Windows 98SE, Windows 2000, Windows NT 4.0, Windows Millennium Edition, or Windows XP.

For more information and to obtain Kodak software, visit the official website:www.kodak.com/go/inkjet.

2.2 Printer Compatibility and Settings

This photo paper is universally compatible with all inkjet printers. For optimal print quality, it is recommended to visit the Kodak website to check for specific printer model listings and recommended settings.
Visit www.kodak.com/go/inkjet for detailed information.

3. Operating Instructions

3.1 Loading Photo Paper

1. Open your printer's paper tray.
2. Ensure the paper is loaded correctly according to your printer's instructions, typically with the glossy side facing the print head.
3. Do not overload the paper tray.

3.2 Printer Settings for Optimal Results

To achieve the best print quality, adjust your printer settings as follows:

- **Paper Type:** Select "Photo Paper," "Glossy Photo Paper," or "Semi-Gloss Photo Paper" if available.
- **Print Quality:** Choose "Best" or "High" quality setting.
- **Paper Size:** Confirm "4x6 inch" is selected.

Refer to your printer's user manual for specific instructions on adjusting these settings.

3.3 Paper Usage Guide

The following table provides a general guide for various Kodak photo papers, including the Ultra Premium Photo Paper, to help you select the appropriate paper for your printing needs. This product, Kodak Ultra Premium Photo Paper, falls under the "Premium Picture Paper" category in the guide.

Table 1: Kodak Paper Usage Guide

Product	Paper Finish	Paper Weight	Primary Use
KODAK Ultima Picture Paper	High Gloss and Satin	71 lb. (270 g/m²)	Professional quality photographs
KODAK Premium Picture Paper	**High Gloss and Satin**	**59 lb. (220 g/m²)**	**Premium photographs**
KODAK Picture Paper	Soft Gloss and Matte	51 lb. (190 g/m²)	Pictures every day
KODAK Presentation Plus Paper	Matte	28 lb. (105 g/m²)	Premium documents
KODAK Bright White Inkjet Paper	Matte	24 lb. (90 g/m²)	Everyday printing

This table is derived from the "Paper Usage Guide" section visible on the product packaging (refer to Figure 1).

4. Maintenance and Storage

Proper storage of your photo paper is crucial to maintain its quality and ensure optimal printing results over time.

- **Storage Condition:** Store the package flat in a cool, dry location. Avoid areas with high humidity or extreme temperature fluctuations.
- **Handling:** Handle paper by the edges to prevent fingerprints or smudges on the printable surface.
- **Unused Paper:** Return any unused sheets to their original packaging to protect them from dust, light, and moisture.

5. Troubleshooting

5.1 Common Printing Issues

- **Poor Print Quality/Fading Colors:**
  - Ensure your printer settings are configured for "Photo Paper" and "Best" quality.
  - Check ink levels and replace cartridges if necessary.
  - Clean printer nozzles/print heads as per your printer's manual.
- **Paper Jams:**
  - Ensure paper is loaded correctly and not overloaded in the tray.
  - Check for any foreign objects in the paper path.
  - Fan the paper stack before loading to prevent sheets from sticking together.
- **Smearing/Smudging:**
  - Allow prints to dry completely before handling. Although this paper is "instant dry," environmental factors can affect drying time.
  - Ensure you are printing on the correct side of the paper (the semi-glossy side).

5.2 Color Fading Over Time

Note: Inkjet prints are produced using inks that contain color dyes. Depending on storage conditions, the color dyes in inkjet prints may change slightly over time. To minimize fading, store prints away from direct sunlight, high humidity, and extreme temperatures.

6. Specifications

Feature	Detail
Product Name	Kodak Ultra Premium Photo Paper Semi-Gloss
Model Number	8912065
ASIN	B000EZT62Y
Brand	KODAK
Paper Finish	Semi-Gloss
Sheet Size	4" x 6" (10 x 15 cm)
Number of Sheets	100
Material Type	Paper
Item Weight (Package)	0.01 ounces (approximate, as per product data)
Package Dimensions	6.2 x 3.9 x 1.3 inches
Manufacturer	Eastman Kodak Company
Country of Origin	Canada (Made in Canada for Eastman Kodak Company)

7. Warranty and Support

7.1 Guaranteed Compatible - Works on All Inkjet Printers

Kodak offers a "Guaranteed Compatible - Works on All Inkjet Printers" limited guarantee. For full details regarding this guarantee, please visit the official Kodak website or contact customer support.

- **Website:** www.kodak.com/go/inkjetguarantee
- **Phone Support:** 1-800-235-6325

7.2 Limitation of Liability

In no event shall Kodak be liable for any incidental, special, or consequential damages. In addition, except for the Guaranteed Compatible limited guarantee, Kodak shall have no liability even though defect, damage, or loss is caused by negligence or other fault.

7.3 Manufacturer Information

EASTMAN KODAK COMPANY
Rochester, NY 14650
www.kodak.com
TM: Kodak, Share Moments. Share Life. CANON, EPSON, HEWLETT-PACKARD, LEXMARK trademarks are the property of their respective owners.

© 2000-2024 Eastman Kodak Company. All rights reserved. KP119349 MA-1922.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B000EZT62Y

More documents and user manuals: **https://manuals.plus/**