Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GEORGE KOVACS P600-3-603

George Kovacs P600-3-603 LED Swing Arm Wall Sconce Instruction Manual

Model: P600-3-603 | Brand: GEORGE KOVACS

Introduction

This manual provides comprehensive instructions for the George Kovacs P600-3-603 LED Swing Arm Wall Sconce. It covers essential information regarding product setup, safe operation, routine maintenance, and detailed specifications to ensure proper use and longevity of your lighting fixture.

Important Safety Information

Please read all instructions carefully before assembly and installation. Failure to do so could result in electric shock, fire, or other injuries that could be hazardous or fatal. Keep these instructions for future reference.

- Always disconnect power at the main circuit breaker before beginning installation.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are made in accordance with local codes and ordinances.
- This fixture is designed for indoor use only.
- Do not exceed the maximum wattage specified for the light source.
- Handle glass components with care to prevent breakage.

Package Contents

Verify that all components are present before beginning assembly.

- George Kovacs P600-3-603 LED Swing Arm Wall Sconce
- Mounting Hardware
- Light Source (LED)
- Part Number: P5742-084



Figure 1: Front view of the George Kovacs P600-3-603 LED Swing Arm Wall Sconce in Matte Brushed Nickel finish.

Setup and Installation

This fixture is designed for wall-mount installation. Assembly is required.

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Clear the installation area.
2. **Mount the Backplate:** Secure the fixture's backplate to the wall using the provided mounting hardware. Ensure it is firmly attached to a wall stud or appropriate anchor points.
3. **Electrical Connections:** Connect the fixture's electrical wires to the household wiring according to local electrical codes. Typically, this involves connecting live to live, neutral to neutral, and ground to ground.
4. **Attach Fixture Body:** Carefully attach the main body of the sconce to the mounted backplate. Secure it with the provided screws or fasteners.
5. **Install Light Source:** Insert the LED light source into the fixture. Ensure it is seated correctly.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.

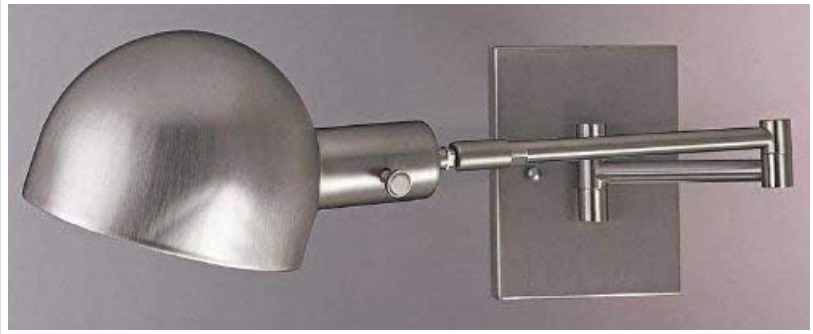


Figure 2: Side view of the sconce, showing the swing arm mechanism.



Figure 3: Detail of the sconce, highlighting the toggle switch for operation.

Operating Instructions

The George Kovacs P600-3-603 LED Swing Arm Wall Sconce is designed for ease of use.

- **Power On/Off:** Use the integrated toggle switch located on the fixture's base to turn the light on or off.
- **Adjusting the Arm:** The swing arm allows for flexible positioning of the light. Gently extend or retract the arm to direct light where needed.
- **Adjusting the Shade:** The light shade can be adjusted to angle the light beam. Carefully pivot the shade to achieve the desired lighting direction.

Care and Maintenance

Regular care will help maintain the appearance and functionality of your wall sconce.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** This fixture uses an integrated LED light source. If replacement is ever needed, ensure power is off and consult a qualified technician or the manufacturer for appropriate replacement parts (Standard A19 bulb type, 60 Watts maximum compatible wattage).
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

Troubleshooting

If your wall sconce is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Faulty light source. Loose wiring connection.	Check circuit breaker. Ensure toggle switch is ON. Verify light source is properly installed. Consult an electrician to check wiring.
Light flickers.	Loose light source. Incompatible dimmer switch (if applicable). Loose wiring.	Ensure light source is securely tightened. If using a dimmer, ensure it is LED compatible. Consult an electrician to check wiring.
Fixture is loose on the wall.	Mounting hardware not secure.	Tighten mounting screws. Ensure proper wall anchors were used during installation.

Specifications

Model: P600-3-603

Brand: GEORGE KOVACS

Dimensions (L x W x H): 7.25" x 17" x 7.25"

Light Source Type: LED

Maximum Compatible Wattage: 60 Watts

Voltage: 120 Volts

Brightness: 800 Lumens

Light Color: Cool White

Material: Metal, Alloy Steel, Glass

Finish Type: Nickel

Mounting Type: Wall Mount

Switch Type: Toggle

Special Feature: Frosted

Included Components: P5742-084

Assembly Required: Yes

Indoor/Outdoor Usage: Indoor

GTIN (UPC): 870540002600

Warranty Information

This George Kovacs P600-3-603 LED Swing Arm Wall Sconce comes with a**Limited Warranty**. For specific details regarding warranty coverage, terms, and conditions, please refer to the documentation included with your purchase or contact George Kovacs customer support.

Customer Support

For technical assistance, missing parts, or any questions regarding your George Kovacs P600-3-603 LED Swing Arm Wall Sconce, please contact George Kovacs customer support. Refer to the product packaging or the official George Kovacs website for current contact information.

© 2023 GEORGE KOVACS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B000H6UX3G

More documents and user manuals: **https://manuals.plus/**