Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Burg-Wächter Money 5020

Burg-Wächter Money 5020 Cash Box Instruction Manual

1. Introduction

This manual provides instructions for the proper use and maintenance of your Burg-Wächter Money 5020 Cash Box. Please read these instructions carefully before using the product to ensure optimal security and longevity.

The Burg-Wächter Money 5020 is a lockable cash box designed for secure storage of cash, coins, and small valuables. It features a durable steel plate construction and a cylinder lock for protection against theft.

2. Product Overview



Image 2.1: Front view of the Burg-Wächter Money 5020 Cash Box in blue, showing the keyhole and handle.



Image 2.2: Angled view of the closed cash box, highlighting its compact design and integrated handle.

Key Features:

- **Cylinder Lock:** Provides secure locking to protect contents.
- **Removable Coin Tray:** Divided into five sections for organized storage of coins and small items.
- **Durable Construction:** Made from steel plate for enhanced security.
- **Integrated Handle:** For easy portability and storage.

3. Setup

3.1 Unpacking

1. Carefully remove the cash box from its packaging.
2. Check for all included components: 1 cash box and 2 keys.
3. Inspect the cash box for any signs of damage. If damaged, contact your retailer.

3.2 Initial Key Usage

The cash box comes with two identical keys. Keep one key in a safe, separate location as a spare.



Image 3.1: The cash box opened, revealing the empty removable coin tray and the interior compartment.

4. Operating Instructions

4.1 Opening the Cash Box

1. Insert one of the provided keys into the cylinder lock on the front of the cash box.
2. Turn the key clockwise to unlock.
3. Lift the lid of the cash box.

4.2 Using the Coin Tray

The cash box includes a removable coin tray with five divided sections for organizing coins and small items.

1. To access the main compartment, lift the coin tray out of the cash box.
2. Place coins in the designated sections and banknotes or larger valuables in the compartment beneath the tray.
3. To replace the tray, align it with the edges of the cash box and gently lower it into place.



Image 4.1: The cash box opened, with the coin tray lifted to show coins and banknotes stored underneath.

4.3 Closing and Locking the Cash Box

1. Ensure the coin tray is properly seated (if used).
2. Lower the lid of the cash box until it is fully closed.
3. Insert the key into the cylinder lock and turn it counter-clockwise to lock.
4. Remove the key and store it in a secure location.

4.4 Product Demonstration Video

Your browser does not support the video tag.

Video 4.1: A demonstration video showing the operation of a similar Burg-Wächter cash box (pink color), including opening, removing the coin tray, and closing. This video illustrates the functionality of the Money 5020 model.

5. Maintenance

5.1 Cleaning

To clean the cash box, wipe it with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish.

5.2 Storage

Store the cash box in a dry environment to prevent rust or corrosion. Keep keys in a secure location separate from the cash box.

6. Troubleshooting

6.1 Key Not Turning

- Ensure the key is fully inserted into the lock.
- Check for any obstructions in the keyhole.
- If the lock feels stiff, a small amount of graphite lubricant can be applied to the key and inserted into the lock.

6.2 Lid Not Closing Properly

- Verify that the coin tray is correctly seated and not obstructing the lid.
- Ensure no items inside the cash box are preventing the lid from closing completely.

6.3 Lost Keys

If both keys are lost, contact Burg-Wächter customer support for assistance. It is recommended to keep a spare key in a secure, separate location.

7. Specifications

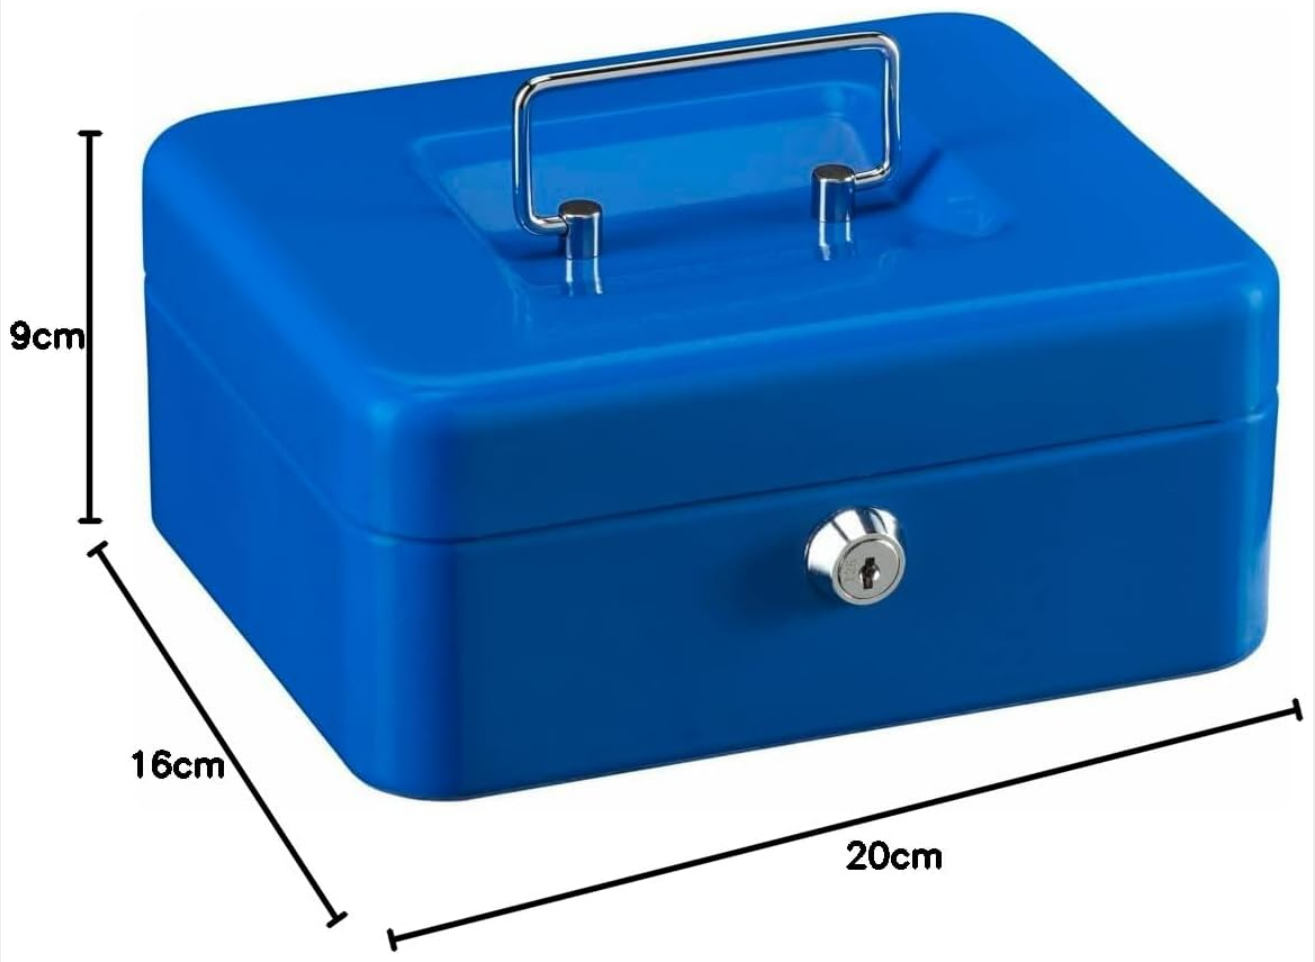


Image 7.1: The cash box with its dimensions clearly labeled: Height (90mm), Width (200mm), Depth (160mm).

Feature	Detail
Manufacturer	Burg-Wächter
Item Number	Money 5020
Product Dimensions (H x W x D)	90 x 200 x 160 mm
Weight	916 g
Color	Blue
Style	5020
Material	Alloy Steel
Lock Type	Cylinder Lock (Key Operated)
Power Source Type	Hand Operated
Special Features	Portable
Included Components	1 x Cash Box, 2 x Keys
Batteries Required?	No
Water Resistance Level	Not Water Resistant

8. Warranty and Support

Information regarding specific warranty terms for the Burg-Wächter Money 5020 Cash Box was not provided in the available product data. For warranty claims or technical support, please contact Burg-Wächter directly or refer to the documentation included with your purchase.

Burg-Wächter is a traditional family business committed to quality since 1920, manufacturing products to the highest quality requirements.

© 2024 Burg-Wächter. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B000K09Z7Y

More documents and user manuals: **https://manuals.plus/**