Nokia 8800

Nokia 8800 Unlocked Cell Phone User Manual
Model: 8800

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Nokia 8800 Unlocked Cell Phone. Please read this guide carefully before operating the device to ensure proper functionality and to understand its features.

Image: The Nokia 8800 phone in a partially slid-open position, revealing the keypad and screen.

2. SETUP

2.1 Installing the SIM Card and Battery

1. Remove the back cover of the phone by sliding it downwards or pressing the release button, if present.

2. Insert your SIM card into the designated slot with the gold contacts facing down and the cut corner aligned correctly.

3. Place the battery into the battery compartment, ensuring the contacts align with those on the phone.

4. Replace the back cover until it clicks securely into place.

Image: The Nokia 8800 phone with its back cover removed, revealing the internal battery compartment and SIM card slot. A separate back cover is shown next to it.

2.2 Charging the Battery

Before first use, fully charge the phone's battery. Connect the charger to the phone's charging port and plug it into a power outlet. The battery indicator on the screen will show the charging status.

Image: The Nokia 8800 phone placed upright in a dedicated charging dock.

2.3 Powering On/Off

To power on, press and hold the power key (usually the red end call key) until the Nokia logo appears. To power off, press and hold the same key until the 'Power off' option appears, then select it.

3. OPERATING INSTRUCTIONS

3.1 Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the green call key.

- **Answering a Call:** Press the green call key when the phone rings.

- **Ending a Call:** Press the red end call key.

3.2 Sending Messages

Navigate to the 'Messages' menu. Select 'Create new message' or 'New SMS/MMS'. Enter your text, add multimedia content if sending an MMS, and then enter the recipient's number or select from contacts before sending.

3.3 Using the Camera

Access the camera from the main menu. Frame your shot using the display and press the dedicated camera key or the center navigation key to capture an image. The integrated SVGA camera supports still images and improved video recording quality (QCIF).

3.4 Internet Browsing

The Nokia 8800 features an integrated xHTML browser that connects over TCP/IP. Access the browser from the main menu to navigate web pages. Data transfer is supported via EDGE/E-GPRS (Class 8) and GPRS (Class 8).

Image: The Nokia 8800 phone with its screen displaying 'Telekom.de', indicating network or service provider information.

4. FEATURES

The Nokia 8800 is designed with a focus on premium materials and functionality:

- **Display:** High-resolution TFT display with 256K colors and 208 x 208 pixel resolution.

- **Imaging:** Integrated SVGA camera (0.5 megapixels) with improved video recording quality (QCIF).

- **Messaging:** Supports text, audio, image, and video clips (MMS up to 300 KB). Email support for SMTP, POP3, and IMAP4 protocols. Predictive text input for major languages.

- **Memory:** 64MB internal NAND flash memory.

- **Connectivity:** Bluetooth (Stereo, Plug & Play connector, SIM Access Profile), EDGE/E-GPRS, GPRS.

- **Voice Features:** Integrated handsfree speaker.

- **Media:** 64 polyphonic MIDI, AAC, MP3 ringing tones. Video recording and streaming. Digital music player and FM Radio.

- **Applications:** Java MIDP 2.0 for applications and games.

- **Special Features:** Exclusive 3D graphics and UI themes, Mobile Wallet 2.0 application, device-to-device synchronization.

Image: The Nokia 8800 phone in its closed, compact form, showcasing its sleek design.

5. MAINTENANCE

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the phone's screen and body. Avoid using harsh chemicals or abrasive materials, as these can damage the finish and display.

5.2 Battery Care

To prolong battery life, avoid exposing the phone to extreme temperatures. Do not leave the battery fully discharged for extended periods. Use only Nokia-approved chargers and batteries.

5.3 General Handling

Protect your phone from drops, impacts, and moisture. Keep it away from magnetic fields and direct sunlight.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

- **Phone not powering on:** Ensure the battery is charged and correctly inserted. Try connecting the charger.

- **No network signal:** Check if the SIM card is properly inserted. Move to an area with better network coverage. Contact your service provider if the issue persists.

- **Battery not charging:** Verify the charger connection. Ensure the charger is functional. Check for any damage to the charging port.

- **Screen unresponsive:** Try restarting the phone. If the issue continues, contact support.
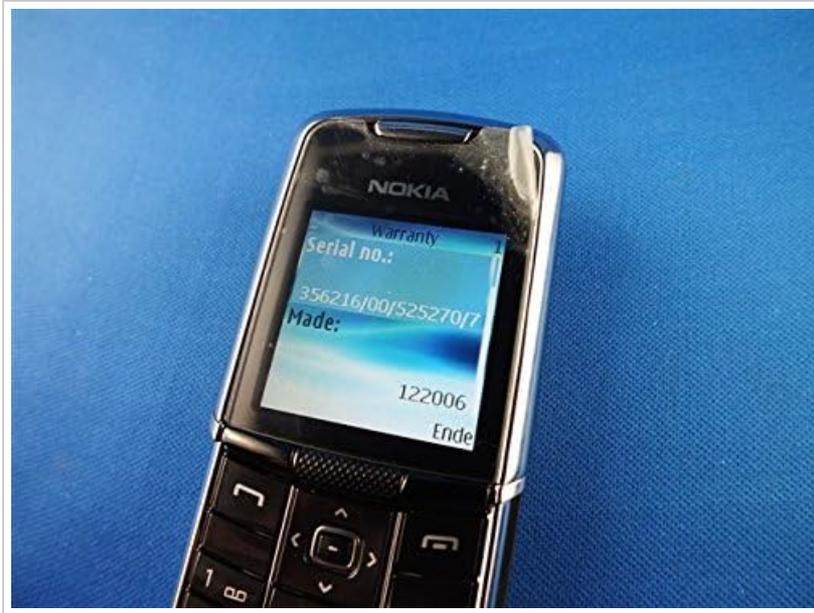
Image: The Nokia 8800 phone with its screen displaying 'Warranty' and 'Serial no.' information, useful for troubleshooting or support inquiries.

7. SPECIFICATIONS

Feature	Detail
Model Name	Nokia 8800
Operating Frequency	Tri-band GSM 900/1800/1900
Dimensions (L x W x T)	107 mm x 45 mm x 15.0 - 16.5 mm
Weight	134 g (4.7 ounces)
Display	High-resolution TFT, 256K colors, 208 x 208 pixels, 2 inches
Camera	SVGA (0.5 megapixels), QCIF video recording
Internal Memory	64MB NAND flash
Operating System	Java-based (proprietary)
Connectivity	Bluetooth, EDGE/E-GPRS Class 8, GPRS Class 8
Browser	Integrated xHTML browser
Audio Jack	No headphone jack
Form Factor	Slider
Color	Silver
Date First Available	February 13, 2007

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Nokia website. Keep your proof of purchase for any warranty claims.