Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Beurer MG 70 (647.94)

Beurer MG 70 Infrared Tapping Massager User Manual

Model: MG 70 (647.94) | Brand: Beurer

Introduction

The Beurer MG 70 Infrared Tapping Massager is designed to provide powerful and deep-acting massage for various body parts, including the shoulders, neck, back, and legs. This manual provides essential information for the safe and effective use of your device, ensuring optimal relaxation and muscle relief.

Safety Information

Important Safety Warnings:

- Always connect the device only to the voltage indicated on its nameplate.
- Do not use the device for more than 20 minutes continuously. After 20 minutes of use, switch off the device, unplug it from the power outlet, and allow it to cool down completely before further use.
- Keep the device away from water and moisture. Do not use it in damp environments.
- Do not use the device if the power cord or plug is damaged.
- Consult a doctor before use if you have any medical conditions, especially if you have a pacemaker, are pregnant, or have circulatory disorders.
- Keep out of reach of children.

Product Overview

The Beurer MG 70 is an electric tapping massager featuring optional infrared heat. It comes with a detachable handle and two interchangeable massage attachments for versatile use.

Components:

- Main Massager Unit with Infrared Light
- Detachable Handle with Velcro Strap
- Soft Massage Attachment
- Nobby Massage Attachment
- Power Cord



Image: The Beurer MG 70 massager shown with its handle attached and the two interchangeable massage attachments (soft and nobby) placed below it.



Image: Top view shows the Beurer MG 70 massager with its handle attached. Below it, the massager is shown with the handle detached, demonstrating its compact form for direct hand-held use, alongside the two massage attachments.





Image: An illustration demonstrating how the handle of the Beurer MG 70 massager can be easily detached from the main unit, allowing for both long-reach and direct hand-held massage applications.



Image: A close-up view of the two interchangeable massage attachments: one smooth, soft attachment and one nobby attachment with multiple protrusions for deeper massage.

Setup

1. **Unpack the Device:** Carefully remove the Beurer MG 70 massager and all its components from the packaging.
2. **Choose Handle Configuration:**
    - For areas like the back, neck, or shoulders, attach the handle to the main massager unit. Ensure it clicks securely into place.
    - For direct, hand-held use on areas like legs or arms, the handle can be detached. The main unit has a Velcro strap for a secure grip.
3. **Select Massage Attachment:** Choose between the soft attachment for a gentle massage or the nobby attachment for a more intense, deep-acting massage. Attach it firmly to the massage head.
4. **Connect to Power:** Plug the power cord into a suitable electrical outlet, ensuring the voltage matches the device's requirements.

Operating Instructions

The Beurer MG 70 offers versatile massage options with adjustable intensity and optional infrared heat.

1. **Power On/Off and Mode Selection:**
    - Locate the slide switch on the device.
    - Slide the switch to "OFF" to ensure the device is off before plugging in or unplugging.
    - Slide to "M" for massage only.
    - Slide to "M+H" for massage with infrared heat. The infrared light will illuminate.
2. **Adjust Massage Intensity:** Use the continuously adjustable rotary knob to increase or decrease the intensity of the tapping massage to your preference.
3. **Apply to Body Area:** Gently place the massage head on the desired body part. Move the device slowly over the area, allowing the tapping movements to work on the muscles.
4. **Recommended Usage Time:** Do not use the massager for more than 20 minutes in a single session. Prolonged use can lead to overheating and potential discomfort.
5. **After Use:** After your massage session, slide the switch to "OFF", unplug the device from the power outlet, and allow it to cool down before storing.

Application Examples:



Image: A woman using the Beurer MG 70 massager with the handle attached to reach and massage her upper back and shoulder area effectively.

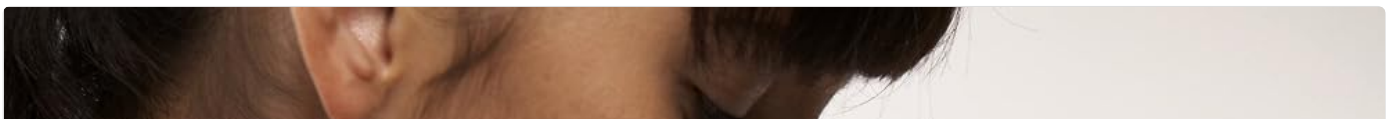




Image: A woman using the Beurer MG 70 massager without the handle, holding the main unit directly with the Velcro strap, to massage her arm.

Maintenance and Care

- **Cleaning:** Always unplug the device before cleaning. Wipe the massager unit and attachments with a slightly damp, soft cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the power cord is not tightly wrapped around the device to prevent damage.
- **Attachments:** The massage attachments can be removed for cleaning or replacement.

Troubleshooting

If you encounter issues with your Beurer MG 70 massager, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in correctly; Power outlet issue; Device switch is off.	Ensure the power cord is securely plugged into a working outlet. Check the device's power switch is in "M" or "M+H" position.
Infrared heat is not working.	Device not in "M+H" mode; Infrared light is subtle.	Ensure the switch is set to "M+H". Note that the infrared heat is designed to be gentle and may not feel intensely hot.
Massage intensity is too weak/strong.	Intensity knob setting.	Adjust the rotary knob to increase or decrease the massage intensity.
Device stops working during use.	Overheating protection activated; Power interruption.	Unplug the device and let it cool down for at least 30 minutes. Check the power connection.

If the problem persists after trying these solutions, please contact Beurer customer support.

Specifications

Model Number:	647.94
Brand:	Beurer
Product Dimensions (L x W x H):	38 x 10 x 23 cm (approx. 15 x 4 x 9 inches)
Net Product Weight:	Approx. 1 kg (2.2 lbs)
Power Source:	Electric Cable
Material:	Plastic
Special Features:	Detachable handle, Adjustable massage intensity, Optional infrared heat (approx. 45°C surface temperature at 22°C ambient)
Massage Type:	Tapping Massage
Intended Use:	Whole body massaging (neck, back, shoulders, legs, feet, arms)

Warranty and Support

For information regarding warranty coverage, product registration, or technical support, please refer to the official Beurer website or contact Beurer customer service directly. Keep your purchase receipt as proof of purchase.
Beurer Official Website: www.beurer.com

© 2024 Beurer GmbH. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B000Q7DKS6

More documents and user manuals: **https://manuals.plus/**