Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SEB 792189

Genuine Original Tefal Vitaly, Kwisto X-PRESS, Sensor Series Pressure Cooker Gasket Seal User Manual

Brand: SEB

Introduction Product Overview Compatibility Installation Maintenance Troubleshooting Specifications

1. Introduction

This manual provides essential information for the proper use, installation, and maintenance of your Genuine Original Tefal Vitaly, Kwisto X-PRESS, Sensor Series Pressure Cooker Gasket Seal. This product is a crucial component for ensuring the safe and efficient operation of your compatible pressure cooker. Please read this manual thoroughly before use to ensure optimal performance and longevity of your pressure cooker.





Figure 1: Front view of the product packaging, highlighting the gasket's compatibility with Vitaly, Optima, and Sensor series pressure cookers, and the recommendation to change the seal annually.

2. Product Overview

The Tefal Pressure Cooker Gasket Seal (Reference: 792189) is an original replacement part designed to maintain the hermetic seal of your pressure cooker. A properly functioning gasket is vital for:

- Ensuring a secure, airtight seal during pressure cooking.
- Facilitating quick and safe cooking by maintaining optimal pressure.
- Preserving the flavors and nutrients of your food.

Over time, gaskets can wear out, harden, or crack, leading to steam leakage and inefficient cooking. Regular replacement ensures your pressure cooker continues to operate safely and effectively.

3. Compatibility

This gasket seal is specifically designed for the following Tefal pressure cooker ranges:

- **Vitaly** series
- **Sensor 2** series
- **Sensor 3** series
- **Kwisto** stainless steel pressure cooker ranges
- **Optima** series

It is compatible with 4.5L, 6L, and 7.5L capacity pressure cookers with a 220mm diameter seal. Please verify your pressure cooker model and seal diameter before purchasing to ensure proper fit.

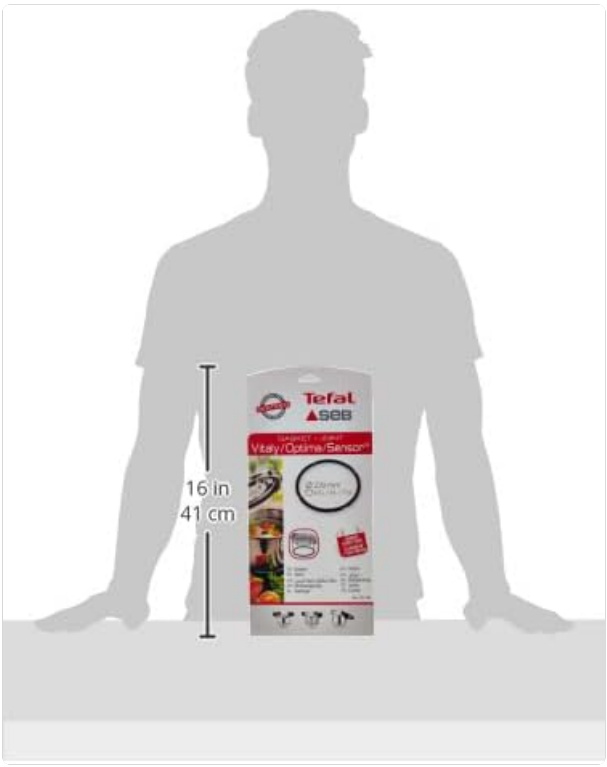


Figure 2: Size comparison of the gasket packaging, confirming its dimensions and aiding in visual identification.

4. Installation

Replacing the pressure cooker gasket is a straightforward process. Follow these steps carefully:

1. **Ensure Safety:** Make sure your pressure cooker is completely cool and depressurized before attempting to remove or install the gasket.
2. **Remove Old Gasket:** Open the pressure cooker lid. Carefully pull the old gasket out from the groove around the inner rim of the lid. It may be stiff or brittle if it's old.
3. **Clean the Groove:** Clean the gasket groove thoroughly with warm, soapy water to remove any food residue or debris. Rinse and dry completely.
4. **Install New Gasket:** Take the new Tefal gasket seal. Orient it correctly (some gaskets have a specific top/bottom or inner/outer side; refer to your pressure cooker's original manual if unsure).
5. **Seat the Gasket:** Begin by pressing a section of the new gasket into the groove on the lid. Work your way around the entire circumference, ensuring the gasket is fully and evenly seated within the groove. Do not stretch the gasket excessively.
6. **Check Fit:** Once installed, run your finger around the gasket to ensure it is flat, smooth, and securely in place without any twists or bulges.

7. **Test Seal:** Before cooking, perform a water test to ensure the new seal is working correctly. Fill the cooker with water (about 1/3 full), close the lid, and bring it to pressure. Observe for any steam leaks around the lid.



Figure 3: The Tefal pressure cooker gasket seal, ready for installation.

5. Maintenance

Proper maintenance of your gasket seal is crucial for the longevity and performance of your pressure cooker:

- **Regular Cleaning:** After each use, remove the gasket from the lid and wash it with warm, soapy water. Rinse thoroughly and allow it to air dry completely before reinserting. This prevents food particles from hardening on the gasket and affecting its seal.
- **Annual Replacement:** The manufacturer recommends changing the gasket seal once a year. Even if it appears to be in good condition, the material can degrade over time, affecting its elasticity and sealing capability. Annual replacement ensures your pressure cooker retains its optimal performance and safety features.
- **Storage:** When storing your pressure cooker, it is often recommended to store the lid inverted on the pot, or with the gasket removed, to prevent the gasket from compressing and losing its shape over long periods.

6. Troubleshooting

If you experience issues with your pressure cooker's seal, consider the following:

Problem	Possible Cause	Solution
Steam leaking from lid	Gasket is worn, cracked, or improperly seated. Food debris on gasket or rim.	Inspect gasket for damage. Re-seat gasket properly. Clean gasket and lid rim thoroughly. Replace gasket if damaged or old.

Problem	Possible Cause	Solution
Pressure not building	Poor seal due to old or damaged gasket.	Replace the gasket. Ensure the lid is closed correctly and securely.
Lid difficult to open/close	Gasket is dry, sticky, or swollen.	Clean and lubricate gasket with a thin layer of cooking oil (vegetable oil). If persistent, replace gasket.

If issues persist after replacing the gasket and following these steps, consult your pressure cooker's main instruction manual or contact the manufacturer's support.

7. Specifications

Product Type: Pressure Cooker Gasket Seal

Brand: SEB (Tefal)

Model Number: 792189

GTIN (UPC): 03045387921897

Material: Rubber / Silicone

Color: Grey / Black

Diameter: Approximately 220 mm (for 4.5L, 6L, 7.5L models)

Compatibility: Tefal Vitaly, Sensor 2, Sensor 3, Kwisto, Optima stainless steel pressure cooker ranges.

Recommended Replacement: Annually

8. Warranty and Support

As a consumable part, the gasket seal is designed for regular replacement (recommended annually). Specific warranty details for replacement parts may vary by region and retailer. Please retain your proof of purchase.
For further assistance or inquiries regarding your Tefal pressure cooker or this replacement gasket, please refer to the official Tefal or SEB website, or contact their customer support directly. You can often find contact information in your original pressure cooker manual or on the manufacturer's official website.
For more information, you may visit the official SEB website:www.seb.fr.

© 2024 SEB. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B000VQT090

More documents and user manuals: **https://manuals.plus/**