Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Towle Living 5005925

Towle Living 42-Piece Wave Cutlery Set Instruction Manual

INTRODUCTION

This manual provides essential information for the proper use and care of your Towle Living 42-Piece Wave Cutlery Set. Crafted from high-quality, heat-treated 18/0 stainless steel with a mirror finish, this set is designed for durability and a modern aesthetic. It includes service for eight, making it suitable for daily meals and entertaining.

The set features an ergonomic design with well-balanced distribution and rounded edges for comfortable handling. It is resistant to corrosion and designed for long-lasting performance.



Figure 1: Overview of the Towle Living Wave Cutlery Set components.

Setup

Upon receiving your Towle Living Wave Cutlery Set, please follow these initial steps:

1. **Unpack:** Carefully remove all pieces from their packaging. Inspect each item for any signs of damage during transit.
2. **Initial Cleaning:** Before first use, wash all cutlery pieces thoroughly. This removes any manufacturing residues. You may hand wash with warm soapy water or use a dishwasher (refer to the Maintenance section for detailed dishwasher instructions).

3. **Dry:** Ensure all pieces are completely dry before storing to prevent water spots.

Operating (Usage)

The Towle Living Wave Cutlery Set is designed for everyday dining and special occasions. Each piece serves a specific function to enhance your dining experience.

- **Dinner Fork:** Used for the main course.
- **Salad Fork:** Slightly smaller, used for salads or appetizers.
- **Dinner Knife:** Features a serrated edge for cutting various foods.
- **Dinner Spoon:** Suitable for soups, cereals, and main dishes.
- **Teaspoon:** Ideal for stirring beverages or eating desserts.
- **Serving Spoon:** Larger spoon for serving communal dishes.
- **Cold Meat Fork:** Used for serving sliced meats or other cold dishes.



Figure 2: Example of a place setting using the Towle Living Wave Cutlery.

Maintenance

Proper care ensures the longevity and appearance of your stainless steel cutlery.

Dishwasher Care

- **Loading:** Load cutlery with handles down in the dishwasher basket. Knives should be placed with blades down for safety. Avoid overcrowding.
- **Detergent:** Use a high-quality dishwasher detergent. Avoid detergents with lemon or citrus additives, as these can be corrosive to stainless steel.
- **Rinse Cycle:** If possible, use a rinse aid to minimize water spots.
- **Prompt Removal:** Remove cutlery from the dishwasher as soon as the cycle is complete. Hand dry immediately with a soft cloth to prevent water spots and maintain the mirror finish.

- **Avoid Contact:** When washing, try to prevent pieces from touching each other, especially with harsh detergents, as this can sometimes lead to discoloration or pitting.

Hand Washing

- **Warm Soapy Water:** Wash cutlery in warm water with a mild dish soap.
- **Soft Cloth/Sponge:** Use a soft cloth or sponge to clean. Avoid abrasive scrubbers that can scratch the surface.
- **Rinse Thoroughly:** Rinse all soap residue completely.
- **Immediate Drying:** Dry immediately with a soft, clean towel to prevent water spots and maintain shine.

Storage

Store cutlery in a dry environment. A cutlery tray or drawer organizer can help prevent scratching and keep pieces separated.

Troubleshooting

Most common issues with stainless steel cutlery can be resolved with proper care.

- **Water Spots/Streaks:** These are typically caused by minerals in water drying on the surface. To prevent, always towel dry immediately after washing, especially after machine washing. For existing spots, a solution of white vinegar and water can help, followed by thorough rinsing and drying.
- **Discoloration/Pitting:** This can occur from prolonged contact with acidic foods, harsh detergents, or if cutlery is left wet for extended periods. Ensure cutlery is rinsed promptly after use and dried thoroughly. Avoid leaving cutlery soaking in water or with food residues.
- **Scratches:** Stainless steel can scratch. Avoid using abrasive cleaners or steel wool. Store cutlery in a way that prevents pieces from rubbing against each other.

Specifications

Feature	Detail
Brand	Towle Living
Model Number	5005925
Material	18/0 Stainless Steel
Finish Type	Mirror Finish
Color	Silver
Number of Pieces	42
Service For	8 people
Components Included	8 Dinner Forks, 8 Salad Forks, 8 Dinner Knives, 8 Dinner Spoons, 8 Teaspoons, 1 Serving Spoon, 1 Cold Meat Fork
Care Instructions	Dishwasher Safe (Hand drying recommended for best results)
Stain Resistant	Yes

Dimensions



Figure 3: Dimensions of individual cutlery pieces.

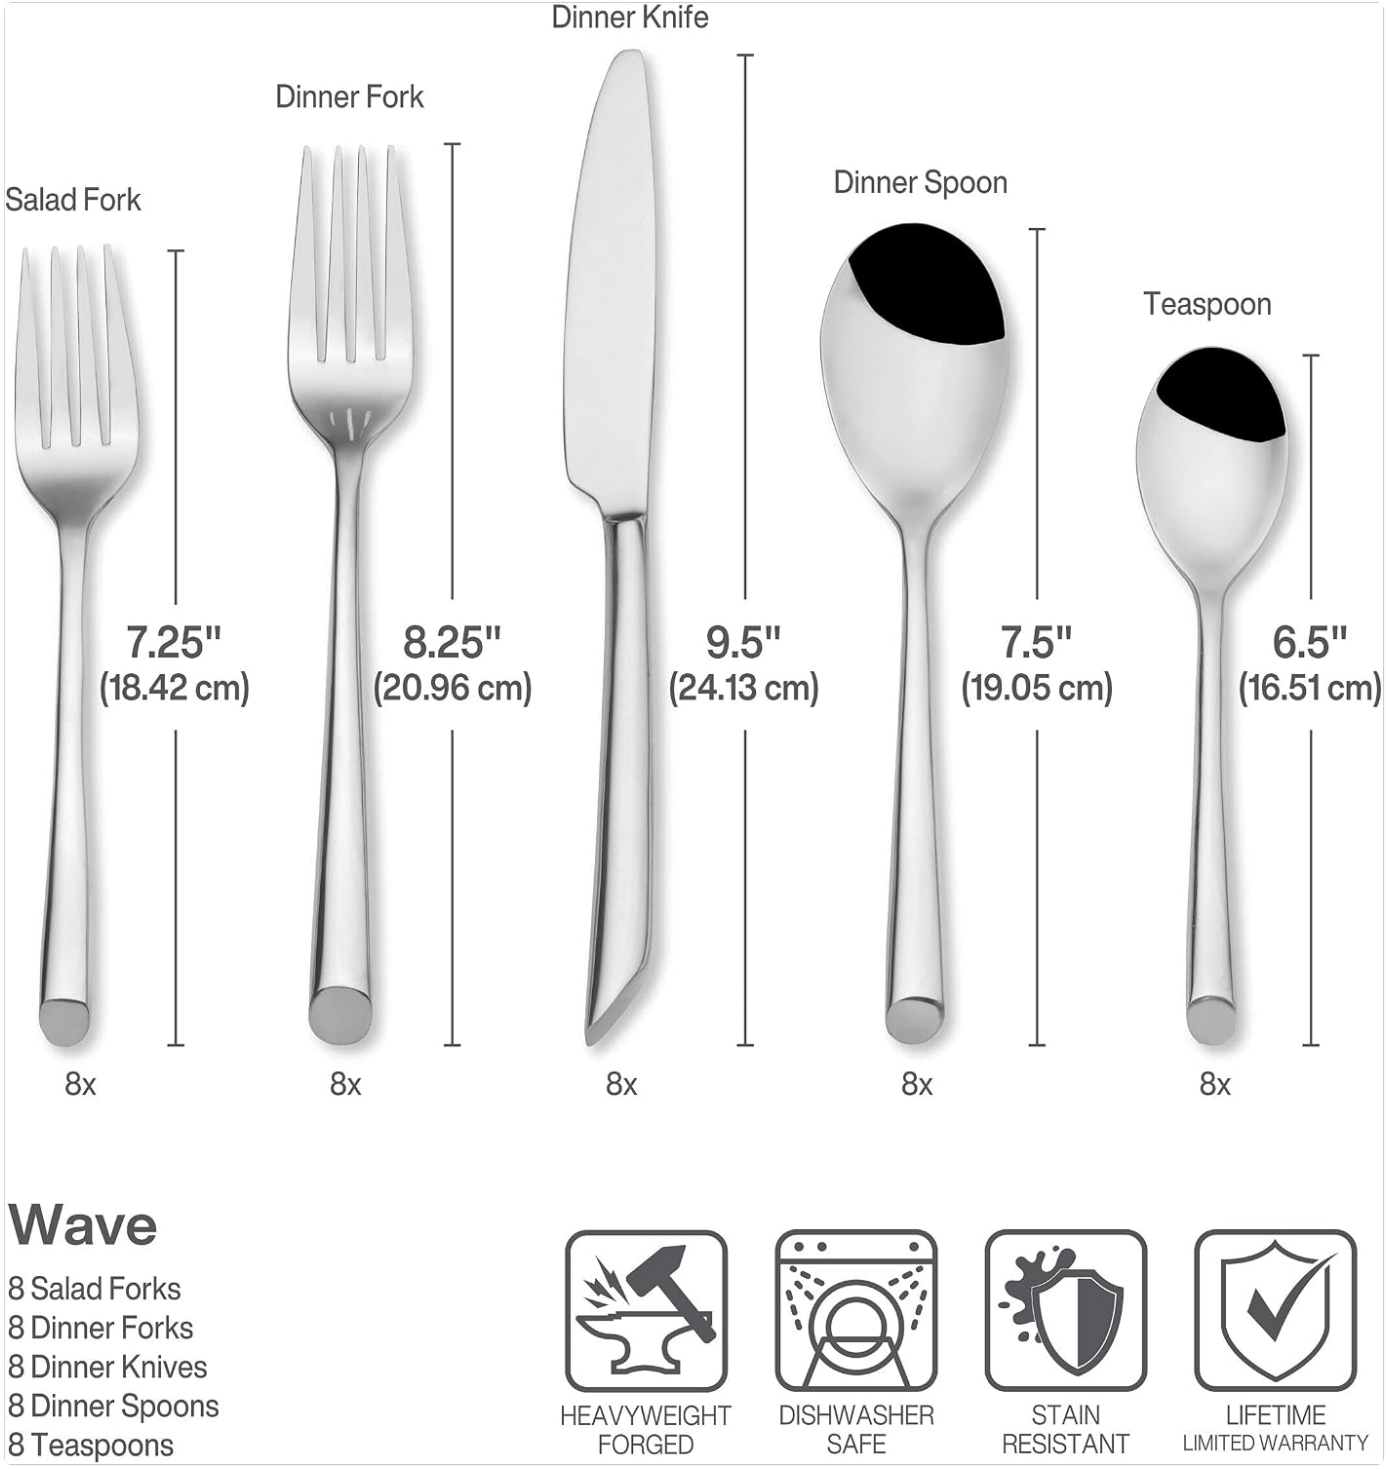


Figure 4: Dimensions of serving cutlery pieces.

Warranty & Support

The Towle Living 42-Piece Wave Cutlery Set comes with a**Lifetime Limited Warranty**. This warranty covers manufacturing defects under normal household use. Please retain your proof of purchase for warranty claims.
For warranty service or product support, please contact the manufacturer, Lifetime Brands, directly. Contact information can typically be found on the product packaging or their official website.
Note: Warranty terms and conditions may vary. Refer to the official warranty documentation included with your product for complete details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B000XRKIZ2

More documents and user manuals: **https://manuals.plus/**