SentrySafe X125

SentrySafe X125 Home Safe Instruction Manual

Model: X125

Brand: SentrySafe

1. Introduction

The SentrySafe X125 Home Safe is designed to provide secure storage for your valuables, important documents, and personal items. Featuring a digital keypad and solid steel construction for enhanced security, this safe offers peace of mind by protecting your belongings from unauthorized access.

This manual provides detailed instructions for setting up, operating, and maintaining your SentrySafe X125. Please read it thoroughly before using your safe.



Image: The SentrySafe X125 Home Safe with its door open, revealing the interior storage space and the digital keypad on the exterior.

2. Important Safety Information

- **Override Keys:** Always store the override keys in a secure location away from the safe.*Never store the override keys inside the safe.*
- **Child Safety:** Keep the safe out of reach of children to prevent unauthorized access to its contents.
- **Battery Safety:** Use only the specified battery type (AA alkaline batteries). Do not mix old and new batteries, or different types of batteries. Remove batteries if the safe will not be used for an extended period.
- **Mounting:** Ensure the safe is securely mounted to a stable surface if utilizing the bolt-down feature, to prevent it from being easily removed.

3. Setup

3.1 Unboxing and Initial Inspection

Carefully remove the safe from its packaging. Verify that all components are present:

- SentrySafe X125 Security Safe
- Two Override Keys
- Removable Shelf
- Mounting Hardware (bolts, washers)

Inspect the safe for any signs of damage. If any components are missing or damaged, contact SentrySafe customer support immediately.

3.2 Battery Installation

The digital keypad requires 4 AA alkaline batteries (not included) for operation. The battery compartment is located on the inside of the safe door.

1. Open the safe using one of the override keys.
2. Locate the battery compartment cover on the inside of the door.
3. Slide the cover off to reveal the battery slots.
4. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-).
5. Replace the battery compartment cover.



Image: A close-up view of the digital keypad on the SentrySafe X125, showing the number buttons and indicator lights.

3.3 Mounting the Safe (Optional)

For added security, the SentrySafe X125 can be bolted down to a floor or wall. The necessary mounting hardware is included.

1. Choose a suitable location for mounting. Ensure there are no electrical wires or plumbing in the drilling area.
2. Open the safe door.
3. Locate the pre-drilled holes on the back or bottom of the safe.
4. Position the safe and mark the drilling points on the surface.
5. Drill pilot holes into the mounting surface using an appropriate drill bit.
6. Align the safe with the drilled holes and secure it using the provided bolts and washers. Tighten firmly.



Image: The SentrySafe X125 Home Safe is shown placed on a shelf within a closet, demonstrating a common installation location.

4. Operating Instructions

4.1 Setting Your Personal Combination

Your safe comes with a factory preset code. It is highly recommended to change this to a personal combination immediately.

1. With the safe door open, press the red reset button located on the inside of the door, near the hinge.
2. The yellow light on the keypad will illuminate, indicating the safe is ready to accept a new code.
3. Enter your new 3-8 digit personal combination on the keypad.
4. Press the "#" (pound) button to confirm. The green light will flash, indicating successful programming.
5. Test your new code with the door open to ensure it works correctly before closing the safe.

4.2 Opening the Safe

To open the safe using your digital combination:

1. Enter your personal 3-8 digit combination.
2. Press the "#" (pound) button.
3. Within 5 seconds, turn the knob clockwise to open the door.

To open the safe using the override key:

1. Locate the keyhole cover on the keypad panel.
2. Gently remove the cover to expose the keyhole.
3. Insert the override key and turn it clockwise while simultaneously turning the knob clockwise to open the door.

4.3 Closing and Locking the Safe

To close and lock the safe:

1. Close the safe door firmly.
2. Turn the knob counter-clockwise until it clicks into the locked position.
3. The safe is now securely locked. No code entry is required to lock the safe.

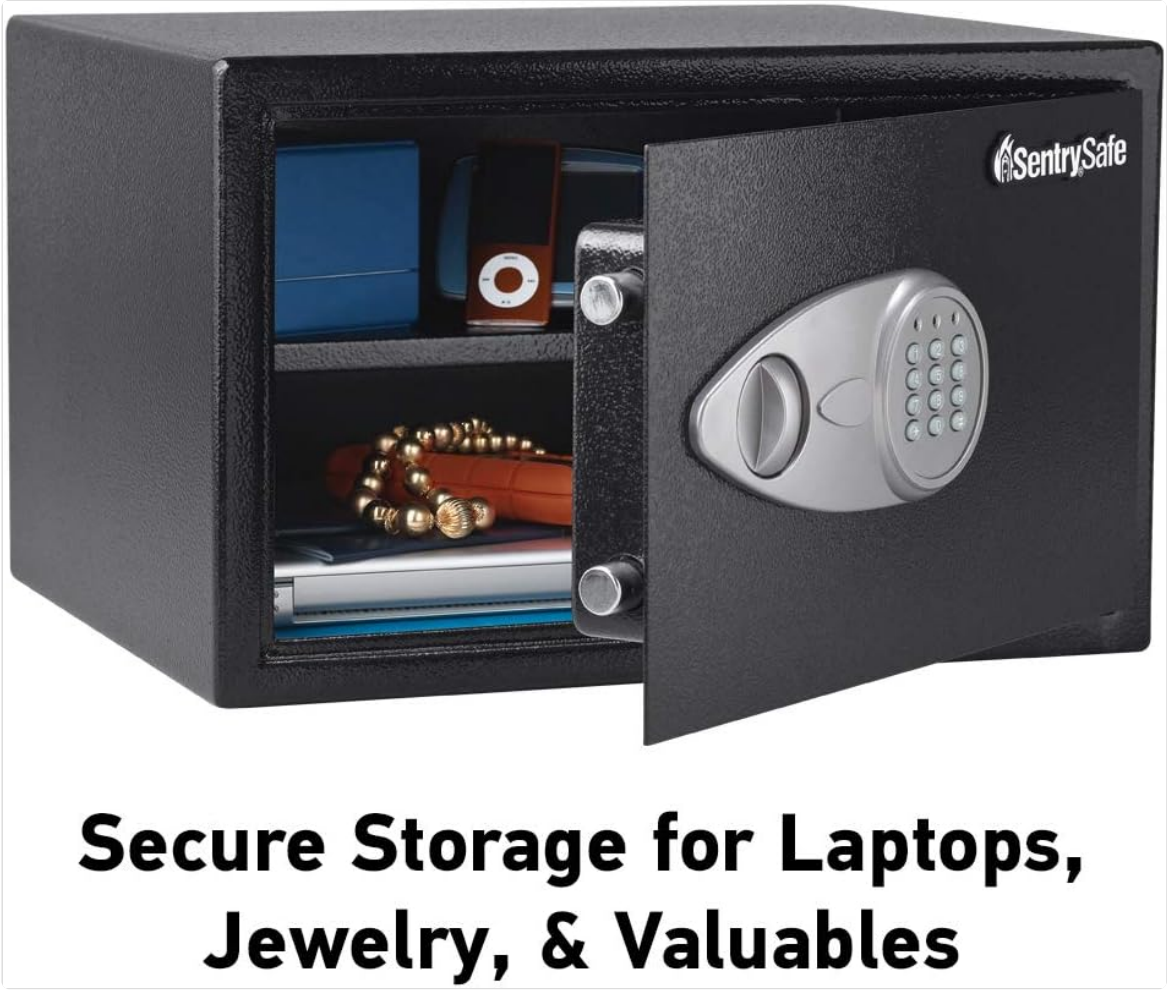


Image: The interior of the SentrySafe X125, showing a removable shelf and various items like jewelry, a laptop, and documents, illustrating its storage capacity.

Your browser does not support the video tag.

Video: An official SentrySafe video demonstrating the features and security aspects of the safe, including its solid construction and ease of use.

5. Maintenance

5.1 Battery Replacement

When the batteries are low, the red light on the keypad will flash or the keypad may not respond. Replace all 4 AA alkaline batteries promptly to ensure continuous operation.

1. Open the safe door.
2. Remove the battery compartment cover.
3. Remove the old batteries and dispose of them properly.
4. Insert 4 new AA alkaline batteries, observing correct polarity.
5. Replace the battery compartment cover.

5.2 Cleaning

To clean the exterior of your safe, use a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish.

6. Troubleshooting

Problem	Possible Cause	Solution
Safe will not open with digital code.	Incorrect code entered; low batteries; temporary lockout.	Re-enter code carefully. Replace batteries. Wait 2-3 minutes if locked out, then try again. Use override key.
Keypad lights are dim or not lighting up.	Low or dead batteries.	Replace all 4 AA alkaline batteries.
Safe is locked and override keys are inside.	Improper key storage.	Contact SentrySafe customer support for assistance. (This highlights the importance of not storing keys inside).

7. Specifications

Feature	Detail
Brand	SentrySafe
Model Number	X125
Exterior Dimensions (W x D x H)	16.9" x 14.6" x 10.6"
Interior Dimensions (W x D x H)	16.8" x 11.6" x 10.5"
Capacity	1.18 Cubic Feet

Feature	Detail
Item Weight	27 Pounds
Lock Type	Electronic Digital Keypad with Override Key
Material	Alloy Steel
Special Features	Bolt Down Capability, Removable Shelf, Charger Cord Access

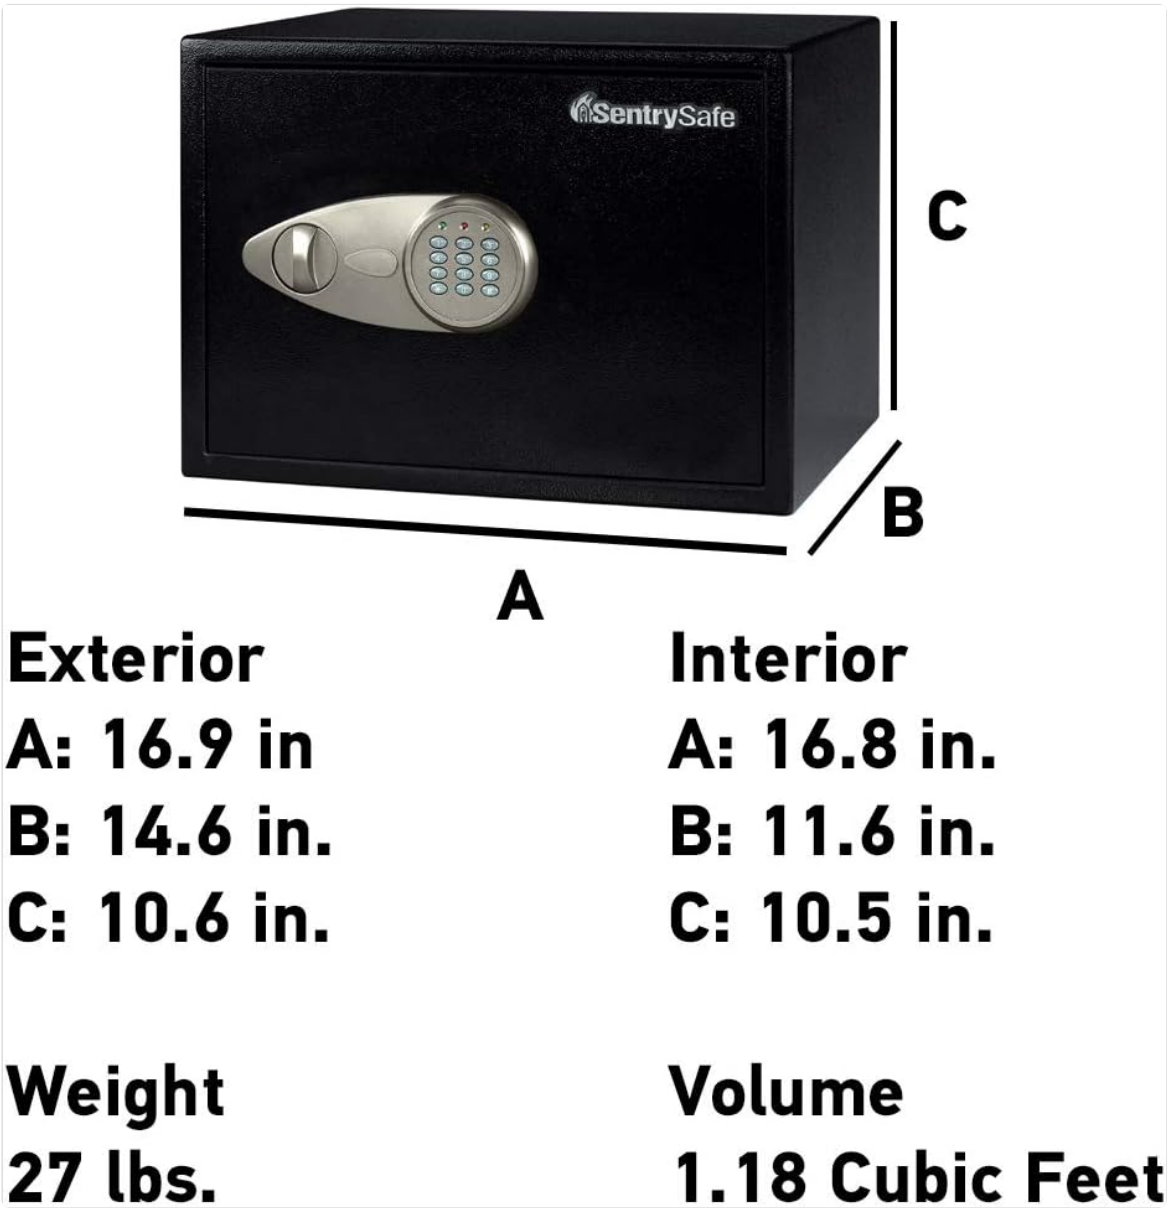


Image: A diagram illustrating the exterior and interior dimensions (width, depth, height) and weight of the SentrySafe X125.

8. Warranty and Support

The SentrySafe X125 Home Safe comes with a Limited One Year Warranty. For detailed warranty information, product support, or to order replacement parts (such as keys), please refer to the official SentrySafe User Manual PDF or visit the SentrySafe website.

Official User Manual (PDF): Download Here

For further assistance, contact SentrySafe customer support.