Bissell 1400B

BISSELL Little Green Multi-Purpose Portable Carpet and Upholstery Cleaner

Model: 1400B

Brand: Bissell

1. Introduction

The BISSELL Little Green Multi-Purpose Portable Carpet and Upholstery Cleaner (Model 1400B) is engineered for effective spot and stain removal on various surfaces, including carpets, upholstery, and car interiors. Its powerful spray, scrub, and suction capabilities make it an ideal tool for tackling small messes and refreshing fabrics. This lightweight and versatile deep cleaner is designed for convenient use throughout your home and vehicle.



Image: BISSELL Little Green Multi-Purpose Portable Carpet and Upholstery Cleaner with included accessories.

2. Included Components

Your BISSELL Little Green cleaner comes with the following components:

- **Trial-Size Formula:** A small bottle of cleaning solution to get you started.



Image: Trial-size bottle of BISSELL cleaning formula.

- **HydroRinse Self-Cleaning Tool:** An attachment designed to clean the machine's hose after use.



Image: HydroRinse Self-Cleaning Tool for hose maintenance.

- **3" Tough Stain Tool:** A specialized nozzle with bristles for effective scrubbing and suction of tough stains.



Image: 3-inch Tough Stain Tool with integrated brush.

3. Setup

Before first use, or when the clean water tank is empty, follow these steps:

1. Locate the clean water tank on the left side of the machine.
2. Remove the tank by lifting it straight up.
3. Unscrew the black cap at the bottom of the tank.
4. Fill the tank with clean water up to the 'Water' fill line.
5. Add the recommended BISSELL cleaning formula up to the 'Formula' fill line.
6. Securely replace the black cap and insert the tank back into the machine until it clicks into place.



Image: Filling the clean water and solution tank. Ensure water and formula lines are followed.

4. Operating Instructions

To effectively clean stains and spots:

1. Plug the machine into a grounded electrical outlet.
2. Turn on the power switch located on the top of the machine.
3. To spray cleaning solution, press the trigger on the underside of the hose nozzle. Apply solution generously to the stained area.
4. Use the integrated brush on the nozzle to gently scrub the fabric, working the solution into the stain.
5. Release the spray trigger. Firmly press the nozzle onto the surface and pull it slowly towards you to suction up the dirty solution and moisture. Repeat as necessary until the stain is removed and the area is as dry as possible.

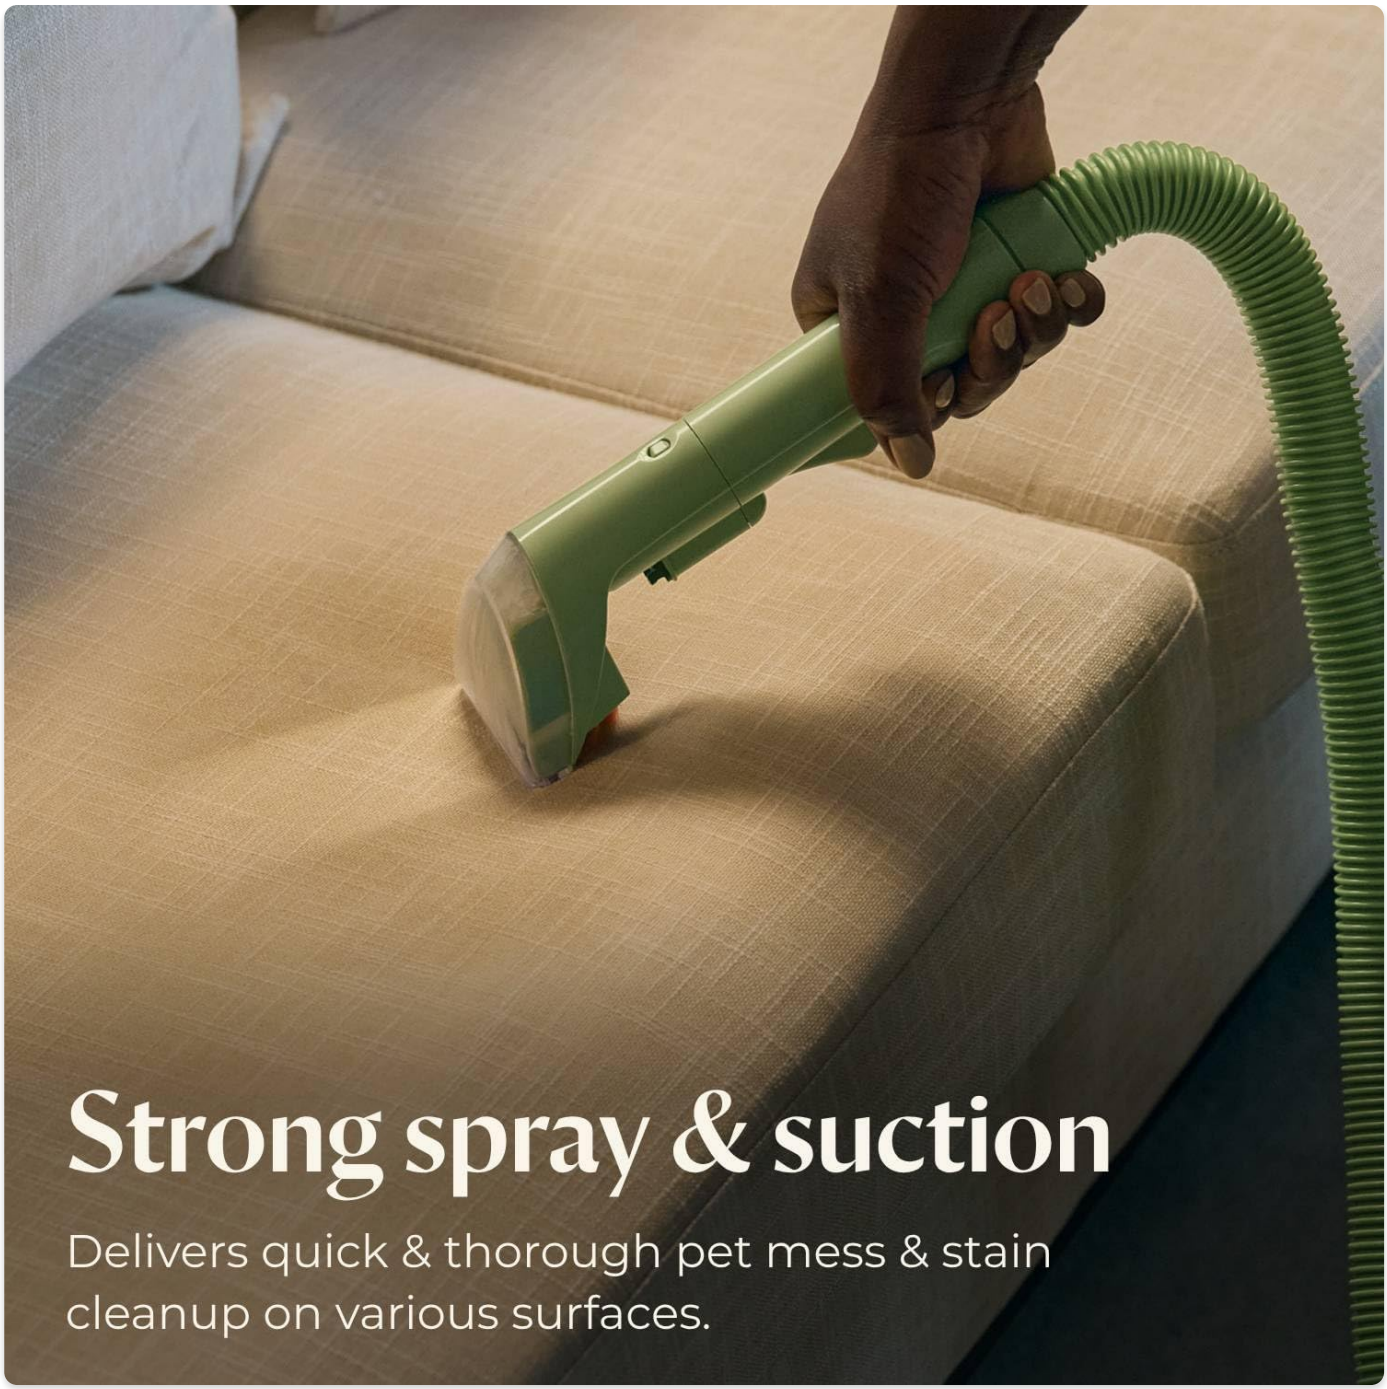


Image: Operating the cleaner on upholstery, demonstrating strong spray and suction.

5. Maintenance

Regular maintenance ensures the longevity and optimal performance of your cleaner:

5.1 Emptying the Dirty Water Tank

1. The dirty water collection tank is located on the right side of the machine.
2. When the 'FULL' line is reached, or after each use, remove the tank by lifting it straight up.
3. Carefully empty the dirty water into a sink or toilet.
4. Rinse the tank thoroughly with clean water to remove any residue.
5. Replace the empty tank securely back into the machine.



Image: Emptying the dirty water tank after cleaning. The tank shows collected dirty water.

5.2 Cleaning the Hose with HydroRinse Tool

1. After emptying the dirty water tank, attach the HydroRinse Self-Cleaning Tool to the end of the hose.
2. Turn on the machine's power.
3. Hold the HydroRinse tool over a sink or bucket and press the spray trigger to flush clean water through the hose.
4. Continue flushing until the water running through the tool appears clear, indicating the hose is clean.
5. Turn off the machine and detach the HydroRinse tool.

6. Troubleshooting

If you encounter issues with your BISSELL Little Green cleaner, try these common solutions:

- **No Spray:** Check if the clean water tank is properly seated and filled with water and solution. Ensure the spray trigger on the nozzle is fully depressed.

- **Weak Suction:** Verify that the dirty water tank is not full. Ensure the nozzle is pressed firmly against the surface to create a proper seal for suction. Check the hose for any blockages.
- **Machine Not Turning On:** Confirm the power cord is securely plugged into a working electrical outlet. Check the power switch is in the 'ON' position.

7. Specifications

Feature	Detail
Brand	Bissell
Model Name	Bissell Multi-Purpose Portable Carpet and Upholstery Cleaner, 1400B
Item Model Number	1400B
Color	Green
Item Weight	9.7 Pounds
Product Dimensions	8.25"D x 17.25"W x 12.5"H
Clean Tank Capacity	48 oz.
Power Source	Corded
Included Components	Trial-Size Formula, HydroRinse Self-Cleaning Tool, 3" Tough Stain Tool

8. Warranty & Support

The BISSELL Little Green Multi-Purpose Portable Carpet and Upholstery Cleaner comes with a**1-year limited warranty**. For detailed instructions, troubleshooting, and further support, please refer to the officialUser Guide (PDF) available online. You may also visit the official Bissell website for additional resources and customer service.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question