
Warner Home Video 1000036331

Escape from Fort Bravo (DVD) User Manual

Model: 1000036331 | Brand: Warner Home Video

1. Introduction

This document serves as a comprehensive guide for the "Escape from Fort Bravo" DVD. It provides essential information for setting up, operating, and maintaining your DVD to ensure optimal viewing experience. "Escape from Fort Bravo" is a Western film set during the United States' Civil War, featuring a compelling narrative of escape, pursuit, and unexpected romance.

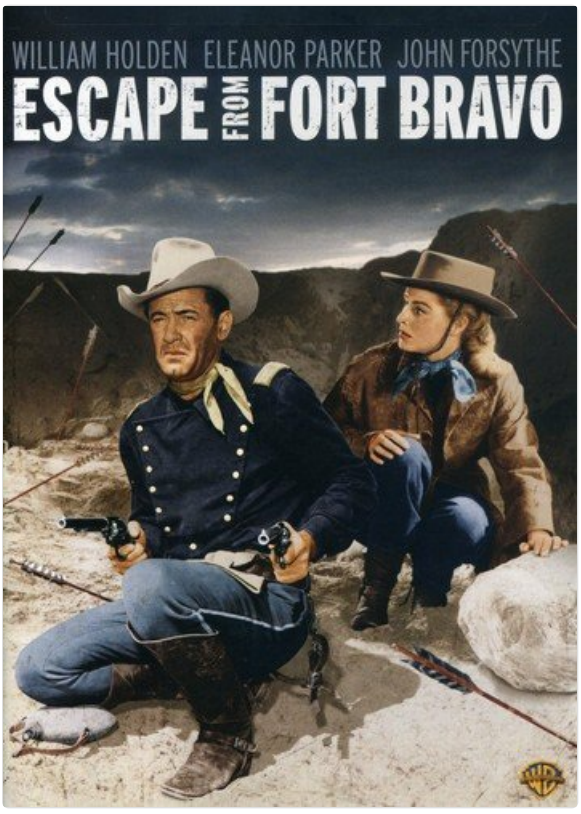

The DVD cover displays the film's title, 'Escape from Fort Bravo', prominently. It features two main characters, a male figure in a Union Army uniform holding two pistols, and a female figure in period Western clothing, both appearing to be in a desert

landscape with arrows on the ground, suggesting action and conflict.

2. Setup

To begin enjoying your "Escape from Fort Bravo" DVD, follow these simple steps:

1. **Prepare Your DVD Player:** Ensure your DVD player is connected to your television or display device and is powered on. Refer to your DVD player's manual for specific connection instructions.
2. **Inspect the DVD:** Gently remove the "Escape from Fort Bravo" DVD from its case. Check the disc's surface for any visible smudges, dust, or scratches. If necessary, clean the disc as described in the Maintenance section.
3. **Insert the DVD:** Open the disc tray or slot on your DVD player and carefully insert the DVD with the label side facing up. Close the disc tray or allow the player to pull the disc in.
4. **Select Input:** On your television, select the correct input source (e.g., HDMI 1, AV, Component) that corresponds to your DVD player's connection.

3. Operating Instructions

Once the DVD is loaded, you can navigate and play the film:

- **Main Menu:** The DVD will typically load to a main menu. Use your DVD player's remote control (directional arrows and Enter/OK button) to navigate through options such as "Play Movie," "Scene Selection," "Language Settings," and "Special Features."
- **Play Movie:** Select "Play Movie" to start the film from the beginning.
- **Scene Selection:** If you wish to start from a specific part of the film, select "Scene Selection" and choose your desired scene.
- **Language Settings:** The DVD supports English audio (Mono) and English subtitles. To change these settings, select "Language Settings" from the main menu or use the Audio/Subtitle buttons on your remote during playback.
- **Playback Controls:** Use the standard playback controls on your remote (Play, Pause, Stop, Fast Forward, Rewind, Skip) to control the movie.

4. Maintenance

Proper care of your DVD will ensure its longevity and continued performance:

- **Handling:** Always hold the DVD by its edges or by inserting a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe the playback surface with a soft, lint-free cloth (e.g., microfiber cloth). Wipe from the center of the disc outwards in straight lines, not in a circular motion. Do not use abrasive cleaners or solvents.

- **Storage:** Store the DVD in its original case when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity, as these can damage the disc.
- **Avoid Scratches:** Place the disc on a clean, soft surface if it must be laid down outside its case. Avoid stacking discs without their cases.

5. Troubleshooting

If you encounter issues with your "Escape from Fort Bravo" DVD, consider the following common solutions:

- **Disc Not Playing/Skipping:**
  - Ensure the disc is clean and free of smudges or debris. Clean it as described in the Maintenance section.
  - Check if the disc is inserted correctly into the DVD player (label side up).
  - Try playing another DVD to determine if the issue is with the disc or the player.
- **No Audio/Video:**
  - Verify all cables connecting the DVD player to the television are securely plugged in.
  - Ensure your television is set to the correct input source.
  - Check the audio settings on your DVD player and television.
- **Menu Navigation Issues:**
  - Ensure your remote control batteries are not depleted.
  - Point the remote directly at the DVD player.

If problems persist after attempting these solutions, consult your DVD player's user manual or contact the manufacturer of your DVD player for further assistance.

6. Specifications

Feature	Detail
MPAA Rating	NR (Not Rated)
Product Dimensions	8 x 5.5 x 0.75 inches
Item Model Number	1000036331
Run Time	1 hour and 38 minutes
Release Date	August 26, 2008
Language	English (Mono)
Subtitles	English
Number of Discs	1

7. Warranty and Support

For information regarding warranty coverage or technical support for your "Escape from Fort Bravo" DVD, please refer to the packaging or contact Warner Home Video directly. Contact details can typically be found on the official Warner Home Video website or through their customer service channels.

© 2024 Warner Home Video. All rights reserved.