MEDCENTER 73202

Your Minder Voice Record and Alarm Replay Reminder Clock

Model: 73202
Brand: MEDCENTER

Product Overview

The Your Minder Voice Record and Alarm Replay Reminder Clock is designed to assist users with daily tasks and medication reminders through personalized voice messages and loud alarms. It offers a simple, direct function for aiding in medication compliance and other routine activities.



Image: The Your Minder Voice Record and Alarm Replay Reminder Clock with its power adapter.

- **TALKING ALARM CLOCK:** Pre-record and playback up to 6 custom reminders throughout the day.
- **6 DAILY ALARMS:** Set up to 6 alarms with "loud" and "extra loud" settings and a large-type backlight display.
- **EASY TO SET:** Features easy set controls and does not require a smartphone or app.
- **QUALITY MADE:** Proudly made by MedCenter Systems, focusing on medication compliance.

Setup

Powering the Device

The Your Minder clock can be powered using the included AC adapter or with 2 AA batteries (included) for backup. Ensure batteries are inserted correctly into the battery compartment located on the back of the unit.



Image: The AC power adapter for the clock.

Setting Time & Calendar

To set the current time and date, refer to the detailed instructions and diagram below. The controls are located on the back of the clock.

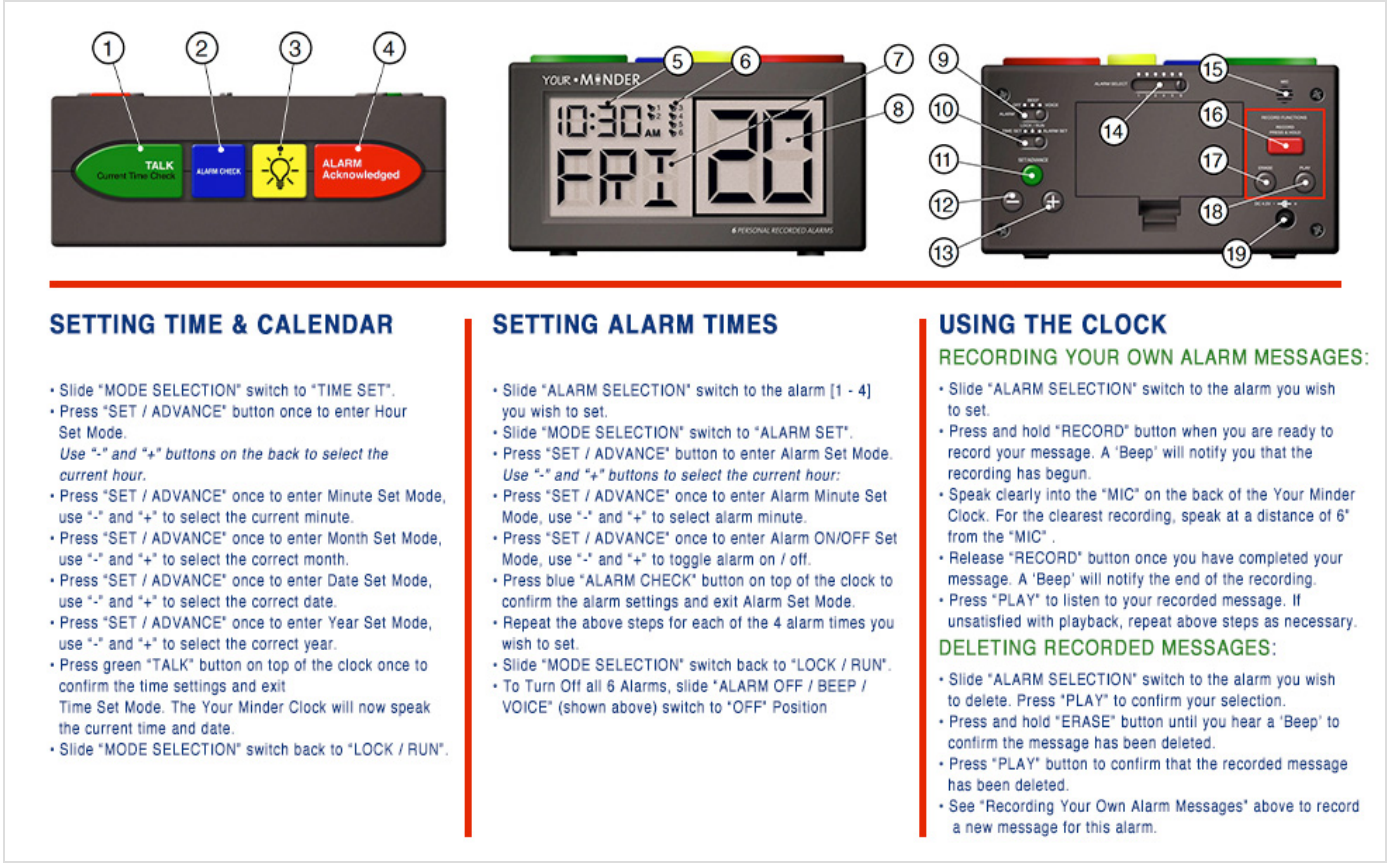


Image: Detailed diagram of the back panel controls for setting time and alarms.

1. Slide "MODE SELECTION" switch to "TIME SET".
2. Press "SET / ADVANCE" button once to enter Hour Set Mode. Use "+" and "-" buttons on the back to select the current hour.
3. Press "SET / ADVANCE" once to enter Minute Set Mode, use "+" and "-" to select the current minute.
4. Press "SET / ADVANCE" once to enter Month Set Mode, use "+" and "-" to select the correct month.
5. Press "SET / ADVANCE" once to enter Date Set Mode, use "+" and "-" to select the correct date.
6. Press "SET / ADVANCE" once to enter Year Set Mode, use "+" and "-" to select the correct year.
7. Press green "TALK" button on top of the clock once to confirm the time settings and exit Time Set Mode. The Your Minder Clock will now speak the current time and date.
8. Slide "MODE SELECTION" switch back to "LOCK / RUN".

Operating Instructions

Setting Alarm Times

The clock allows for up to 6 daily alarms. Follow these steps to set each alarm:

1. Slide "ALARM SELECTION" switch to the alarm number (1-6) you wish to set.
2. Slide "MODE SELECTION" switch to "ALARM SET".
3. Press "SET / ADVANCE" button to enter Alarm Set Mode. Use "+" and "-" buttons to select the current hour.
4. Press "SET / ADVANCE" once to enter Alarm Minute Set Mode, use "+" and "-" to select the current minute.
5. Press "SET / ADVANCE" once to toggle alarm On/Off Set Mode, use "+" and "-" to toggle alarm on or off.
6. Press blue "ALARM CHECK" button on top of the clock to confirm the alarm settings and exit Alarm Set Mode.
7. Repeat the above steps for each of the 6 alarm times you wish to set.
8. Slide "MODE SELECTION" switch back to "LOCK / RUN".
9. To Turn Off all 6 Alarms, slide "ALARM OFF / BEEP / VOICE" switch to "OFF" Position.

Recording Your Own Alarm Messages

Personalize your reminders by recording custom messages for each alarm. The microphone is located on the back of the unit.



Image: The back of the clock highlighting the record, erase, and play buttons.

1. Slide "ALARM SELECTION" switch to the alarm you wish to set.
2. Press and hold "RECORD" button until you hear a "Beep" to confirm the recording has begun.
3. Speak clearly into the "MIC" on the back of Your Minder Clock. For the clearest recording, speak at a distance of 6" from the "MIC".
4. Release "RECORD" button once you have completed your message. A "Beep" will notify the end of the recording.
5. Press "PLAY" to listen to your recorded message. If unsatisfied with playback, repeat above steps as necessary.

Deleting Recorded Messages

1. Slide "ALARM SELECTION" switch to the alarm you wish to delete.
2. Press and hold "ERASE" button until you hear a "Beep" to confirm the message has been deleted.
3. Press "PLAY" button to confirm that the recorded message has been deleted.
4. See "Recording Your Own Alarm Messages" above to record a new message for this alarm.

Checking Current Time and Alarms

Use the top buttons for quick checks:

- Press the **TALK (Current Time Check)** button to hear the current time and date.
- Press the **ALARM CHECK** button to hear the next set alarm time.
- Press the **ALARM Acknowledged** button to silence a sounding alarm.



Image: The front display and top control buttons of the clock.

Maintenance

Battery Replacement

The clock uses 2 AA batteries for backup power. If the display dims or the voice prompts become unclear when not connected to the AC adapter, it may be time to replace the batteries. Open the battery compartment on the back of the unit and replace with fresh AA batteries, observing polarity.

Cleaning

Wipe the clock's exterior with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.

Troubleshooting

Problem	Possible Cause / Solution

Problem	Possible Cause / Solution
Clock not turning on or display is blank.	Ensure the AC adapter is securely plugged in. Check if batteries are inserted correctly and are not depleted.
Alarm is not sounding or voice message is not playing.	Verify that the alarm is set to "ON" for the desired time. Check the "ALARM OFF / BEEP / VOICE" switch on the back; ensure it is not in the "OFF" position. If using voice, ensure it's set to "VOICE" and a message has been recorded for that alarm.
Alarm volume is too low.	The clock has "loud" and "extra loud" settings. Ensure the environment is quiet enough. There is no external volume control knob.
Recorded message is unclear or distorted.	Re-record the message, speaking clearly and at a distance of approximately 6 inches from the microphone. Ensure there is no background noise during recording.
Alarm continues to sound after acknowledgement.	Ensure the "ALARM Acknowledged" button is pressed firmly. The alarm is designed to repeat every few minutes until acknowledged.

Specifications

- **Brand:** MEDCENTER
- **Model Number:** 73202
- **Display Type:** Digital
- **Power Source:** Electrical (AC Adapter included), 2 AA batteries (included) for backup
- **Product Dimensions:** 1.75"W x 2.75"H (Note: Image shows 5.00" length)
- **Item Weight:** 10 Ounces
- **Material:** Acrylonitrile Butadiene Styrene (Plastic)
- **Special Features:** Easy set functionality, Loud alarm sounds, Multiple alarms, Voice recording for personalized alarms and reminders.



Image: The clock with its dimensions indicated: 5.00" length, 1.75" width, 2.75" height.

Warranty and Support

For warranty information or technical support, please contact MedCenter Systems directly. Refer to the product packaging or the official MedCenter website for contact details.

MedCenter Systems: Visit the MEDCENTER Store on Amazon

© 2025 MEDCENTER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question