Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Peanuts WHV1000045886DVD

Peanuts: Snoopy's Reunion: Deluxe Edition DVD Instruction Manual

Model: WHV1000045886DVD

1. Introduction

This instruction manual provides essential information for the proper use and enjoyment of your Peanuts: Snoopy's Reunion: Deluxe Edition DVD. Please read this manual thoroughly before operating the DVD to ensure optimal performance and longevity of the product.

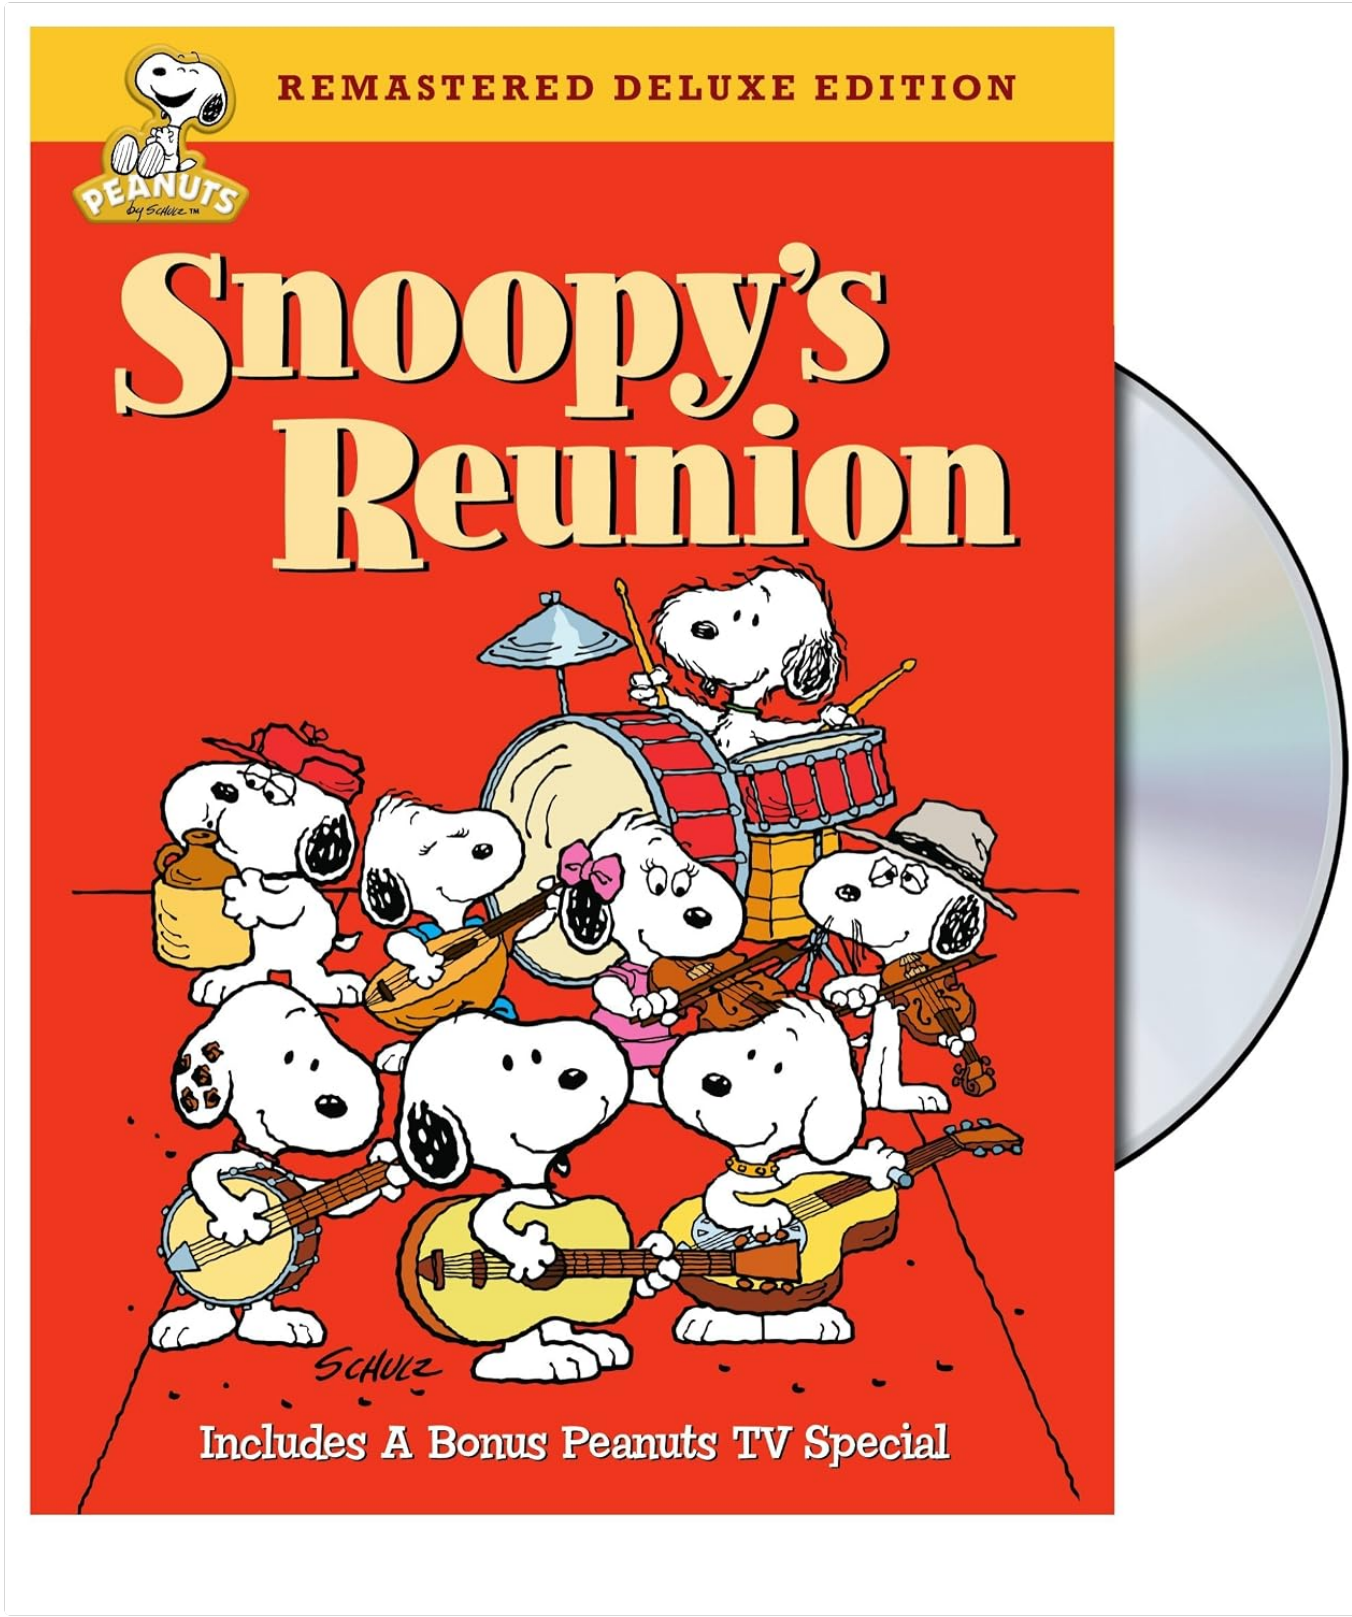


Image 1.1: Front cover of the Peanuts: Snoopy's Reunion: Deluxe Edition DVD.

2. Product Overview

The Peanuts: Snoopy's Reunion: Deluxe Edition DVD features the classic animated special "Snoopy's Reunion" and includes bonus content. This edition is designed for standard DVD players and offers a remastered viewing experience.

2.1 Key Features

- Main Feature: Snoopy's Reunion
- Bonus Content: "Together Again: The Peanuts Voice-Cast Reunion"

- Format: DVD, NTSC, Color, Animated
- Audio: English (Dolby Digital 1.0), Japanese (Dolby Digital 1.0)
- Subtitles: English, French, Japanese, Korean, Thai

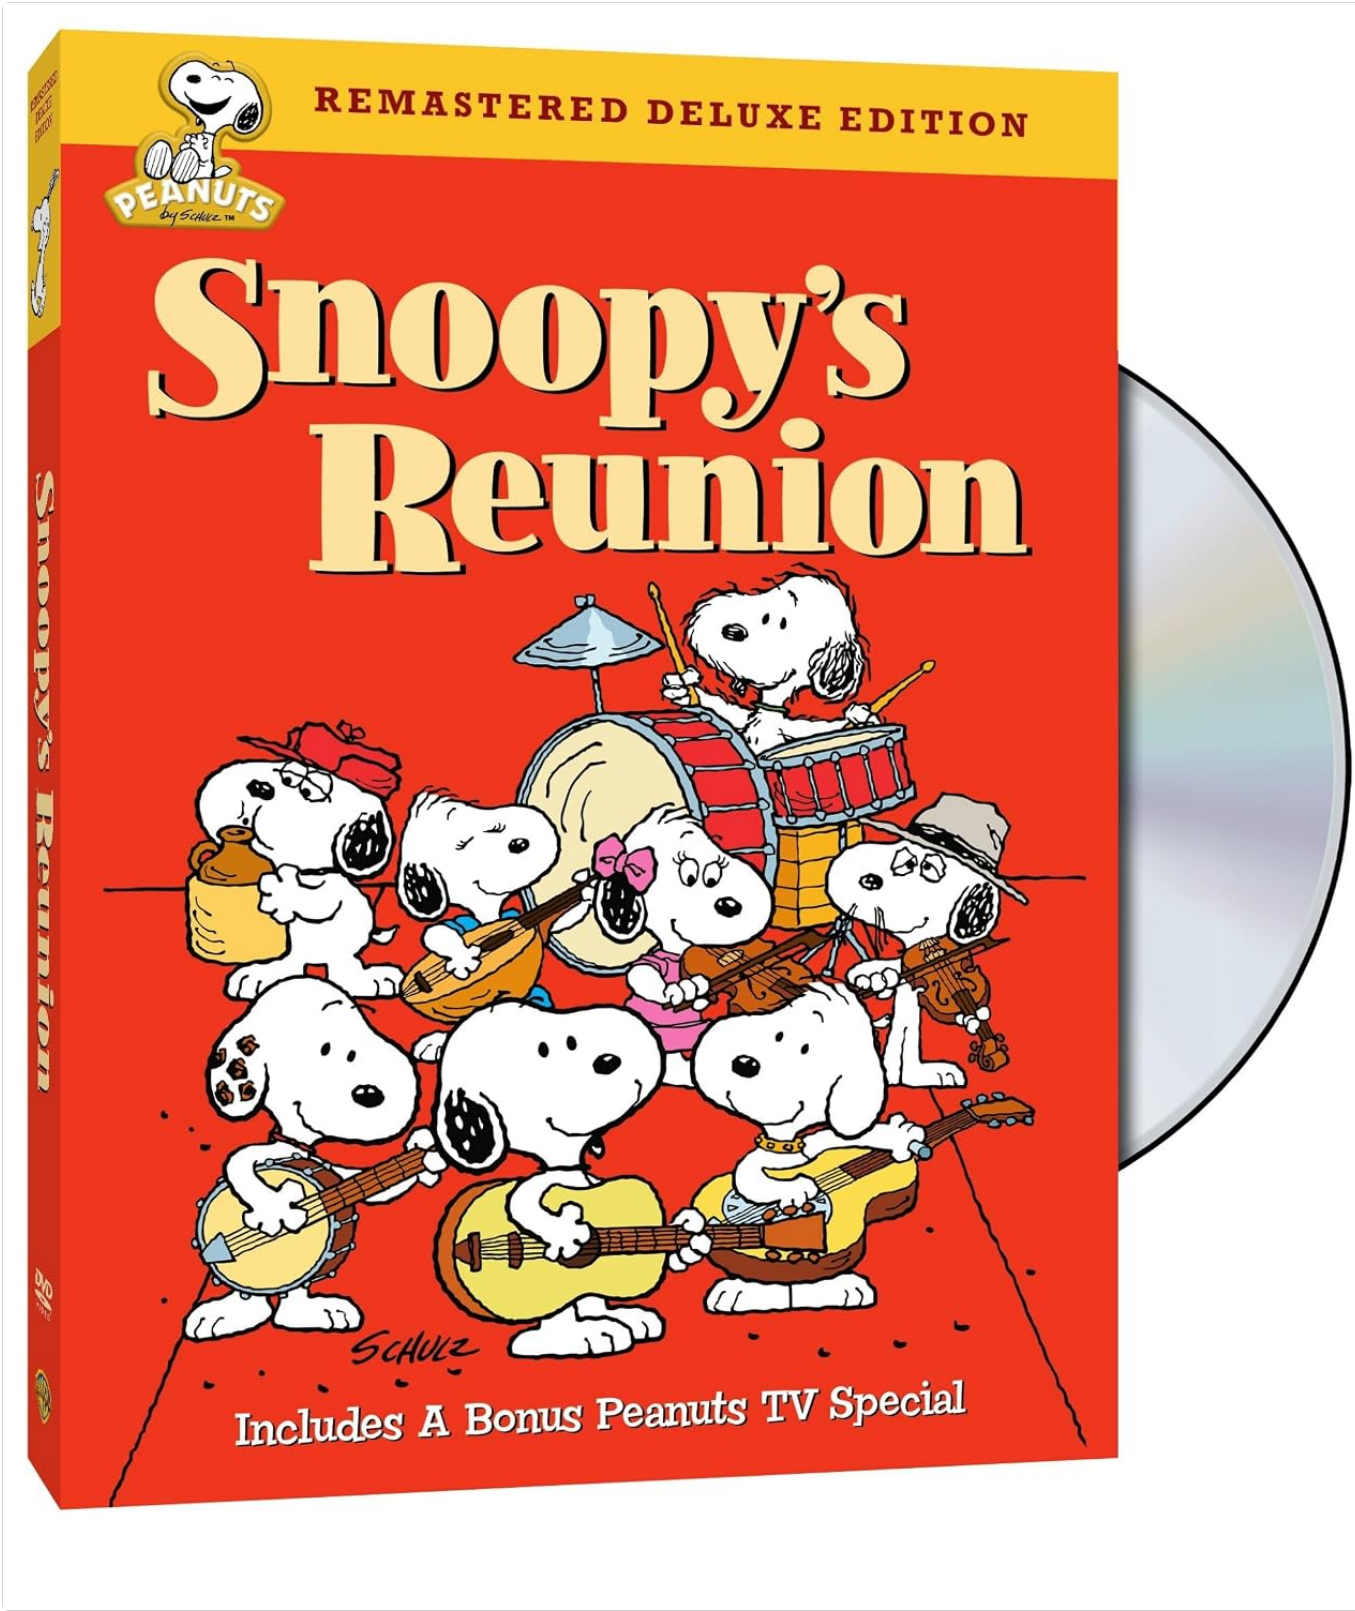


Image 2.1: Side view of the DVD case, highlighting the disc.

3. Setup

Follow these steps to set up and begin watching your DVD:

1. **Unpack:** Carefully remove the DVD from its packaging.

2. **Inspect:** Check the disc surface for any visible scratches or smudges. If present, gently clean the disc (refer to Section 5: Maintenance).
3. **Insert:** Open the disc tray of your DVD player and place the DVD with the label side facing up. Close the disc tray.
4. **Power On:** Turn on your DVD player and television.
5. **Select Input:** Use your TV remote to select the correct input/source (e.g., HDMI 1, AV) that your DVD player is connected to.
6. **Menu Navigation:** The DVD menu should appear on your screen. Use your DVD player's remote control to navigate the menu.

4. Operating Instructions

This section details how to operate the DVD and access its features.

4.1 Main Feature Playback

1. From the main menu, select "Play Movie" or "Snoopy's Reunion".
2. The feature will begin playback.
3. Use the remote control for standard functions: Play, Pause, Stop, Fast Forward, Rewind, and Chapter Skip.

4.2 Accessing Bonus Content

1. From the main menu, navigate to "Bonus Features" or "Special Features".
2. Select "Together Again: The Peanuts Voice-Cast Reunion" to view the bonus feature.

4.3 Language and Subtitle Selection

1. From the main menu, select "Audio Options" or "Subtitles".
2. Choose your preferred audio language (English, Japanese) or subtitle language (English, French, Japanese, Korean, Thai).

4.4 Related Content

Explore other Peanuts content available on DVD. The following videos provide a glimpse into other Peanuts specials:

Your browser does not support the video tag.

Video 4.1: Preview of "Peanuts: It's The Easter Beagle, Charlie Brown Deluxe Edition". This video showcases scenes from another Peanuts special.

Your browser does not support the video tag.

Video 4.2: Preview of "Peanuts: 1960'S Collection". This video offers a look at classic Peanuts content from the 1960s.

5. Maintenance

Proper care will extend the life of your DVD:

- **Handling:** Always hold the DVD by its edges to avoid fingerprints on the playing surface.
- **Cleaning:** If the disc is dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity.

6. Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

Problem	Solution
Disc does not play or skips.	Ensure the disc is clean and free of smudges or scratches. Check if the disc is inserted correctly into the DVD player. Try playing another DVD to confirm the player is functioning correctly.
No audio or poor audio quality.	Check the audio cables connecting your DVD player to your TV or audio system. Ensure the TV or audio system volume is not muted and is set to an audible level. Verify the correct audio track is selected in the DVD menu.
No video or poor video quality.	Check the video cables connecting your DVD player to your TV. Ensure your TV is set to the correct input/source. Adjust your TV's picture settings if necessary.

7. Specifications

Attribute	Value
Aspect Ratio	1.33:1
MPAA Rating	NR (Not Rated)
Product Dimensions	7.5 x 5.5 x 0.53 inches; 0.01 ounces
Item Model Number	WHV1000045886DVD
Media Format	Animated, Color, Multiple Formats, NTSC, Original recording remastered, Subtitled
Run Time	23 minutes
Release Date	April 7, 2009
Actors	Various
Subtitles	English, French, Japanese, Korean, Thai
Language	English (Dolby Digital 1.0), Japanese (Dolby Digital 1.0)
Studio	Warner Home Video
ASIN	B001O0TX1M
Number of Discs	1
Genre	Animation, Kids & Family

8. Warranty and Support

For information regarding product warranty or technical support, please refer to the contact information provided on the DVD packaging or visit the official Warner Home Video website. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B001O0TX1M

More documents and user manuals: **https://manuals.plus/**