Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sony LCSCSVC

Sony LCS-CSVC Carrying Case Instruction Manual

Model: LCS-CSVC

1. Introduction

This manual provides essential information for the proper use and care of your Sony LCS-CSVC Carrying Case. Designed for Cyber-shot digital cameras, this case offers protection and portability. Please read this manual thoroughly to ensure optimal performance and longevity of your product.

2. Product Features

- Protects your Cyber-shot or Webbie HD camera from scratches and dust.
- Features a stylish and active design.
- Includes an integrated carabiner for convenient attachment.
- Compact dimensions for easy portability.
- Available in multiple colors, including black.


3. Setup and Usage

The Sony LCS-CSVC carrying case is designed for straightforward use. Follow these steps to properly utilize your case:

1. **Opening the Case:** Unzip the main compartment using the dual zippers. The case features internal side guard straps that prevent it from opening too widely, ensuring your camera remains secure during access.
2. **Inserting the Camera:** Gently place your Cyber-shot or Webbie HD digital camera into the main compartment. Ensure the camera fits snugly without excessive force. The soft interior lining is designed to prevent scratches.
3. **Securing the Case:** Zip the main compartment completely to protect your camera from dust and potential impacts.
4. **Using the Carabiner:** The integrated carabiner allows you to attach the case to a belt loop, backpack, or other suitable loops for hands-free carrying. Ensure the carabiner is securely fastened before relying on it for transport.




SONY

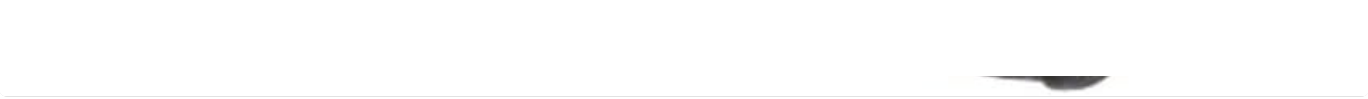

An image showing the black Sony LCS-CSVC carrying case from a slight angle, highlighting its textured exterior, zipper closure, and the attached carabiner clip at the top.

4. Maintenance

To maintain the appearance and functionality of your carrying case, follow these guidelines:

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the case to air dry completely before storing or using it again. Do not expose to direct heat sources.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use.

5. Troubleshooting

This section addresses common concerns regarding the carrying case.

- **Camera does not fit:** Ensure your camera model is compatible with the case dimensions. This case is designed for compact Cyber-shot and Webbie HD cameras. Refer to the specifications section for dimensions.
- **Zipper sticking:** If the zipper becomes difficult to operate, ensure no fabric is caught. A small amount of zipper lubricant or graphite pencil lead can be applied to the teeth to improve movement.
- **Carabiner not closing properly:** Check for any debris obstructing the spring mechanism of the carabiner. Clean if necessary.

6. Specifications

Feature	Detail
Brand	Sony
Model Number	LCSCSVC/B
Product Dimensions	4.8 x 1 x 8 inches (L x W x H)
Item Weight	0.8 ounces
Color	Black
Material	Soft, protective material
Closure Type	Zipper
Attachment	Carabiner clip

7. Important Information

Legal Disclaimer: Returns for this product cannot be accepted.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B001PO5VYU

More documents and user manuals: **https://manuals.plus/**