Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

RemotesReplaced KV-2722EC2

Instruction Manual

RemotesReplaced Compatible Remote Control for Sony KV-2722EC2

1. Introduction

This manual provides detailed instructions for the use and maintenance of your RemotesReplaced compatible remote control, designed as a direct replacement for the original remote of Sony KV-2722EC2 television models. This remote control offers full functionality, replicating the features of the original unit.

2. Setup

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Side view of the remote control, illustrating the battery compartment location.

2.2 Initial Use

This RemotesReplaced remote control is pre-programmed to work with Sony KV-2722EC2 televisions. No additional programming is typically required. After battery installation, point the remote control towards your television and test its functions.

3. Operating Instructions

Familiarize yourself with the buttons and their functions:



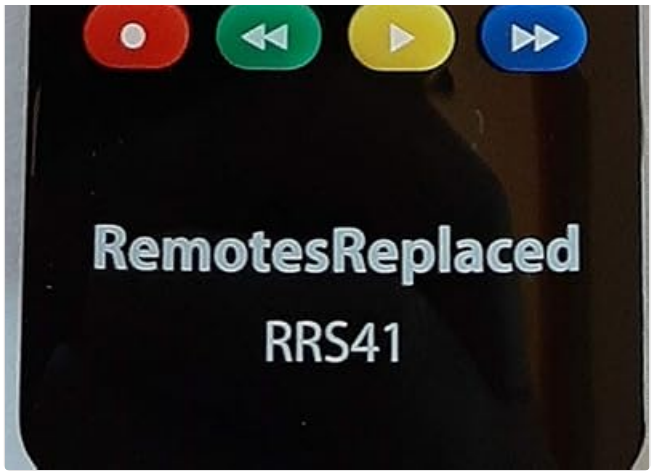


Figure 3.1: Overview of the remote control buttons.

- **POWER:** Turns the television on or off.
- **MUTE:** Mutes or restores the television's audio.
- **TV** / **SAT** / **DVD** / **AUX:**Selects the input source (e.g., TV, Satellite, DVD player, Auxiliary input).
- **MENU:** Opens the television's main menu.
- **EXIT:** Exits the current menu or on-screen display.
- **SHIFT:** Used for accessing secondary functions of certain buttons (if applicable).
- **Number Buttons (0-9):** Directly enters channel numbers.
- **SOURCE:** Cycles through available input sources.
- **-/--:** Toggles between single and double-digit channel entry.
- **GUIDE:** Displays the electronic program guide (EPG).
- **SUB:** Activates or deactivates subtitles.
- **SIZE:** Adjusts the screen display size/aspect ratio.
- **SETUP:** Accesses setup options.
- **TEXT:** Activates or deactivates Teletext.
- **Volume Up/Down (V+/V-):** Adjusts the television's volume.
- **Channel Up/Down (P+/P-):** Changes the television channel.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **BACK:** Returns to the previous screen or menu.
- **SLEEP:** Sets the sleep timer.
- **TV/DTV:** Switches between analog and digital TV modes.
- **INFO:** Displays information about the current program or input.
- **EPG:** Electronic Program Guide.
- **FAV:** Accesses favorite channels list.
- **NET TV** / **SMART:** Accesses smart TV features or internet-connected services (if supported by the TV).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services.
- **Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback on connected devices (e.g., DVD player).

4. Maintenance

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. Troubleshooting

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the TV.
Buttons are unresponsive or sticky.	Dirt or debris under buttons. Worn out internal contacts.	Clean the remote control. If problem persists, consider replacing the remote.
Remote works intermittently.	Low battery power. Loose battery connection.	Replace batteries. Ensure batteries are seated firmly.
Some functions do not work.	TV model incompatibility (unlikely for direct replacement). Specific TV setting.	Verify the remote is indeed for your specific TV model. Check TV settings.

6. Specifications

- **Brand:** RemotesReplaced
- **Model:** KV-2722EC2
- **Compatible Devices:** Television (Sony KV-2722EC2)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** Approximately 21 x 5 x 2 cm (8.3 x 2.0 x 0.8 inches)
- **Product Weight:** Approximately 120 g (4.2 oz)

7. Warranty and Support

For information regarding warranty coverage, please refer to the purchase documentation or contact the seller directly. RemotesReplaced products are designed for reliability and compatibility.
If you encounter issues not covered in this manual or require further assistance, please contact the retailer or manufacturer's customer support. Keep your purchase receipt as proof of purchase.

© 2023 RemotesReplaced. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0022AQIO8

More documents and user manuals: **https://manuals.plus/**