Bose 323232-1110

Bose® Computer MusicMonitor® User Manual

Model: 323232-1110

INTRODUCTION

The Bose Computer MusicMonitor is a premium two-piece computer speaker system designed to deliver exceptional audio quality in an elegant, space-saving design. This manual provides essential information for setting up, operating, and maintaining your MusicMonitor system. It is ideal for users who prioritize audio quality and prefer a compact, unobtrusive speaker solution for their laptop or PC.

Image: The Bose Computer MusicMonitor speakers in black, accompanied by their remote control and a demonstration DVD. The speakers are compact and feature a sleek design.

KEY FEATURES

- **Compact Design:** Smallest two-piece computer speaker system from Bose, freeing up valuable desktop space.

- **Exceptional Audio Quality:** Delivers sound well beyond its size, with convincing low notes without a separate bass module. This is achieved through proprietary amplifier technology, highly efficient neodymium speakers, and Bose digital signal processing.

- **Proprietary Amplifiers:** Smaller, lighter, and more efficient than traditional linear amplifiers, allowing for powerful sound from a compact size.

- **Active Electronic Equalization:** Balances low, mid, and high frequencies for more natural tone and clarity.

- **Advanced Acoustics:** Incorporates dual internal opposing passive radiators for unusually deep, powerful low tones from a very small multimedia speaker system.

- **Elegant Finish:** Features a brushed aluminum casing that complements any laptop, PC, and workspace.

- **Convenient Controls:** Volume and power controls are located discreetly on the side of the right speaker and also accessible via the included remote control.

- **Easy Connectivity:** Simple one-cable connection to your computer or auxiliary audio sources.

- **Magnetic Shielding:** Speakers are magnetically shielded to prevent interference with monitors or damage to magnetic media.

Image: A single Bose Computer MusicMonitor speaker is shown resting in the palm of a hand, illustrating its compact size. The speaker is black with a textured grille.

WHAT'S IN THE BOX

Upon unpacking your Bose Computer MusicMonitor system, please ensure all the following components are present:

- Two (2) MusicMonitor speakers
- Speaker cable (attached)
- AC power cord
- Demonstration DVD
- Power pack with attached cable
- Remote control

- Audio input cable

SETUP INSTRUCTIONS

1. **Placement:** Place the two MusicMonitor speakers on a stable, flat surface near your computer. Ensure there is adequate space around them for optimal sound dispersion. The speakers are magnetically shielded, allowing placement near monitors without interference.

2. **Connect Speakers:** The speaker cable is typically attached to one speaker. Connect the other end of this cable to the corresponding port on the second speaker.

3. **Connect to Audio Source:** Use the provided audio input cable to connect the MusicMonitor system to your computer's audio output (headphone jack or line-out port).

4. **Connect Power:** Connect the power pack to the designated power input on one of the speakers. Then, connect the AC power cord to the power pack and plug it into a wall outlet.

5. **Initial Power On:** Once all connections are secure, press the power button on the right speaker or the remote control to turn on the system.

Image: The Bose Computer MusicMonitor speakers are positioned on either side of a laptop computer, demonstrating a typical setup. The remote control is also visible near the laptop.

OPERATING INSTRUCTIONS

- **Power On/Off:** Press the power button on the right speaker or the remote control to turn the system on or off.

- **Adjusting Volume:** Use the volume up (+) and volume down (-) buttons on the right speaker or the remote control to adjust the audio level.

- **Audio Source:** The system will play audio from the device connected via the audio input cable. To use with other audio sources, simply unplug the connection to your current device and connect the new audio source to the audio input.

- **Remote Control Usage:** The remote control provides convenient access to power and volume functions from a distance. Ensure the remote has a clear line of sight to the front of the right speaker.
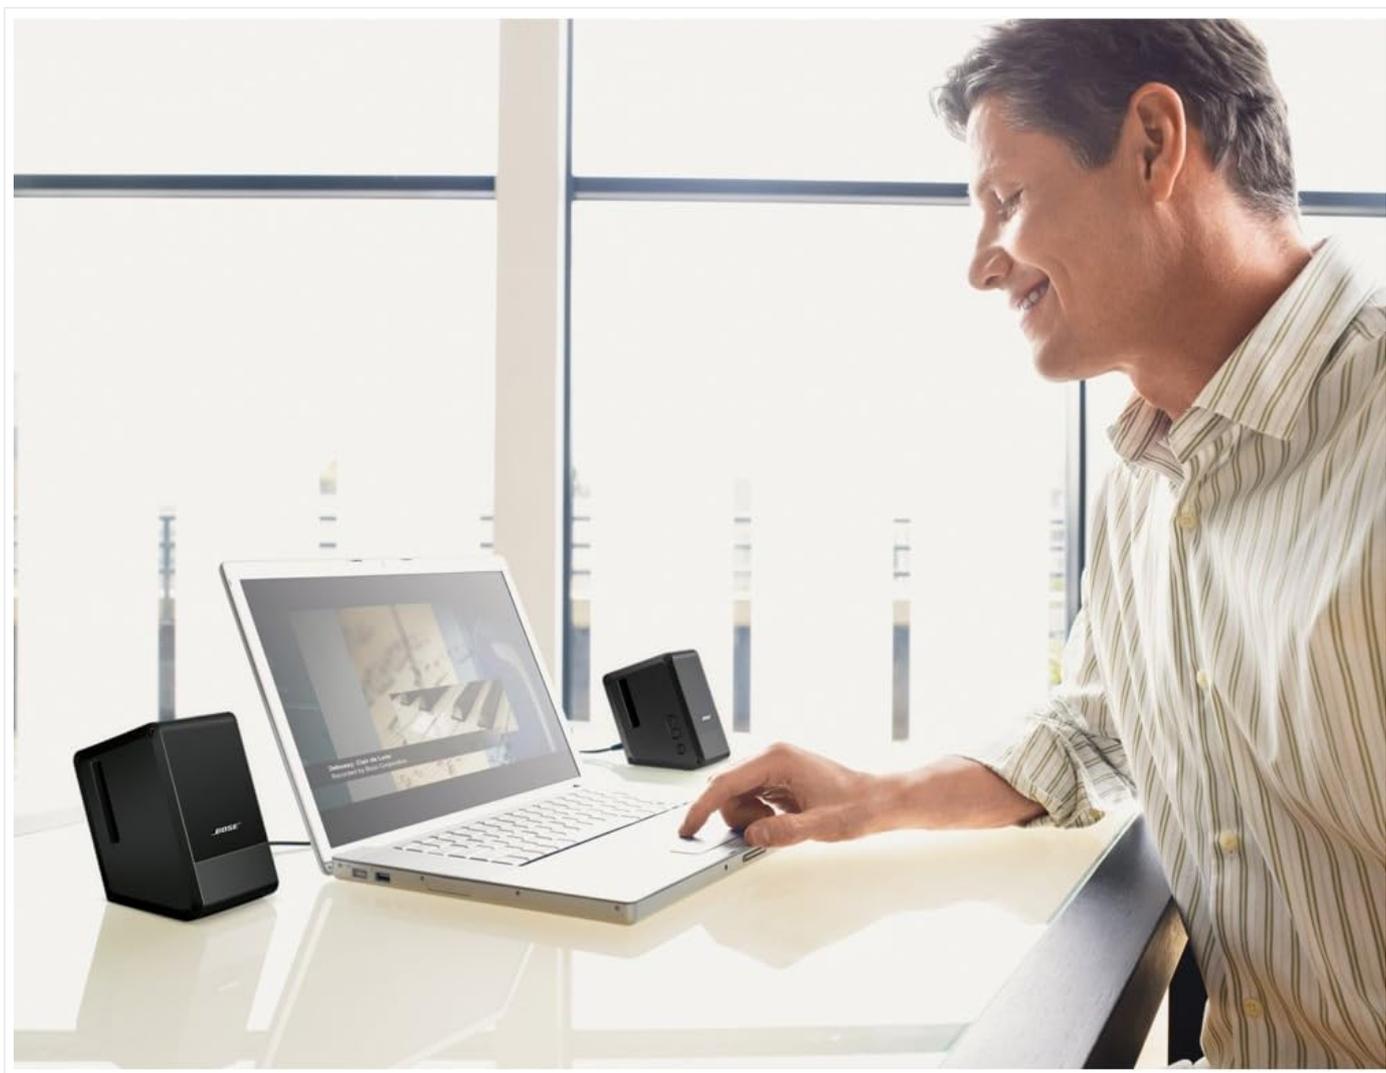
Image: A close-up side view of one Bose Computer MusicMonitor speaker, clearly showing the power and volume control buttons integrated into its design.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Bose Computer MusicMonitor system.

- **Cleaning:** Use a soft, dry cloth to clean the exterior surfaces of the speakers. Do not use liquid cleaners or sprays directly on the speakers.
- **Dust:** Regularly dust the speaker grilles and surfaces to prevent accumulation that could affect sound quality.
- **Environment:** Avoid exposing the speakers to extreme temperatures, high humidity, or direct sunlight. Keep them away from sources of heat and moisture.
- **Cables:** Periodically check all cables for any signs of wear or damage. Replace damaged cables immediately.

TROUBLESHOOTING

If you encounter issues with your Bose Computer MusicMonitor, refer to the following common troubleshooting steps:

Problem	Possible Solution

Problem	Possible Solution
No sound	Ensure the speakers are powered on. Check that the audio input cable is securely connected to both the speakers and your audio source. Verify that the volume on both the speakers and your audio source is turned up and not muted. Try connecting a different audio source to confirm the issue is not with your computer/device.
Distorted sound	Reduce the volume on both the speakers and your audio source. Check for loose cable connections. Ensure the audio source is not outputting a signal that is too strong for the speakers.
Remote control not working	Ensure there is a clear line of sight between the remote and the right speaker. Check and replace the battery in the remote control if necessary.

SPECIFICATIONS

Model Name	Computer MusicMonitor
Speaker Type	Multimedia
Color	Black
Product Dimensions (each speaker)	11"D x 7.7"W x 8"H (approximate, based on product dimensions)
Item Weight (total)	1.3 Pounds
Compatible Devices	Desktop, Laptop (any device with a 3.5mm audio output)
Connectivity Technology	Wired (Auxiliary)
Audio Output Mode	Stereo
Control Method	Remote, On-speaker controls
Power Source	Corded Electric
Manufacturer	Bose
Item Model Number	323232-1110
UPC	017817515894, 017817585996

WARRANTY INFORMATION

The Bose Computer MusicMonitor system comes with a **Limited Warranty**. For specific details regarding the terms, conditions, and duration of your warranty, please refer to the warranty card included in your product packaging or visit the official Bose support website. Keep your proof of purchase for warranty claims.

Support and Contact Information

For further assistance, technical support, or to inquire about replacement parts, please contact Bose customer service or visit their official website.

- **Bose Official Website:** www.bose.com
- **Bose Store on Amazon:** Visit the Bose Store

Related Documents

	[Términos y Condiciones Promoción Hot Sale Bose](#) Detalles de la promoción Hot Sale de Bose con descuentos del 10% al 20% en productos participantes seleccionados, válida del 29 de mayo al 6 de junio de 2023.
	[Bose Buen Fin Promotion: Terms and Conditions](#) Details of the Bose Buen Fin promotion, including participating products, discounts, and validity dates for Bose audio equipment.
	[Bose Bass Module 700: Quick Start Guide](#) Learn how to set up your Bose Bass Module 700 with your Bose Smart Soundbar or Bose TV Speaker using the Bose Music app or a wired connection. Includes setup instructions and placement guidelines.
	[Bose Solo Soundbar Series II User Manual](#) User guide for the Bose Solo Soundbar Series II, covering setup, safety, controls, Bluetooth, connectivity, and troubleshooting. Learn how to optimize your home audio experience with Bose.