Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Beurer FB20 (636.05)

Beurer FB20 Foot Spa User Manual

Model: FB20 (636.05)
Brand: Beurer

1. Introduction

The Beurer FB20 Foot Spa is designed to provide a relaxing and revitalizing experience for your feet. It combines vibration and bubble massage functions with an infrared light feature and includes various pedicure attachments to promote overall foot health and relaxation.

This manual provides detailed instructions for the safe and effective use, setup, operation, and maintenance of your Beurer FB20 Foot Spa.

Key Features:

- Vibration and bubble massage functions for soothing relief.
- Soothing infrared light field to stimulate circulation.
- Removable reflexology roller attachments for targeted massage.
- Three interchangeable pedicure attachments: cornea remover, brush, and massage attachment.
- Noduled footbed for additional massage support.
- Removable splash guard for convenience.
- Water tempering function to maintain water temperature.
- Suitable for dry massage.
- Accommodates up to shoe size 48.

2. Safety Information

Please read all safety instructions carefully before using the Beurer FB20 Foot Spa. Failure to follow these instructions may result in injury or damage to the device.

- Always use the product with water filled in. Do not operate without water.
- Be cautious of water temperature. The device does not heat water; it only tempers it to cool down more slowly.
- Follow all electrical safety precautions when using the corded device. Ensure hands are dry before plugging in or

unplugging.

- Ensure the product is securely placed on a stable, level surface during use to prevent tipping.
- Do not stand in the foot spa. Use only while seated.
- Do not immerse the entire unit in water or other liquids.
- Keep the power cord away from hot surfaces.
- Do not use if the device or power cord is damaged. Contact customer service for repairs.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the device from the power outlet after each use and before cleaning.

3. Product Components and Features

Familiarize yourself with the different parts of your Beurer FB20 Foot Spa.



Figure 3.1: Top-down view of the Beurer FB20 Foot Spa, showing the main basin, control knob, and internal massage rollers.

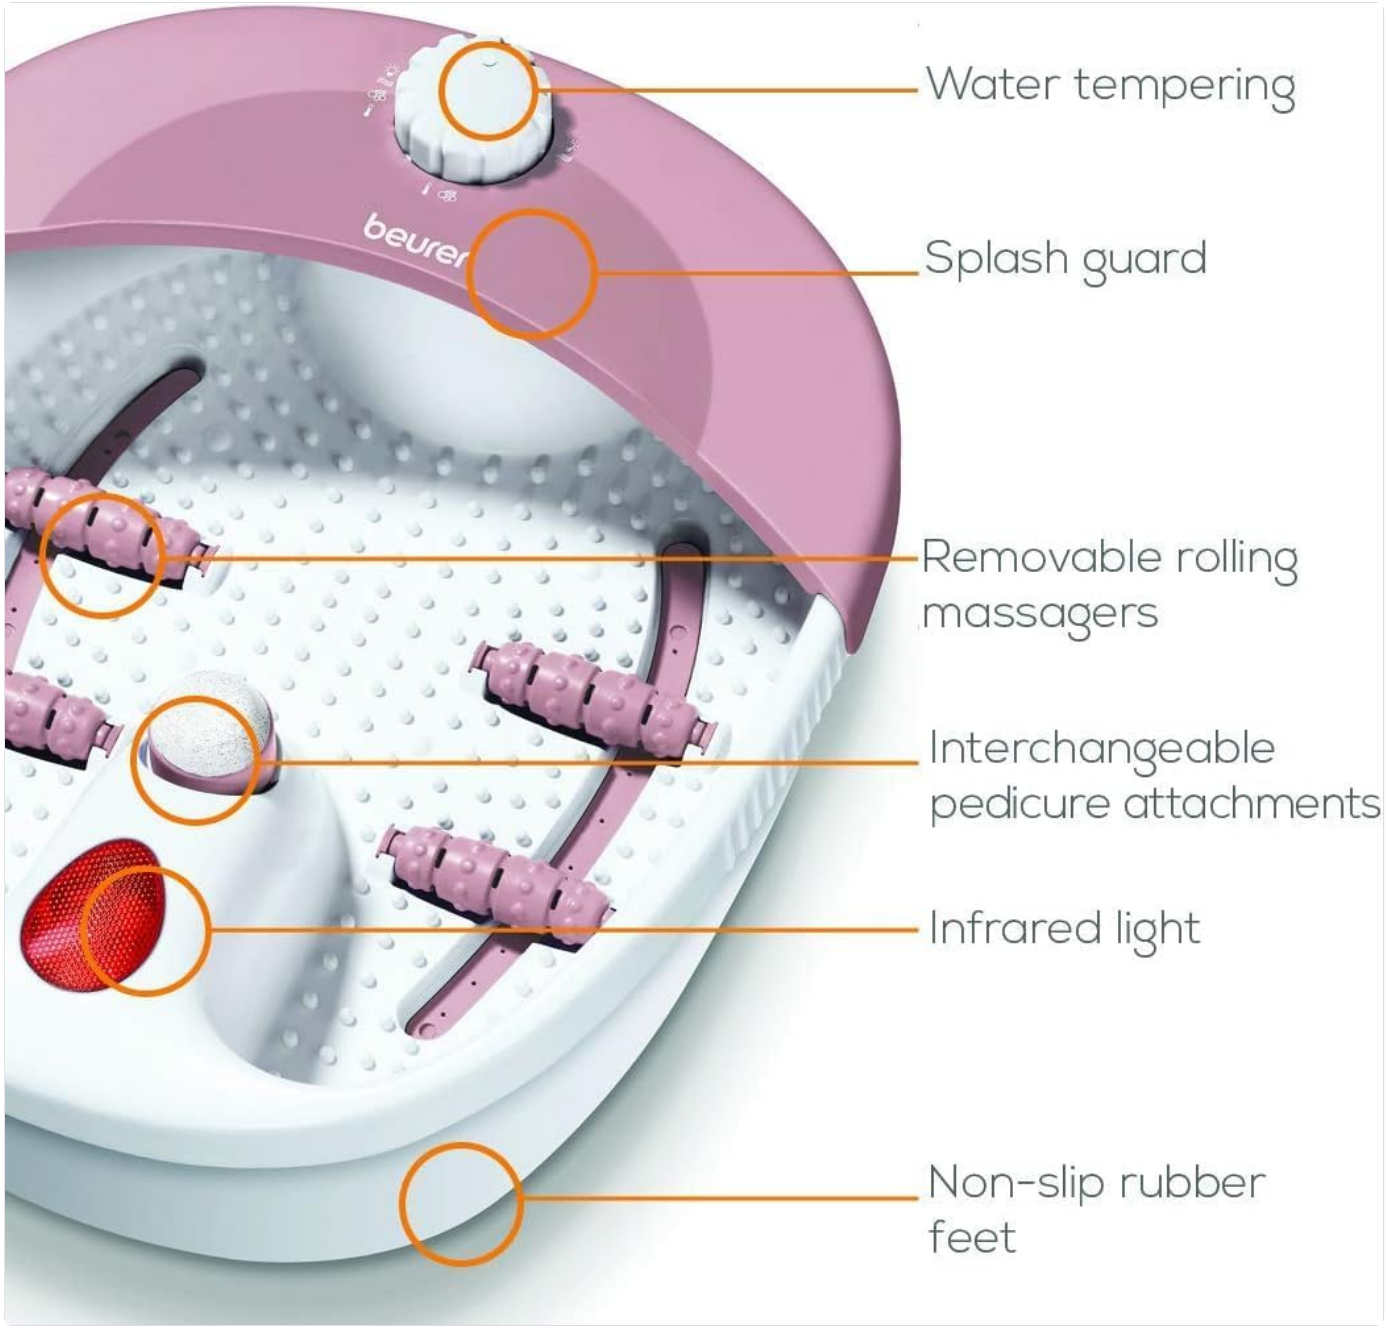


Figure 3.2: Diagram of the Beurer FB20 Foot Spa highlighting key features: Water tempering knob, Splash guard, Removable rolling massagers, Interchangeable pedicure attachments, Infrared light, and Non-slip rubber feet.

Pedicure Attachments:

The FB20 comes with three interchangeable pedicure attachments for comprehensive foot care.



Figure 3.3: The three pedicure attachments: a corn and callus remover (left), a massage attachment (center), and a brush attachment (right).

- **Corn and Callus Remover:** Designed to gently remove dead skin.
- **Massage Attachment:** Provides targeted massage to specific areas of the foot.
- **Brush Attachment:** Stimulates reflex zones and helps clean the feet.

4. Setup

1. **Placement:** Place the foot spa on a firm, level, and non-slip surface. Ensure there is enough space around the unit for comfortable use and to prevent splashes.
2. **Fill with Water:** Fill the foot spa with warm water up to the indicated maximum fill line. Do not overfill. The device is designed to be operated only when filled with water.
3. **Attach Accessories (Optional):** If desired, attach the reflexology rollers by placing them into their designated slots at the bottom of the basin. You can also attach one of the three pedicure attachments to the central post.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet. Ensure your hands are dry before handling

the plug.

5. Operating Instructions

Once set up, you can begin your foot spa experience.

1. **Power On/Function Selection:** The control knob on the top of the unit allows you to select different functions:
    - **Off (0):** Turns the unit off.
    - **Vibration Massage:** Activates the vibration function.
    - **Bubble Massage:** Activates the bubble function. Note that bubbles primarily emerge from the openings below the massage rollers.
    - **Vibration + Bubble Massage:** Activates both functions simultaneously.
    - **Infrared Light:** Activates the soothing infrared light. This can be used independently or in combination with massage functions depending on the model's specific settings (refer to the control knob markings).
2. **Foot Placement:** Gently place your feet into the foot spa. Ensure your feet are fully submerged in the water for optimal effect.
3. **Using Reflexology Rollers:** If the reflexology rollers are installed, move your feet back and forth over them to stimulate reflex zones. These rollers are removable for easy cleaning.
4. **Using Pedicure Attachments:** To use a pedicure attachment, press your foot gently against the chosen attachment on the central post. The attachment will rotate, providing the desired effect (e.g., callus removal, massage, or brushing).
5. **Water Tempering:** The foot spa includes a water tempering function, which helps to maintain the temperature of the filled water for a longer period, slowing down cooling. It does not heat cold water.
6. **Dry Massage:** The Beurer FB20 can also be used for dry massage without water. Simply place your feet in the basin and activate the vibration function.
7. **Duration of Use:** It is recommended to use the foot spa for sessions of no more than 20-30 minutes.
8. **Power Off:** After use, turn the control knob to the "Off" (0) position and unplug the device from the power outlet.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and hygienic operation of your foot spa.

1. **Drain Water:** After each use, unplug the device and carefully pour out the water.
2. **Clean Basin:** Rinse the basin with clean water. You can use a mild soap if necessary. Wipe the interior and exterior surfaces with a soft, damp cloth.
3. **Clean Attachments:** Remove the reflexology rollers and pedicure attachments. Rinse them thoroughly under running water. Allow them to air dry completely before reattaching or storing.
4. **Splash Guard:** The splash guard is removable for easier cleaning. Detach it, clean, and reattach.
5. **Drying:** Ensure all parts are completely dry before storing the unit to prevent mold or mildew.
6. **Storage:** Store the foot spa in a cool, dry place, away from direct sunlight and out of reach of children. You can use

the cable winder to neatly store the power cord.

7. Do not use abrasive cleaning agents or harsh chemicals, as these may damage the surface of the device.

7. Troubleshooting

If you encounter any issues with your Beurer FB20 Foot Spa, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in; power outlet issue; control knob not set correctly; device malfunction.	Ensure the power cord is securely plugged into a working outlet. Check if the control knob is turned to an active setting (e.g., Vibration, Bubble). If the issue persists, contact customer service.
Bubbles are weak or not appearing.	Insufficient water; bubbles only from specific openings.	Ensure water level is at the recommended fill line. Note that bubbles are designed to come primarily from the openings below the massage rollers. This is normal operation.
Water is not heating up.	The device does not have a water heater.	The Beurer FB20 Foot Spa features water tempering, which helps maintain the temperature of already warm water, but it does not heat cold water. Fill the unit with warm water to begin.
Vibration is weak or inconsistent.	Low power; obstruction; device malfunction.	Ensure the device is on a stable surface. Check for any obstructions in the basin. If the problem continues, contact customer service.

If the problem persists after attempting these solutions, please contact Beurer customer support.

8. Specifications

Feature	Detail
Model Number	636.05 (FB20)
Power Source	Corded Electric
Wattage	120 watts
Product Dimensions	5.12 x 5.12 x 3.94 inches
Item Weight	1.9 Grams (0.07 ounces)
Material	Rubber (for certain components)
Manufacturer	Beurer
Suitable Shoe Size	Up to size 48

9. Warranty and Support

Your Beurer FB20 Foot Spa comes with a**3-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For warranty service, technical support, or any questions regarding your product, please contact Beurer customer service. Contact information can typically be found on the official Beurer website or on the product packaging.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is intended for personal relaxation and foot care.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B003ZDWG9W

More documents and user manuals: **https://manuals.plus/**