Pix Star PXT510WR02

Pix-Star 10.4-inch Wi-Fi Cloud Digital Photo Frame User Manual

Model: PXT510WR02

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Pix-Star 10.4-inch Wi-Fi Cloud Digital Photo Frame, Model PXT510WR02. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your experience.

2. Package Contents

Verify that all items are present in your product packaging:

- Pix-Star 10.4-inch Digital Photo Frame
- Remote Control
- Power Supply

3. Product Overview

The Pix-Star 10.4-inch Digital Photo Frame is designed to display digital photos and access online content via Wi-Fi. It features an 800 x 600 resolution screen with a 4:3 aspect ratio. The frame supports various online photo services and offers a dedicated email address for photo reception.



Figure 3.1: Front view of the Pix-Star 10.4-inch Digital Photo Frame. The frame is black with a screen displaying a vibrant image of children.



Figure 3.2: Back view of the Pix-Star 10.4-inch Digital Photo Frame. The remote control is positioned next to the frame, highlighting the control buttons and various ports on the frame's rear.

4. Setup

4.1 Initial Power-On and Wi-Fi Connection

1. Connect the power supply to the frame and plug it into an electrical outlet. The frame will power on automatically.
2. Follow the on-screen prompts to select your preferred language.
3. Navigate to the Wi-Fi settings menu using the remote control.
4. Select your Wi-Fi network from the list and enter the password. Confirm the connection.

4.2 Account Registration

To utilize all features, including the dedicated email address, register your frame online:

1. Visit the Pix-Star website on a computer or smartphone.
2. Enter the product ID found on your frame.
3. Choose a password and a personalized email address for your frame.
4. Once registered, your frame is ready to send and receive photos.

5. Operating Instructions

5.1 Sending Photos to Your Frame

- **Via Email:** Send photos as attachments to your frame's dedicated email address. The frame will automatically receive and display them.
- **From Online Providers:** Link your Pix-Star account to various online services such as Facebook, Picasa, Flickr, and more. Photos from these albums can be displayed directly on your frame.
- **Using Mobile Apps:** Utilize the Pix-Star iPhone or Android app to send photos directly from your smartphone.

5.2 Viewing Photos and Content

- **Internal Memory:** Photos stored on the frame's 2 GB internal memory will display by default.
- **External Storage:** Insert a USB stick, SDHC, or SDXC card into the designated slots to display photos directly from these devices.
- **Online Albums:** Access and view photos from linked online accounts.
- **DLNA Support:** Access photos stored on your local computer or NAS server via DLNA.

5.3 Frame Settings and Features

- **Display Schedule:** Configure the frame to automatically turn on and off at specified times using the eco-mode feature.
- **Transition Effects:** Customize how photos transition on the screen.
- **Weather Forecasts:** Display daily weather forecasts for selected countries and cities.
- **Motion Sensor:** The frame includes a motion sensor for automatic display activation.

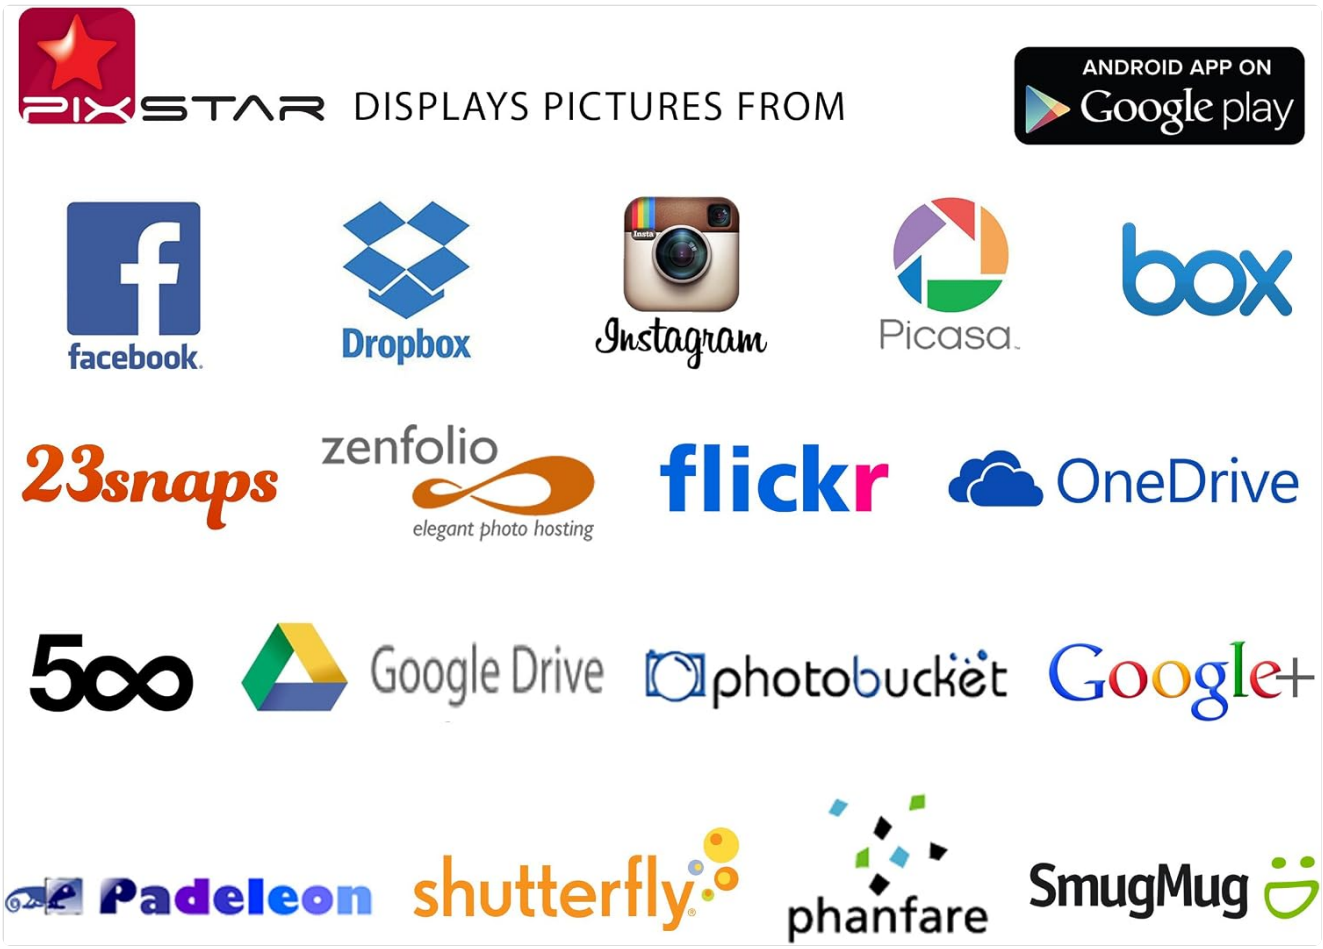


Figure 5.1: Supported online services for the Pix-Star Digital Photo Frame. This image illustrates the wide range of platforms from which the frame can display photos, including social media and cloud storage services.

6. Maintenance

6.1 Cleaning the Frame

To clean the screen and frame exterior, use a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the surface.

6.2 Software Updates

Your Pix-Star frame may receive automatic software updates via its Wi-Fi connection to enhance features and performance. Ensure the frame is connected to the internet for these updates.

7. Troubleshooting

- **No Power:** Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
- **Wi-Fi Connection Issues:** Verify your Wi-Fi password is correct. Ensure the frame is within range of your router. Restarting both the frame and your router may resolve connectivity problems.
- **Photos Not Displaying:** Check if photos are correctly loaded onto internal memory, external storage, or linked online accounts. Ensure the file formats are compatible.
- **Remote Control Not Responding:** Replace the AAA batteries in the remote control. Ensure there are no obstructions between the remote and the frame's sensor.

8. Specifications

Feature	Specification
Model Number	PXT510WR02
Screen Size	10.4 inches
Resolution	SVGA (800 x 600)
Aspect Ratio	4:3
Internal Memory	2 GB (approx. 20,000 pictures)
Connectivity	Wi-Fi, USB, SDHC, SDXC, DLNA
Compatible Devices	Personal Computer, Smartphone
Product Dimensions	10.6 x 1.07 x 7.75 inches
Item Weight	1.57 pounds
Power Consumption	Less than 7 watts
Batteries (Remote)	2 AAA batteries required

9. Warranty Information

This product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your purchase or visit the official Pix-Star website.

10. Support

For further assistance, frequently asked questions (FAQs), or to contact customer support, please visit the official Pix-Star website. Online resources are available to help you with any queries or technical issues you may encounter.

© 2023 Pix-Star. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question