Casio PQ-11D-8RDF

Casio Digital Traveler's Alarm Clock

Model: PQ-11D-8RDF

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio Digital Traveler's Alarm Clock, model PQ-11D-8RDF. Please read this manual thoroughly before using the clock to ensure optimal performance and longevity.
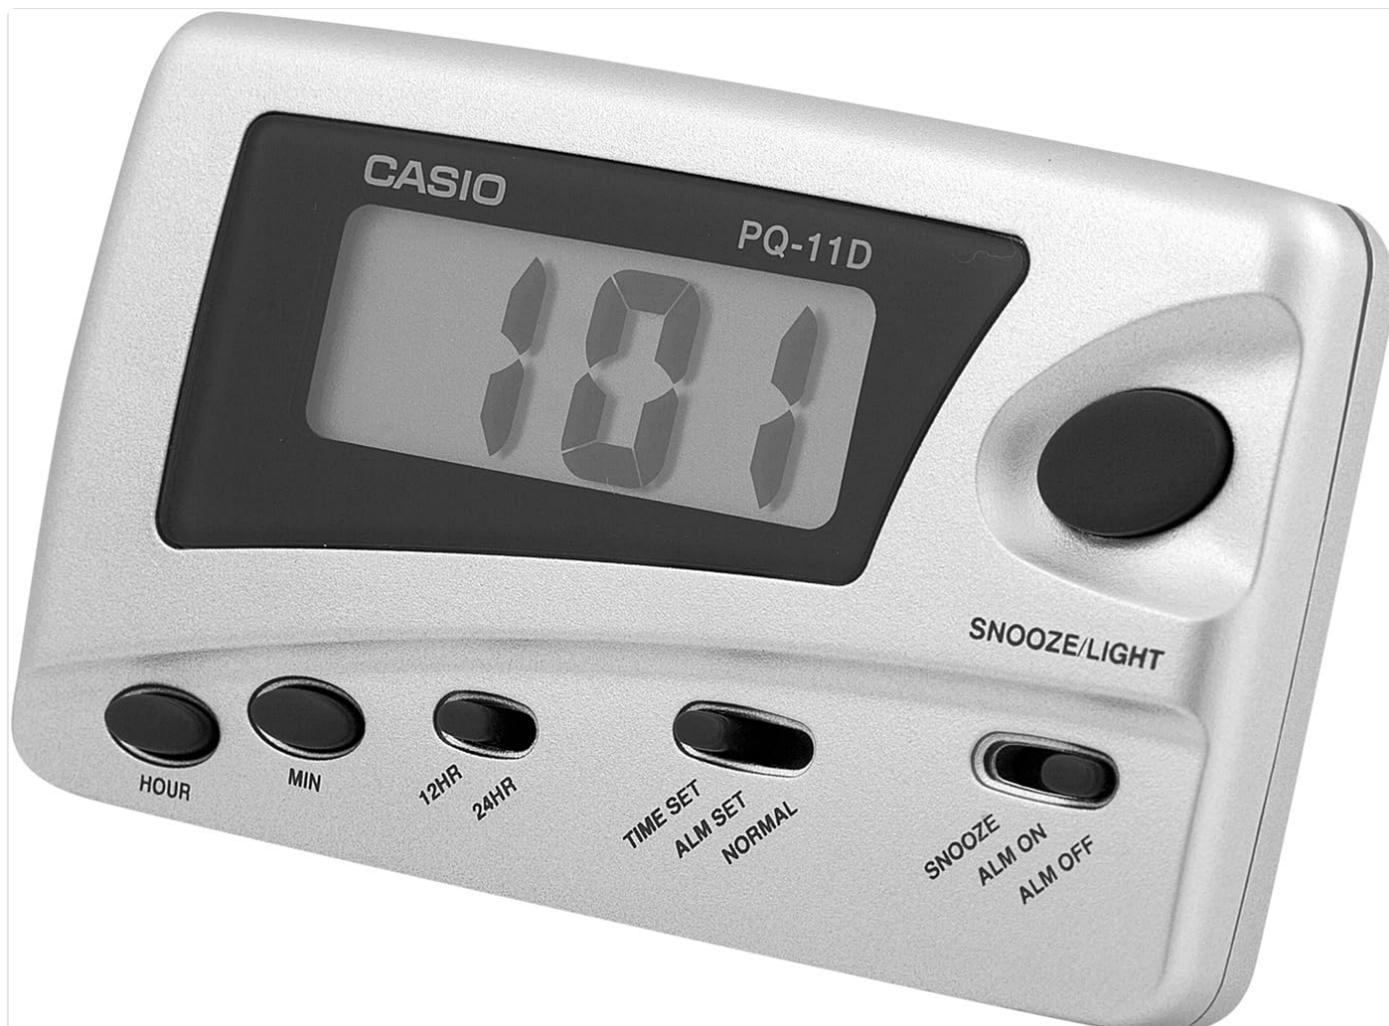
Image: Front view of the Casio Digital Traveler's Alarm Clock. The clock features a digital display, a large snooze/light button on the top right, and smaller buttons for Hour, Min, 12HR/24HR, Time Set/Alarm Set/Normal switch, and Snooze/Alarm On/Alarm Off switch along the bottom.

SETUP

1. Battery Installation

The clock operates on batteries. While a battery is typically included, you may need to remove a protective tab or replace it. The battery compartment is located on the back of the unit.

1. Open the battery compartment cover on the back of the clock.
2. Insert the required batteries (e.g., AAA, specific button cell) ensuring correct polarity (+/-). Refer to the markings inside the compartment.
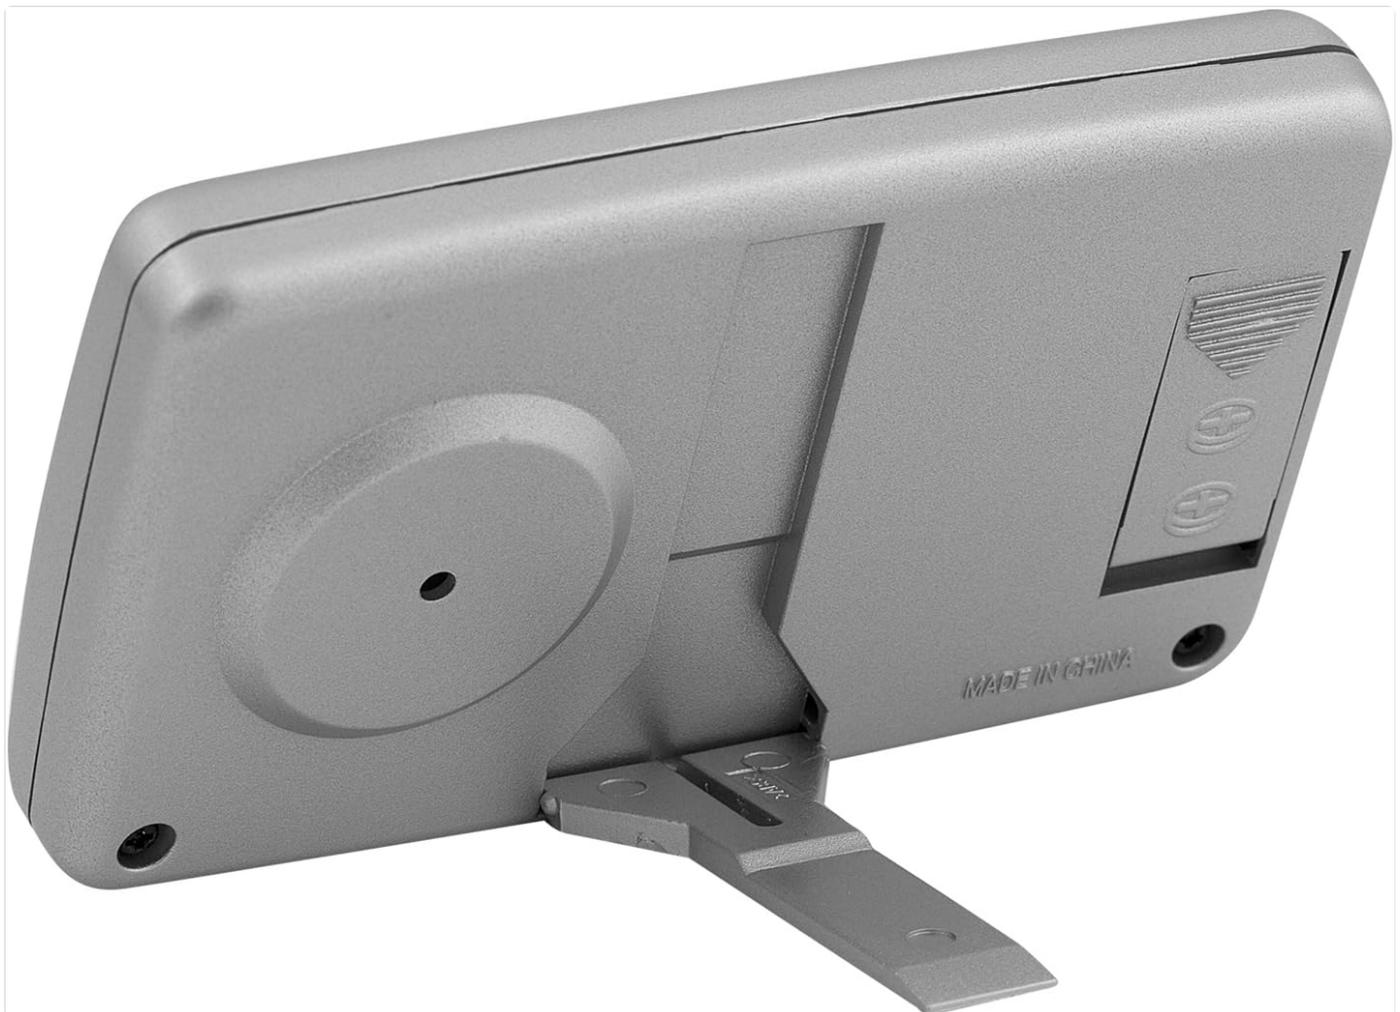3. Close the battery compartment cover securely.

Image: Rear view of the Casio Digital Traveler's Alarm Clock. The image shows the battery compartment cover on the right side and a foldable kickstand in the center, allowing the clock to stand upright.

2. Initial Time Setting

1. Locate the **TIME SET** / **ALM SET** / **NORMAL** slide switch on the front of the clock.
2. Slide the switch to the **TIME SET** position. The hour digits will begin to flash.
3. Press the **HOUR** button repeatedly to set the correct hour. Pay attention to AM/PM indicators if present.
4. Press the **MIN** button repeatedly to set the correct minute.

5. Once the time is set, slide the switch back to the **NORMAL** position.

3. 12/24 Hour Format Selection

To switch between 12-hour and 24-hour (military) time format:

- In **NORMAL** time display mode, press the **12HR/24HR** button.

- The display will toggle between the 12-hour format (with AM/PM indicator) and the 24-hour format.

OPERATING INSTRUCTIONS

1. Setting the Alarm Time

1. Locate the **TIME SET** / **ALM SET** / **NORMAL** slide switch.

2. Slide the switch to the **ALM SET** position. The alarm time will be displayed, and the hour digits will flash.

3. Press the **HOUR** button repeatedly to set the desired alarm hour.

4. Press the **MIN** button repeatedly to set the desired alarm minute.

5. Once the alarm time is set, slide the switch back to the **NORMAL** position.

2. Activating/Deactivating the Alarm

The alarm can be turned on or off using the dedicated switch.

Image: Close-up view of the control panel, highlighting the Snooze/Light button and the slide switch for Snooze, Alarm On, and Alarm Off functions. This switch controls the alarm's activation and the snooze feature.

- Locate the **SNOOZE / ALM ON / ALM OFF** slide switch.

- To activate the alarm, slide the switch to the **ALM ON** position. An alarm indicator (e.g., bell icon) will appear on the

display.

- To deactivate the alarm, slide the switch to the **ALM OFF** position. The alarm indicator will disappear.

3. Snooze Function

When the alarm sounds, you can temporarily stop it using the snooze function.

- When the alarm is sounding, press the large **SNOOZE/LIGHT** button.

- The alarm will stop and sound again after approximately 5 minutes.

- To fully stop the alarm, slide the **SNOOZE** / **ALM ON** / **ALM OFF** switch to the **ALM OFF** position.

4. LED Backlight

The clock features an LED backlight for viewing the display in low light conditions.

- Press the large **SNOOZE/LIGHT** button to illuminate the display.

- The backlight will remain on for a few seconds and then automatically turn off.

MAINTENANCE

1. Battery Replacement

When the display becomes dim or the alarm sound weakens, it is time to replace the batteries. Follow the battery installation steps in the Setup section.

- Always use the specified battery type.

- Do not mix old and new batteries, or different types of batteries.

- Remove batteries if the clock will not be used for an extended period to prevent leakage.

- Dispose of used batteries responsibly according to local regulations.

2. Cleaning

To clean the clock, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the casing or display.

3. Storage

Store the clock in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is dim or blank.	Low or dead batteries.	Replace batteries with new ones. Ensure correct polarity.
Alarm does not sound.	Alarm is not activated (ALM OFF). Alarm time is incorrectly set.	Slide the **SNOOZE** / **ALM ON** / **ALM OFF** switch to **ALM ON**. Verify the alarm time is set correctly.

Problem	Possible Cause	Solution
Display flickers or buttons are unresponsive during setting.	Slide switch (TIME SET/ALM SET/NORMAL) not fully engaged. Internal connection issue.	Ensure the slide switch is firmly in the desired position. Try removing and reinserting batteries. If problem persists, contact support.
Snooze function does not work.	Alarm is not active or switch is in ALM OFF position.	Ensure the alarm is set and active (ALM ON). Press the SNOOZE/LIGHT button only when the alarm is sounding.

SPECIFICATIONS

- **Brand:** Casio
- **Model Number:** PQ-11D-8RDF
- **Product Dimensions:** 2.17 x 0.59 x 3.54 inches
- **Item Weight:** 1.94 ounces
- **Features:** LED Back Light, 12/24 Hour Format, Snooze Function (Beep Sound)
- **Power Source:** Battery (type not specified in input, but implied by "BATTERY INCLUDED")

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Casio website. You may also contact Casio customer service directly for assistance with product inquiries or troubleshooting beyond this manual.
Casio Official Website: www.casio.com