Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Barbie X7738

Barbie Fashion Cam Instruction Manual

Model: X7738

Introduction

The Barbie Fashion Cam is an innovative digital camera integrated into a Barbie doll, allowing users to capture photos from Barbie's perspective. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Barbie Fashion Cam.



Image: The Barbie Fashion Cam doll, dressed in a black top with a display screen, jeans, and pink shoes, standing next to its pink USB charging and data transfer cable.

Important Safety Information

- Not suitable for children under 3 years due to small parts. Recommended age: 6-12 years.
- Adult supervision is recommended during use, especially when connecting to a computer.
- Do not expose the doll or electronic components to water or excessive moisture.
- Use only the provided USB cable for charging and data transfer.
- Do not attempt to open or modify the doll's electronic components.

Package Contents

Verify that all items listed below are included in your package:

- Barbie Fashion Cam Doll with integrated digital camera and LCD screen
- Doll Stand
- USB Cable (pink)
- Rechargeable Battery (pre-installed)
- Instruction Manual (this document)



Image: The clear plastic doll stand with a silver base featuring the Barbie logo, and the pink USB cable.

Setup

1. Charging the Battery

The Barbie Fashion Cam comes with a pre-installed rechargeable battery. Before first use, fully charge the battery.

1. Connect the small end of the pink USB cable to the port located on the Barbie doll (usually on the back or side of the belt).
2. Connect the larger end of the USB cable to a powered USB port on a computer or a USB wall adapter (not included).
3. The LCD screen on Barbie's shirt will indicate charging status. Allow approximately 2-3 hours for a full charge.
4. Once fully charged, disconnect the USB cable.

2. Assembling the Doll Stand

The included doll stand helps Barbie stand upright for stable photo-taking and display.

1. Insert the clear plastic rod into the base of the stand until it clicks securely into place.
2. Place Barbie's waist into the adjustable clip at the top of the stand.

Operating the Barbie Fashion Cam

1. Taking Photos

The camera lens is discreetly located on the back of Barbie's neck/head. The controls are integrated into her belt.



Image: A close-up view of the back of the Barbie doll's head, highlighting the small, circular camera lens located at the base of her neck.



Image: A detailed view of Barbie's silver belt, featuring pink heart-shaped buttons that serve as the camera's controls.

1. To turn on the camera, locate the power button on Barbie's belt (refer to diagram in physical manual if available).
2. Point the camera lens (on the back of her head) towards your desired subject.
3. Press the shutter button on her belt to take a photo. The LCD screen on her shirt will briefly display the captured image.
4. The camera can store over 200 photos.

2. Viewing Photos and Applying Effects

Photos taken with the Barbie Fashion Cam can be viewed directly on the doll's shirt display and customized with various effects.

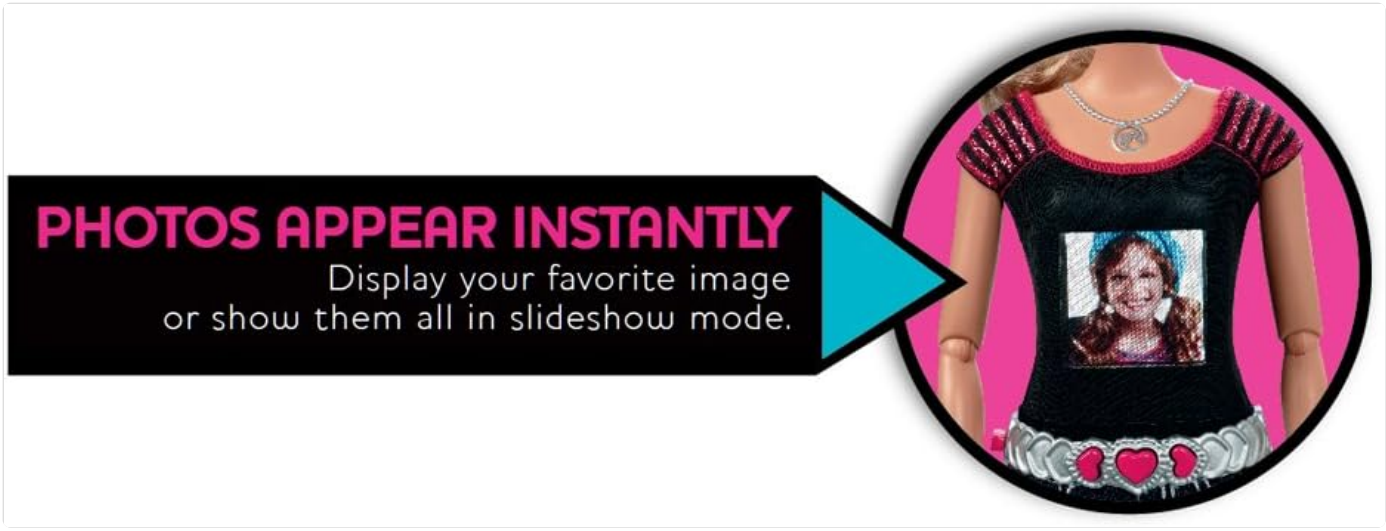


Image: The Barbie doll's black shirt with a square LCD screen on the front, currently displaying a photo of a young girl.

- Use the navigation buttons on Barbie's belt to scroll through captured images.
- The doll features over 30 pre-loaded photo effects and ready-to-wear graphics that can be applied to your photos directly on the LCD screen.
- Refer to the on-screen prompts and physical manual for specific button functions related to effects.

3. Connecting to a Computer

For advanced editing, saving, and managing your photos, connect the Barbie Fashion Cam to a computer.



Image: The Barbie Fashion Cam doll standing on its base, connected via its pink USB cable to a silver laptop, which displays a graphic interface for photo editing and design.

1. Ensure the Barbie Fashion Cam is turned on.
2. Connect the USB cable from the doll to an available USB port on your computer.
3. Your computer should recognize the device. Follow any on-screen prompts to install necessary drivers or software.
4. Access the photos as you would from a standard digital camera or external drive.

5. For additional design features and software, visit the official Barbie Photo Fashion website (URL may be found in the original packaging or online support).

Maintenance

Cleaning

- Wipe the doll and LCD screen with a soft, dry cloth.
- Do not use abrasive cleaners or immerse the doll in water.

Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Recharge the battery regularly, even if the doll is not in frequent use.

Storage

- Store the Barbie Fashion Cam in a cool, dry place away from direct sunlight.
- Keep the USB cable and doll stand together with the doll to prevent loss.

Troubleshooting

Problem	Possible Cause	Solution
Doll not turning on.	Battery is discharged.	Connect the doll to a USB power source using the provided cable and allow it to charge for at least 30 minutes before attempting to turn it on again.
Photos not appearing on screen.	Camera lens is obstructed or doll is not powered on.	Ensure the camera lens on the back of Barbie's head is clear. Verify the doll is turned on.
Computer not recognizing the doll.	Loose USB connection, faulty cable, or driver issue.	Ensure the USB cable is securely connected to both the doll and the computer. Try a different USB port. Restart your computer.
Images are blurry or poor quality.	Insufficient lighting, camera movement, or dirty lens.	Ensure adequate lighting. Hold the doll steady when taking photos. Gently clean the camera lens with a soft, dry cloth.

Specifications

Feature	Detail
Model Number	X7738
Camera Type	Integrated Digital Camera
Display	LCD Screen on doll's shirt
Storage Capacity	Holds 200+ photos

Feature	Detail
Photo Effects	30+ pre-loaded effects
Battery	Rechargeable (included)
Connectivity	USB
Material	Plastic
Dimensions	32.39 x 6.05 x 32.39 cm (approx. 12.75 x 2.38 x 12.75 inches)
Weight	471.74 g (approx. 1.04 lbs)
Recommended Age	6-12 years

Warranty Information

This product is covered by a limited warranty. Please refer to the warranty card included in the original packaging for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or replacement parts, please contact Barbie customer service. Contact information can typically be found on the product packaging or the official Barbie website. When contacting support, please have your product model number (X7738) and purchase date available.
You may also visit the official Barbie website for FAQs and additional resources:www.barbie.com

© 2024 Barbie. All rights reserved. Barbie and associated trademarks are owned by Mattel.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B006O6EIEI

More documents and user manuals: **https://manuals.plus/**