Fiskars 395640-1003

Fiskars Folding Saw and Pruner Set User Manual

Model: 395640-1003

Product Overview

The Fiskars Folding Saw and Pruner Set is designed for efficient and comfortable cutting of live, green growth and deadwood. This set includes a bypass pruner and a folding saw, both engineered for durability and ease of use in various gardening tasks.



Image: The Fiskars Folding Saw and Pruner Set, showing both the bypass pruner and the folding saw.

Key Features

- **Bypass Pruner:** Features a non-stick coated, hardened bypass steel pruning blade for reduced friction and clean cuts.
- **Folding Saw:** Equipped with a triple-grind saw blade that cuts on both the push and pull strokes for smooth, clean, and healthy cuts. The saw blade remains safely locked into position during use.
- **Comfortable Handles:** Both tools feature non-slip soft grip handles to reduce stress during prolonged use.
- **Corrosion-Resistant:** Designed to withstand exposure to the elements, ensuring longevity.

Setup

The Fiskars Folding Saw and Pruner Set comes pre-assembled and ready for immediate use. No complex setup is required.

Unpacking:

- Carefully remove the pruner and folding saw from their packaging.
- Inspect both tools for any signs of damage during transit. If any damage is observed, contact customer support.

Initial Inspection:

- Ensure the pruner blades open and close smoothly.
- For the folding saw, ensure the blade locks securely in both the open and closed positions.

Operating Instructions

Using the Bypass Pruner:



Image: Close-up of the Fiskars Bypass Pruner.

1. **Unlock:** If the pruner is locked, slide the locking mechanism to the open position.
2. **Position:** Place the branch or stem to be cut between the blades, ensuring it is as close to the pivot point as possible for maximum leverage.
3. **Cut:** Squeeze the handles firmly and smoothly until the cut is complete. Bypass pruners are ideal for cutting live, green stems and branches up to the recommended cutting capacity.
4. **Lock:** After use, clean the blades and slide the locking mechanism to the closed position for safe storage.

Using the Folding Saw:



Image: Close-up of the Fiskars Folding Saw.

1. **Open and Lock:** Unfold the saw blade until it clicks securely into the open position. Ensure the blade is fully locked before use.
2. **Position:** Place the saw blade on the branch or wood to be cut. The triple-grind teeth are designed to cut on both the push and pull strokes.
3. **Saw:** Apply moderate pressure and use a steady back-and-forth motion. Allow the saw teeth to do the work; excessive force is not necessary.
4. **Fold and Lock:** After use, carefully unlock the blade and fold it back into the handle. Ensure it is securely locked in the closed position for safety.

Safety Precaution: Always wear appropriate safety gear, such as gloves and eye protection, when using gardening tools. Keep tools out of reach of children.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your Fiskars tools.

Cleaning:

- After each use, wipe down the blades of both the pruner and saw with a damp cloth to remove sap, dirt, and debris.
- For stubborn residue, use a mild soap solution or a specialized tool cleaner. Rinse thoroughly and dry completely.

Lubrication:

- Periodically apply a light coat of lubricating oil (e.g., mineral oil or silicone spray) to the pivot points of the pruner and the saw blade to ensure smooth operation and prevent rust.

Sharpening:

- The pruner blade may require occasional sharpening to maintain its cutting edge. Use a sharpening stone or diamond file designed for garden tools. Sharpen only the beveled edge of the blade.
- The folding saw's triple-grind teeth are designed for long-lasting sharpness and typically do not require user sharpening. If the saw's performance significantly degrades, consider professional sharpening or blade replacement.

Storage:

- Store both tools in a dry place to prevent corrosion.
- Ensure the pruner is locked and the saw is folded and locked before storing.

Troubleshooting

Problem	Possible Cause	Solution
Pruner blades stick or are difficult to close/open.	Sap or debris buildup; lack of lubrication; loose pivot screw.	Clean blades thoroughly. Apply lubricating oil to the pivot point. Check and tighten the pivot screw if necessary.
Pruner makes ragged cuts or struggles with branches.	Dull blade; attempting to cut material too thick for the pruner.	Sharpen the pruner blade. Use the folding saw for thicker branches.
Folding saw blade does not lock securely.	Debris in locking mechanism; damaged locking mechanism.	Clean the locking mechanism. If damaged, discontinue use and contact customer support.
Saw cuts slowly or binds.	Resin buildup on blade; dull teeth; improper technique.	Clean the saw blade. Ensure you are using a steady push-pull motion. If teeth are dull, consider professional sharpening or replacement.
Rust appears on tools.	Improper storage; exposure to moisture without drying.	Clean off rust with a wire brush or fine sandpaper, then apply lubricating oil. Store tools in a dry environment.

Specifications

Brand: Fiskars

Model Number: 395640-1003

Style: Folding Saw & Pruner Set

Color: Multicolor

Item Weight: 1.06 Pounds (approximately 0.48 kg)

Product Dimensions: 1.13 x 7.5 x 12 inches (approximately 2.87 x 19.05 x 30.48 cm)

Blade Material: Alloy Steel

Pruner Blade Length: 5 Inches (approximately 12.7 cm)

Handle Material: Plastic

Hand Orientation: Ambidextrous

Country of Origin: China

UPC: 046561195649

Warranty & Support

Fiskars tools are designed for longevity and guaranteed to maintain exceptional performance season after season.

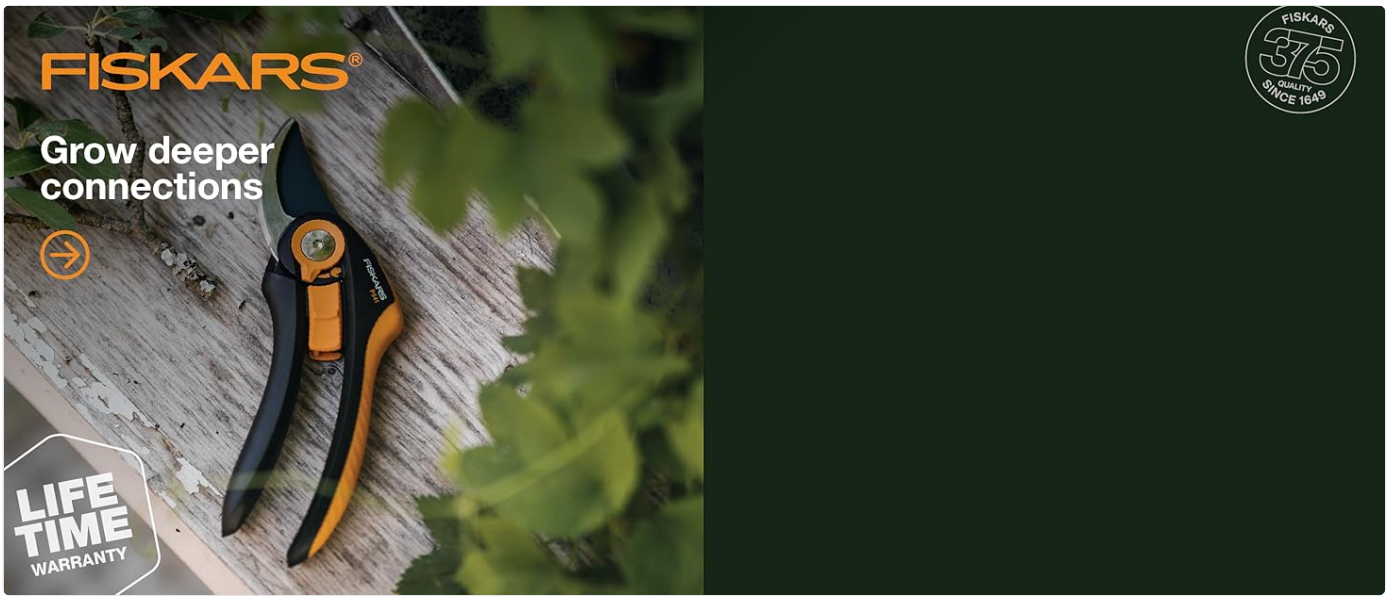


Image: Fiskars brand image highlighting "Grow deeper connections" and "Lifetime Warranty".

Fiskars is proud to include a Lifetime Warranty on this product. For detailed information regarding the warranty terms and conditions, please visit the official Fiskars website:

Fiskars Warranty Information

For further assistance, technical support, or to inquire about replacement parts, please refer to the contact information available on the official Fiskars website or your product packaging.

© 2025 Fiskars. All rights reserved.