## RemotesReplaced RC4492-01B

# RemotesReplaced Compatible Remote Control for Philips RC4492-01B User Manual

## Introduction

This manual provides instructions for the RemotesReplaced compatible remote control, model RC4492-01B. This remote is designed as a direct replacement for specific Philips television models, offering full functionality without the need for complex programming or code entry. Simply insert batteries, and the remote is ready for use.

## Setup

### 1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.




MENU
EXIT
SHIFT
1
2
3
4
5
6
7
8
9
SOURCE
0
-/--
GUIDE
SUB
SIZE
SETUP
TEXT
V
P
OK
V
P

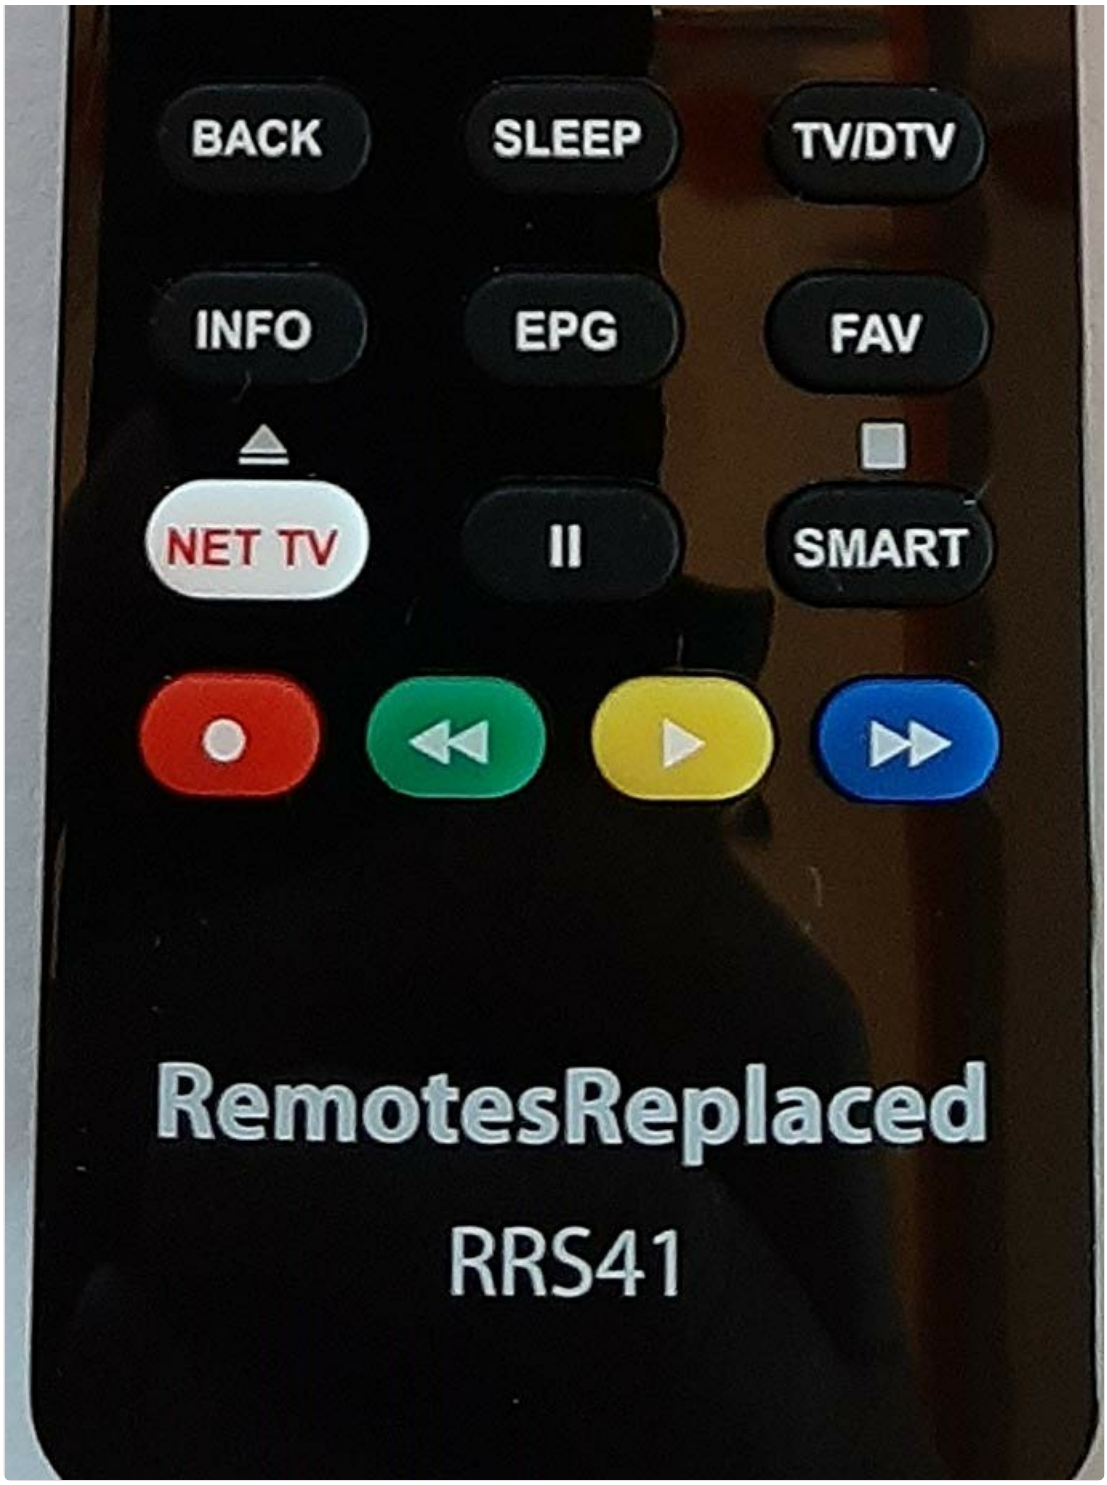



**Figure 1:** The RemotesReplaced compatible remote control. The battery compartment is located on the back of the device.

### 2. Initial Use

After installing the batteries, the remote control is immediately operational. Point the remote directly at your Philips television and begin using it. No additional setup or pairing is required.

## Operating Instructions

This remote control provides access to all standard functions of your compatible Philips television. Below are common button functions:

- **POWER:** Turns the television on or off.
- **NUMBER PAD (0-9):** Selects channels directly.

- **VOL +/-:** Increases or decreases the volume level.
- **CH +/-:** Changes the television channel up or down.
- **MUTE:** Silences or restores the television audio.
- **MENU:** Accesses the television's main menu.
- **INPUT/SOURCE:** Cycles through available input sources (e.g., HDMI 1, AV, TV).
- **NAVIGATION BUTTONS (Up, Down, Left, Right, OK/Enter):** Used to navigate menus and confirm selections.
- **EXIT:** Exits the current menu or on-screen display.
- **BACK:** Returns to the previous screen or menu.

*Note: Specific button labels and their exact functions may vary slightly depending on your television model.*

## Maintenance

### Cleaning

To clean the remote control, use a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace the batteries when the remote control's response becomes sluggish, the range decreases, or it stops functioning altogether. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries or different types of batteries.

## Troubleshooting

- **Remote not responding:**
  - Ensure the batteries are correctly installed with the proper polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote control and the television's infrared (IR) receiver.
  - Ensure you are within the operational range (up to 10 meters) and pointing the remote directly at the TV.
- **Limited range or intermittent response:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure there are no strong light sources (like direct sunlight or certain fluorescent lights) interfering with the IR signal.
- **Certain functions not working:**
  - While this remote is designed for full functionality, some advanced or unique features of specific Philips TV models might not be directly supported if they require a proprietary signal.
  - Refer to your television's original manual to confirm if the function requires a specific button not present on this replacement remote.

## Specifications

- **Brand:** RemotesReplaced
- **Model Number:** RC4492-01B

- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Television (specifically Philips models compatible with RC4492-01B)
- **Maximum Range:** 10 Meters (approximately 33 feet)
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** 120 Grams
- **Manufacturer:** Linkwebb

## Warranty Information

This RemotesReplaced product is covered by a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote control functions as intended under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

## Support

For any questions, technical assistance, or warranty claims regarding your RemotesReplaced compatible remote control, please contact the retailer from whom you purchased the product. You may also refer to the manufacturer's official website for additional support resources, if available.