CRESTWARE TIMDT

CRESTWARE Digital Timer (Model TIMDT) Instruction Manual

For Commercial Kitchen Use

1. Introduction

This manual provides comprehensive instructions for the proper setup, operation, maintenance, and troubleshooting of your CRESTWARE Digital Timer, Model TIMDT. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

The CRESTWARE Digital Timer is designed for professional use in commercial kitchen environments, offering reliable and accurate timing for various culinary tasks.

2. Product Overview

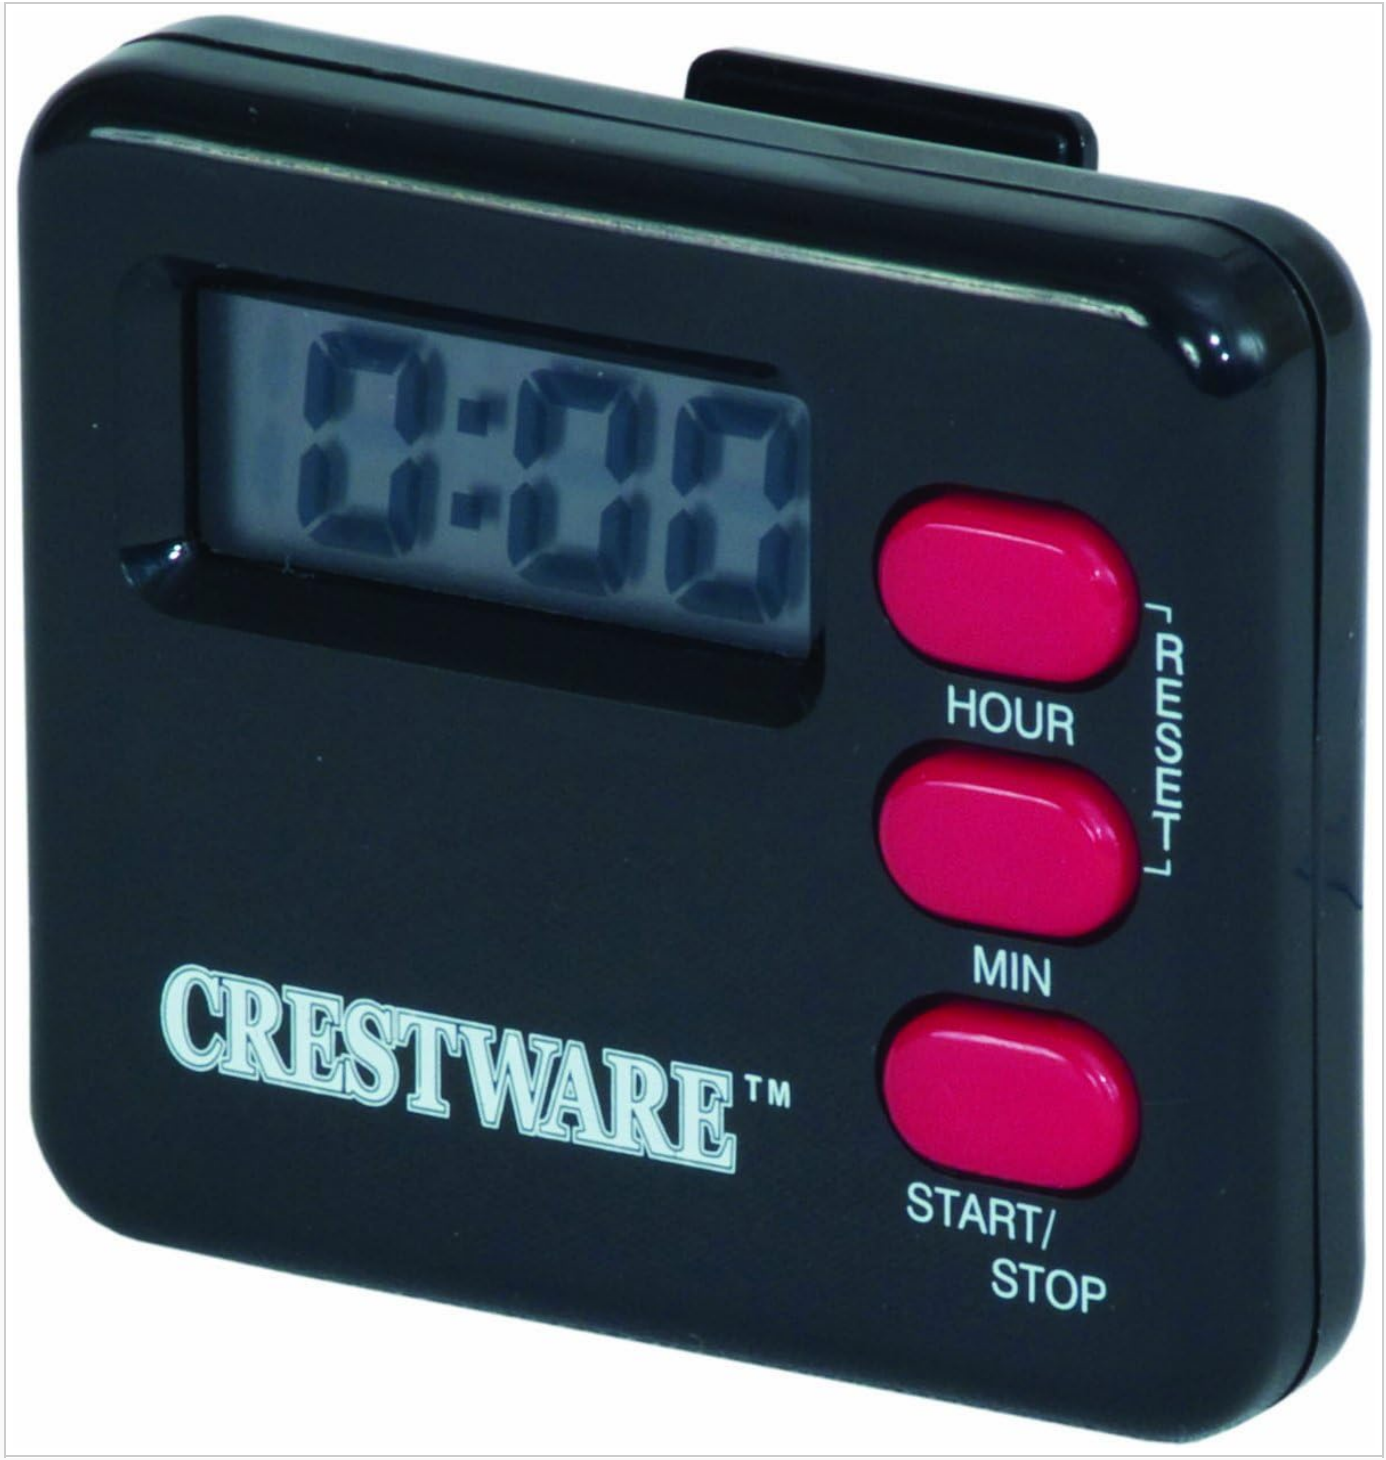


Figure 1: Front view of the CRESTWARE Digital Timer. The timer features a clear digital display, three red control buttons (HOUR, MIN, START/STOP), and a 'RESET' label indicating a combined function. The CRESTWARE logo is visible at the bottom left.

The CRESTWARE Digital Timer (Model TIMDT) is a compact and durable timing device. It features a clear digital display and intuitive controls for setting and managing countdown or count-up operations. Its robust construction is suitable for demanding commercial settings.

3. Setup

3.1 Unpacking

1. Carefully remove the timer from its packaging.
2. Inspect the timer for any signs of damage. If damaged, do not use and contact customer support.
3. Retain packaging materials for future storage or transport.

3.2 Battery Installation

The timer requires one AAA battery (not included) for operation.

1. Locate the battery compartment cover on the back of the timer.
2. Slide or unclip the cover to open.
3. Insert one AAA battery, ensuring correct polarity (+ and - terminals match the markings inside the compartment).
4. Replace the battery compartment cover securely.

3.3 Initial Power-On

Upon successful battery installation, the digital display should illuminate, typically showing "0:00" or a similar default time. If the display does not light up, check battery polarity or replace with a fresh battery.

4. Operating Instructions

4.1 Setting the Timer (Countdown)

1. Ensure the timer display shows "0:00". If not, press the **RESET** function (often combined with HOUR/MIN button press, or a small button on the back) to clear any previous settings.
2. Press the **HOUR** button repeatedly to set the desired hours.
3. Press the **MIN** button repeatedly to set the desired minutes.
4. Once the desired time is set, press the **START/STOP** button to begin the countdown. The display will show the time decreasing.

4.2 Starting/Stopping the Timer

- To start a countdown or count-up, press the **START/STOP** button.
- To pause the timer during operation, press the **START/STOP** button again. The display will flash or hold the current time.
- To resume, press **START/STOP** once more.

4.3 Resetting the Timer

To clear the current time setting and return the display to "0:00", press and hold the **HOUR** and **MIN** buttons simultaneously, or press the dedicated **RESET** button if available (refer to the product image, the 'RESET' label is vertically aligned next to the HOUR and MIN buttons, suggesting a combined action or a small recessed button).

4.4 Count-Up Function

To use the timer as a stopwatch (count-up function):

1. Ensure the display shows "0:00" (reset if necessary).
2. Press the **START/STOP** button. The timer will begin counting upwards from "0:00".
3. Press **START/STOP** to pause, and again to resume.
4. Press the **RESET** function to clear the count-up time.

4.5 Alarm Function

When the countdown reaches "0:00", the timer will emit an audible alarm. Press any button to silence the alarm.

5. Maintenance

5.1 Cleaning

- Wipe the timer with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or immerse the timer in water.
- Ensure the timer is completely dry before storage or next use.

5.2 Battery Replacement

When the display becomes dim or the timer functions erratically, it is time to replace the battery. Follow the steps in Section 3.2 for battery installation. Dispose of used batteries according to local regulations.

5.3 Storage

Store the timer in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, it is recommended to remove the battery to prevent leakage.

6. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Dead or improperly installed battery.	Replace battery, ensuring correct polarity.
Timer does not start/stop.	"START/STOP" button not pressed firmly or timer is in an unresponsive state.	Press "START/STOP" button firmly. Try resetting the timer.
Alarm does not sound.	Low battery or internal malfunction.	Replace battery. If problem persists, contact customer support.
Buttons are unresponsive.	Low battery or internal malfunction.	Replace battery. Try resetting the timer. If problem persists, contact customer support.

7. Specifications

- **Model:** TIMDT
- **Brand:** CRESTWARE
- **Material:** Plastic
- **Color:** Silver
- **Product Dimensions:** 15 x 8 x 10.5 inches
- **Item Weight:** 10 Pounds
- **Power Source:** 1x AAA Battery (not included)
- **UPC:** 710277620428

8. Warranty and Support

CRESTWARE products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided on your product packaging or visit the official CRESTWARE website. Please have your model number (TIMDT) and purchase date available when contacting support.

© 2023 CRESTWARE. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question