Imation PX6683

Imation Memorex PX6683 Wireless Bluetooth Speaker User Manual

Model: PX6683

1. INTRODUCTION

Thank you for purchasing the Imation Memorex PX6683 Wireless Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read these instructions carefully before use.

2. PACKAGE CONTENTS

- Imation Memorex PX6683 Wireless Bluetooth Speaker
- Power Adapter (may vary by region)
- Audio Cable (3.5mm auxiliary cable)
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Memorex PX6683 speaker.

Figure 3.1: Front view of the Memorex PX6683 speaker. The front features a large speaker grille and a central control knob with the 'memorex' logo below it.

Figure 3.2: Angled view of the Memorex PX6683 speaker. This perspective highlights the speaker's rectangular shape with rounded edges, the front grille, and the central control knob.

4. SETUP

4.1 Power Connection

1. Locate the power input port on the back or side of the speaker.
2. Connect the provided power adapter to the speaker.
3. Plug the power adapter into a standard electrical outlet.
4. The speaker is now powered on or in standby mode.

4.2 Bluetooth Pairing

The Memorex PX6683 supports A2DP Bluetooth wireless technology for audio streaming.

1. Ensure the speaker is powered on.
2. Activate Bluetooth on your audio device (smartphone, tablet, computer).
3. Search for available Bluetooth devices. The speaker should appear as **"Memorex PX6683"** or similar.
4. Select the speaker from the list to initiate pairing.
5. Once paired, the speaker will indicate a successful connection (e.g., an audible tone or LED indicator).

4.3 Line-in Connection (Auxiliary Input)

For devices without Bluetooth, use the universal line-in jack.

1. Connect one end of the 3.5mm audio cable to the 'Line In' or 'AUX' port on the speaker.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output of your device.
3. The speaker will automatically switch to auxiliary input mode or may require manual selection via a mode button (if present).

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Refer to the power button or control knob on your speaker. Typically, a long press or rotation will power the unit on or off.

5.2 Volume Control

Adjust the audio volume using the central control knob on the front of the speaker. Rotate clockwise to increase volume and counter-clockwise to decrease volume.

5.3 Audio Playback

Once connected via Bluetooth or Line-in, begin playing audio from your source device. The sound will be output through the speaker.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish or internal components.

6.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Disconnect the power adapter.

7. TROUBLESHOOTING

- **No Power:** Ensure the power adapter is securely connected to both the speaker and a working electrical outlet.
- **No Sound:**
  - Check the volume level on both the speaker and your audio source device.
  - If using Bluetooth, ensure the speaker is successfully paired and connected.
  - If using Line-in, ensure the audio cable is fully inserted into both devices.
- **Bluetooth Pairing Issues:**
  - Ensure the speaker is in pairing mode (if applicable).
  - Turn off and on Bluetooth on your source device.
  - Move your device closer to the speaker.
  - Remove "Memorex PX6683" from your device's Bluetooth list and attempt to re-pair.

8. SPECIFICATIONS

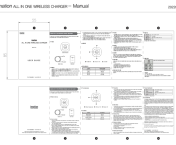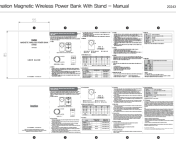Figure 8.1: Approximate dimensions of the Memorex PX6683 speaker.

Feature	Specification

Feature	Specification
Brand	Imation
Model	PX6683
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Line-in)
Bluetooth Support	A2DP
Audio Output Mode	Stereo
Speaker Maximum Output Power	10 Watts
Mounting Type	Freestanding
Dimensions (Approximate)	11.25" (W) x 8.75" (H) x 4.13" (D)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Imation website. Keep your proof of purchase for warranty claims.

Related Documents - PX6683

	Imation 3in1 USB-C Multiport Hub: User Manual & Specifications User manual for the Imation 3in1 USB-C Multiport Hub, detailing its specifications, product composition, instructions for use, and important notices. Features include USB-C PD 100W, 4K/60Hz HDMI, and USB-A 3.2 Gen 1 connectivity.
	imation All In One Wireless Charger - User Manual and Quick Start Guide Comprehensive user guide and quick start instructions for the imation All In One Wireless Charger (IMAW100), including product specifications, safety precautions, warranty information, and FCC compliance.
	imation Magnetic Wireless Power Bank With Stand - User Manual Official user manual for the imation Magnetic Wireless Power Bank With Stand (IMWP200M). Learn about its features, components, how to connect, specifications, precautions, and warranty information. Compatible with iPhone 12 and later models.
	Memorex EMI47103PWHT Clock Radio User Manual and Specifications Detailed user manual and specifications for the Memorex EMI47103PWHT clock radio, covering safety precautions, operation, troubleshooting, and technical details. Includes instructions for iPod/iPhone integration and FM radio.

[Memorex MP8806 Portable CD Player with AM/FM Stereo Radio User's Guide](#)
Comprehensive user's guide for the Memorex MP8806 portable CD player with AM/FM stereo radio, covering setup, operation, safety instructions, maintenance, troubleshooting, and specifications.

[Memorex SingStand 2 MKS-SS2 User Guide: Setup, Operation, and Specifications](#)
Comprehensive user guide for the Memorex SingStand 2 (MKS-SS2) karaoke system. Learn how to assemble, connect, operate, and troubleshoot your device. Includes safety instructions, component descriptions, and technical specifications.